


# Grant Aeron<sup>3</sup>

## Air to Water High Efficiency Heat Pump Range

### Installation and Servicing Instructions

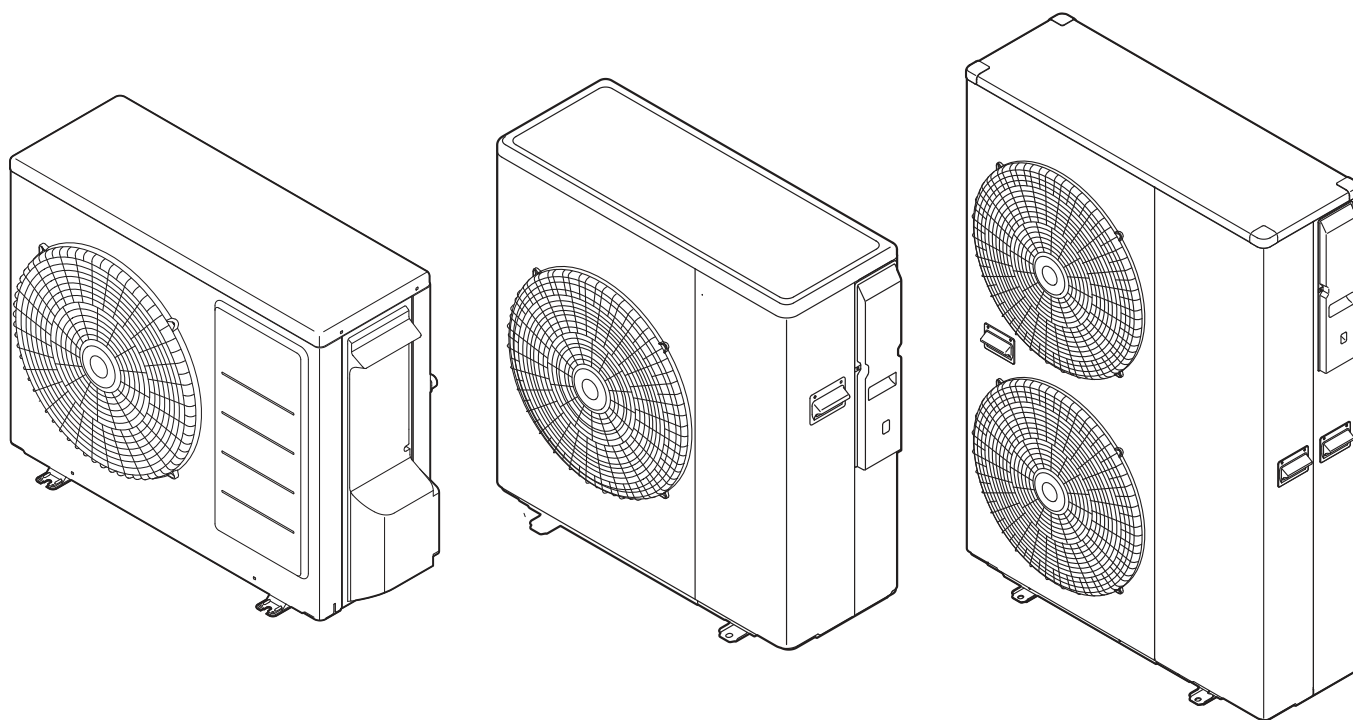

## IMPORTANT NOTE FOR INSTALLERS

These instructions are intended to guide installers on the installation, commissioning and servicing of the Grant Aerona<sup>3</sup> heat pump. After installing the heat pump, leave these instructions with the user.

A user handbook is available to guide users in the operation of the heat pump.

## SPECIAL TEXT FORMATS

The following special text formats are used in these instructions for the purposes listed below:

### ! WARNING !

Warning of possible human injury as a consequence of not following the instructions in the warning.

### ! CAUTION !

Caution concerning likely damage to equipment or tools as a consequence of not following the instructions in the caution.

### ! NOTE !

Used for emphasis or information not directly concerned with the surrounding text but of importance to the reader.

## SERVICING

The heat pump should be serviced at least every twelve months and the details entered in the service Log in the user handbook.

## PRODUCT CODES COVERED

These instructions cover the following product codes:

Product code
HPID6R32 - 6kW
HPID10R32 - 10kW
HPID13R32 - 13kW
HPID17R32 - 17kW
Output at 7°C air and 35°C flow temperature

**AIR TO WATER HEAT PUMP  
GRANT AERONA<sup>3</sup> HPID6R32**

Power Supply	230V
Phase	1ph
Frequency	50Hz
Max Current	11.2A
Refrigerant	R32
Mass of Refrigerant	0.80kg
Weight (dry)	51kg
Heating Capacity*	6.24kW
COP*	3.04
Height	675mm
Length	825mm
Depth	300mm
Max. Pressure Discharge	4.2MPa
Max. Pressure Suction	1.8MPa

\*Air 7°C / Water 55°C 

SN : 406915 - 8820 - 6000000

Grant Engineering (UK) Ltd  
Innovation House, Highgate Road, Dalrymple, Strathclyde, G10 2DU  
T: +44 (0)1380 736920  
Grant Engineering (USA) LLC  
Columbia, SC, 29912-2100, USA, Phone: 803-881-8811  
www.grantuk.com

R32 Refrigerant 20855511






## IMPORTANT NOTE FOR INSTALLERS

The data label gives you very important information about the installed heat pump. Do not remove this label from the heat pump under any circumstances.

The year of manufacture is contained within the serial number (SN).

The last two digits of the middle set of four numbers (eg. 8820) indicates the year of manufacture. In this example, the year is 2020.

## Power Quality Information

HPID6R32	Complies with the Technical requirements of BS EN/IEC 61000-3-2
	Complies with the Technical requirements of BS EN/IEC 61000-3-3
HPID10R32	Complies with BS EN/IEC 61000-3-11 & BS EN/IEC 61000-3-12
	Complies with the technical requirements of BS EN/IEC 61000-3-2
	Complies with the technical requirements of BS EN/IEC 61000-3-3
HPID13R32	Complies with BS EN/IEC 61000-3-11 & BS EN/IEC 61000-3-12
HPID17R32	Complies with BS EN/IEC 61000-3-11 & BS EN/IEC 61000-3-12



## GRANT ENGINEERING (UK) LIMITED

Tel: +44 (0)1380 736920 Fax: +44 (0)1380 736991  
Email: info@grantuk.com www.grantuk.com

This manual is accurate at the date of printing but will be superseded and should be disregarded if specifications and/or appearances are changed in the interests of continued product improvement. However, no responsibility of any kind for any injury, death, loss, damage or delay however caused resulting from the use of this manual can be accepted by Grant Engineering (UK) Limited, the author or others involved in its publication.

All goods sold are subject to our official Conditions of Sale, a copy of which may be obtained on application.  
© Grant Engineering (UK) Limited. No part of this manual may be reproduced by any means without prior written consent.

# CONTENTS

<b>1</b>	<b>INTRODUCTION</b>	<b>6</b>	<b>8</b>	<b>OPERATION</b>	<b>33</b>
1.1	General	6	8.1	Heat Pump Operation	33
1.2	Main Components	6	8.2	Weather Compensation	35
1.3	Planning Permission	6	8.3	Water Pump Management	36
1.4	DNO Application	6	8.4	Frost Protection	39
1.5	Important Advice	7	8.5	ON/OFF DHW Production Remote Contact	41
1.6	Product Contents	7	8.6	ON/OFF Heating Remote Contact	42
1.7	Installation Accessories	7	8.7	Night Mode	43
1.8	Control Parameters	7	8.8	Low Tariff	44
1.9	Heat Pump Components	8			
<b>2</b>	<b>TECHNICAL DATA</b>	<b>9</b>	<b>9</b>	<b>COMMISSIONING</b>	<b>45</b>
2.1	Heat Pump Technical Data	9	9.1	System Setup	45
2.2	Mains Supply Cable	10	9.2	Setting the Day and Time	45
2.3	Base Tray Heater	10	9.3	Access for Parameter Settings	46
2.4	Heat Pump Dimensions	10	9.4	Accessing the Parameter Setting Menu (User level)	46
2.5	Remote Controller Dimensions	11	9.5	Accessing the Parameter Setting Menu (Installer level)	46
<b>3</b>	<b>INSTALLATION INFORMATION</b>	<b>12</b>	9.6	Temperature Control - DHW function	46
3.1	Introduction	12	9.7	Parameters Input/Output	47
3.2	Heating System Design Criteria	12	9.8	Remote Controller Back Light Display Parameters	47
3.3	Regulations	12	9.9	Weather Compensation	48
3.4	Heat Pump Location	13	9.10	Frost Protection Function Setting	48
3.5	Preparation for Installation	13	9.11	Pump Operation and Air Bleeding from Heating System	48
3.6	Wall Mounted Installations	14	9.12	Pump Output Setting	48
3.7	Installing the Heat Pump	14	9.13	Coastal Installations	48
3.8	Metering requirements	15	9.14	Flow Regulator	48
3.9	Volumiser Tanks	15	9.15	Balancing the Primary Circuit	49
3.10	Coastal Installations	15			
3.11	Hydraulic Diagrams	15	<b>10</b>	<b>SERVICING</b>	<b>50</b>
3.12	Before you Commission	16	10.1	General	50
3.13	Completion	17	10.2	Air Inlet and Outlet	50
3.14	Installation Checklist	17	10.3	Condensate Disposal	50
<b>4</b>	<b>SEALED SYSTEMS</b>	<b>18</b>	10.4	Heating System Connections	50
4.1	Sealed System Requirements	18	10.5	Heat Pump Controls	50
4.2	Filling the Sealed System	19	10.6	Refrigerant	50
4.3	Pressure Relief (Safety) Valve Operation	19	10.7	Monitor Display Function	51
<b>5</b>	<b>DOMESTIC HOT WATER</b>	<b>20</b>	<b>11</b>	<b>FAULT FINDING</b>	<b>52</b>
5.1	Temperature Control	20	11.1	Error Code Display	52
5.2	Quick Recovery Cylinders	20	11.2	Error History Display	52
5.3	Legionella	21	11.3	Reset Error Code Display	52
5.4	Grant 7-Day Immersion Programmer	21	11.4	Error Codes	53
<b>6</b>	<b>ELECTRICAL</b>	<b>24</b>	11.5	Table of Controller PCB and Terminal PCB Alarms	56
6.1	Wiring Centre	24	11.6	Error Codes and PCB Alarm Figures and Tables	57
6.2	Terminal PCB Input/Output	25	<b>12</b>	<b>SPARE PARTS</b>	<b>60</b>
6.3	Power Supply	25	12.1	Exploded Diagram - HPID6R32	60
6.4	Tightening Torques	27	12.2	Spare Parts List - HPID6R32	61
6.5	Solar Thermal	27	12.3	Exploded Diagram - HPID10R32	62
6.6	Connection of Heating System Controls	27	12.4	Spare Parts List - HPID10R32	63
6.7	Connection of Remote Controller	27	12.5	Exploded Diagram - HPID13R32	64
6.8	Grant Interface Relay Box	27	12.6	Spare Parts List - HPID13R32	65
6.9	Grant EP001 Wiring Centre	27	12.7	Exploded Diagram - HPID17R32	66
6.10	Hot Water Priority Relay	27	12.8	Spare Parts List - HPID17R32	67
6.11	Wiring Diagrams	27			
6.12	System Control Wiring Diagram	28	<b>13</b>	<b>DECLARATIONS OF CONFORMITY</b>	<b>68</b>
<b>7</b>	<b>REMOTE CONTROLLER</b>	<b>29</b>	13.1	EC Declaration of Conformity - HPID6R32	68
7.1	Remote Controller	29	13.2	EC Declaration of Conformity - HPID10R32	69
7.2	Installation Requirements	29	13.3	EC Declaration of Conformity - HPID13R32	70
7.3	Installing the Remote Controller	29	13.4	EC Declaration of Conformity - HPID17R32	71
7.4	Connecting the Remote Controller to the Heat Pump	30	<b>14</b>	<b>HEALTH AND SAFETY INFORMATION</b>	<b>73</b>
7.5	Buttons	31	14.1	General	73
7.6	Display Panel	32	14.2	Refrigerant (R32)	73

# CONTENTS

<b>15 DISPOSAL AND RECYCLING</b>	<b>73</b>
<b>16 PRODUCT FICHE</b>	<b>74</b>
16.1 Product Fiche - HPID6R32	74
16.2 Product Fiche - HPID10R32	76
16.3 Product Fiche - HPID13R32	78
16.4 Product Fiche - HPID17R32	80
<b>17 GUARANTEE</b>	<b>82</b>
<b>APPENDIX A - INSTALLATION PACK A CONTROL SYSTEM SCHEMATICS</b>	<b>84</b>
<b>APPENDIX B - INSTALLATION PACK B CONTROL SYSTEM SCHEMATICS</b>	<b>86</b>
<b>APPENDIX C - INSTALLATION PACK C CONTROL SYSTEM SCHEMATICS</b>	<b>88</b>
<b>APPENDIX D - PARAMETERS LIST</b>	<b>91</b>
<b>APPENDIX E - WIRING DIAGRAMS</b>	<b>94</b>
<b>APPENDIX F - COMMISSIONING - PARAMETERS RECORD</b>	<b>97</b>
<b>NOTES</b>	<b>99</b>

Page intentionally left blank.

# 1 Introduction

## 1.1 GENERAL

The Grant Aeron<sup>3</sup> range consists of four compact, lightweight, MCS approved, monobloc, air-to-water, inverter driven, single-phase air source heat pumps working with R32 refrigerant.

It is important that these installation and servicing instructions are followed to ensure correct installation and operation. Failure to do so may result in poor performance.

These instructions do not replace the installation or users manuals for any additional components used in the design of your system e.g. cylinders, motorised valves, programmers, solar thermal devices, buffers, etc.

**These instructions must be left with the product for future reference.**

## 1.2 MAIN COMPONENTS

Each model incorporates the following main components:

- **DC inverter** - this responds rapidly to changing conditions to provide the necessary output to meet heating demands by varying the speed and output of the compressor, fan and circulating pump. This reduces the on/off times of the compressor, keeping the water temperature constant during operation reducing the electricity consumption.
- **Compressor** - a high-efficiency DC twin-rotary compressor to provide smooth performance and quiet operation.
- **Plate heat exchanger (condenser)** - the high-efficiency plate heat exchanger is used to transfer heat to the heating system primary circuit.
- **Fan** - a high-efficiency DC fan motor is used for smooth and quiet operation. A single fan is fitted to the HPID6R32 (5 blade) and HPID10R32 (3 blade) units. Two fans (3 blade) are fitted to the HPID13R32 and HPID17R32 units.
- **Circulating pump** - high-efficiency DC pump speed controlled from the ASHP control PCB.
- **Base tray heater** - factory fitted electric heater prevents condensate in the base of the heat pump from freezing. When the ambient temperature reaches 2.5°C, the base tray heater turns on and at 5.5°C turns off ( $\Delta T$  of 3k). This cannot be adjusted or turned off. Refer to Section 2.3.
- **Pressure relief valve** - a 3 bar pressure relief valve is factory fitted.
- **Air purge valve (automatic air vent)** - factory fitted to assist in the removal of air from the heating primary circuit of the heat pump.

## 1.3 PLANNING PERMISSION

The installation of a Grant Aeron<sup>3</sup> heat pump on domestic premises may be considered to be permitted development, not needing an application for planning permission, provided ALL the limits and conditions listed on the Planning Portal website are met.

For further information, visit [www.planningportal.gov.uk](http://www.planningportal.gov.uk).

## 1.4 DNO APPLICATION

Under all circumstances there is a requirement to inform the Distribution Network Operator (DNO) of the installation of a heat pump. This will be in the form of either an application or a notification to the DNO.

Notification is the process whereby if the proposed addition/alteration is assessed by the installer to be within the existing rating of the supply equipment and the maximum demand (MD) is  $\leq 60A$ , the heat pump can be installed and the DNO notified retrospectively (i.e. within 28 days). This option is only possible for the Grant Aeron<sup>3</sup> HPID6R32.

For all other units an application must be made to the DNO before connecting the heat pump(s) to the mains electrical supply.

The time to get permission from the local DNO will vary and can take up to four weeks, so it is essential to submit the application at the earliest possible date. Please note that the cost of any required changes to the electrical supply network may be rechargeable to the homeowner in question.

Further details on application/notification process can be found at <https://www.energynetworks.org/electricity/futures/electric-vehicles-and-heat-pumps.html>

The same forms are used for either notification or application and for the Grant Aeron<sup>3</sup> ASHP can be downloaded from the Grant UK website ([www.grantuk.com](http://www.grantuk.com)). These must be completed by the installer or electrician and then submitted to the correct DNO for the area in question.

There are six DNOs operating the electrical distribution network throughout England, Scotland and Wales and the application must be made to the DNO covering the area in which the installation is situated.

To identify the DNO concerned visit the Energy Networks Association (ENA) website at [www.energynetworks.org/info/faqs/who-is-my-network-operator.html](http://www.energynetworks.org/info/faqs/who-is-my-network-operator.html) or use the Meter Point Administration Number (MPAN) on the electricity meter fitted in the property.

## 1.5 IMPORTANT ADVICE

1. It is essential that the full layout of the system is understood before the installation of any component is undertaken. If you are in any doubt, please stop and seek advice from a qualified heating engineer or from Grant UK. Please note that Grant UK will not be able to offer specific advice about your system unless we designed it. In this case, we will always refer you to seek the advice of a qualified system designer.
2. The heat pump must be installed and commissioned in accordance with these installation and servicing instructions. Deviations of any kind will invalidate the guarantee and may cause an unsafe situation to occur. Please seek advice from Grant UK if any of these user, installation and servicing instructions cannot be followed for whatever reason.
3. The heat pump contains high pressures and high temperatures during normal working conditions. Care must be taken when accessing the internal workings of the heat pump.
4. The heat pump contains an electrically driven fan which rotates at high speed. Disconnect the heat pump from the electrical supply before removing the top cover.

## 1.6 PRODUCT CONTENTS

The Aerona<sup>3</sup> comes supplied on a single pallet. The following items are included:

**Table 1-1:** Product Contents

	HPID6R32	HPID10R32	HPID13R32	HPID17R32
Aerona <sup>3</sup> heat pump 6kW	1			
Aerona <sup>3</sup> heat pump 10kW		1		
Aerona <sup>3</sup> heat pump 13kW			1	
Aerona <sup>3</sup> heat pump 17kW				1
Condensate drain elbow	1	1	1	1
Anti-vibration shoes	4			
¾" BSP x 22 mm flexible hose c/w washer	2			
1" BSP x 28 mm flexible hose c/w washer		2	2	2
1" nipple			2	2
1" x 1¼" reducing socket			2	2
22 mm isolating valve	2			
28 mm isolating valve		2	2	2
Remote controller	1	1	1	1
Remote controller cable (length: 8 metres)	1	1	1	1
DN20 - 42 Flow regulator	1	1	1	
DN20 - 70 Flow regulator				1
Installation and servicing instructions	1	1	1	1
User instructions	1	1	1	1

## 1.7 INSTALLATION ACCESSORIES

The following are available from Grant UK:

**Table 1-2:** Installation accessories

Product code	Description
HPIDFOOT/KIT2	Anti-vibration mounts (2 x 600mm and fixing kit)
HPIDINSU/KIT	Through wall insulation kit (22 - 28mm flexible hoses)
HPIDSYSLHKIT	Grant System Combined Volumiser/Low Loss Header
HPIDVOL30EXT	30 litre External Volumiser with 3kW backup Immersion Heater
HPIDR32PACK1	Grant Aerona <sup>3</sup> Installation Pack A
HPIDR32PACK2	Grant Aerona <sup>3</sup> Installation Pack B
HPIDR32PACK3	Grant Aerona <sup>3</sup> Installation Pack C



## 1.8 CONTROL PARAMETERS

All parameters are listed sequentially in Appendix D.

# 1.9 HEAT PUMP COMPONENTS



## HPID6R32

Air inlet is located in the left or in the back

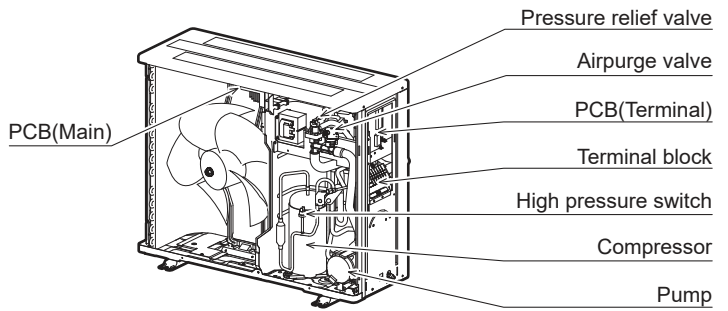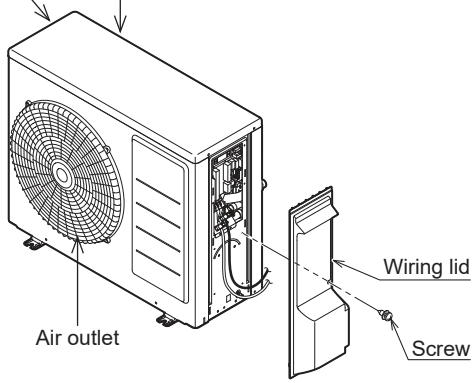


## HPID10R32

Air inlet is located in the left or in the back

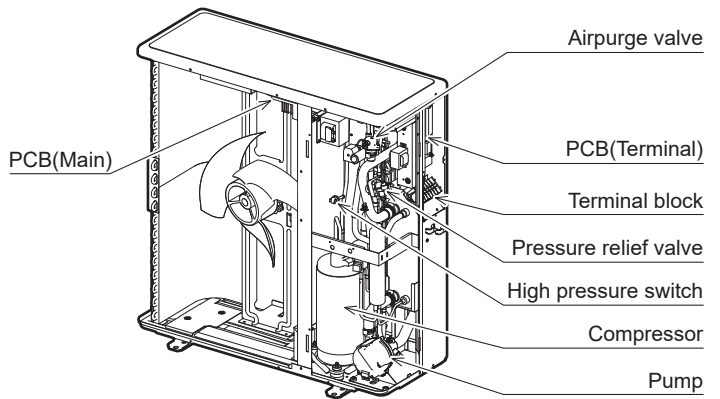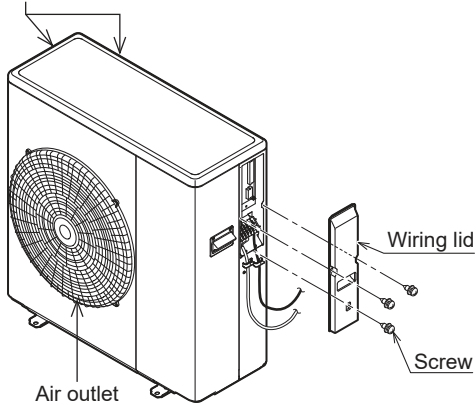

## HPID13R32 & HPID17R32

Air inlet is located in the left or in the back

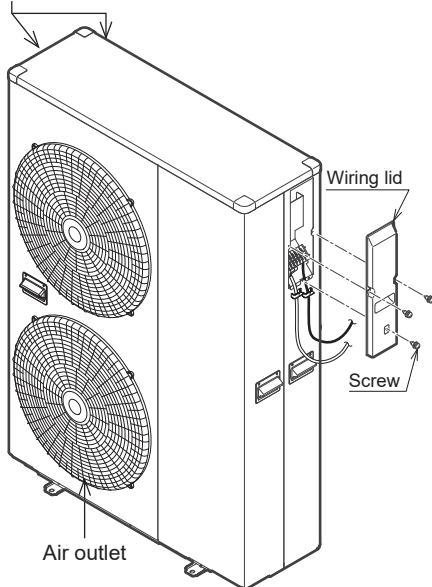

## HPID13R32

## HPID17R32

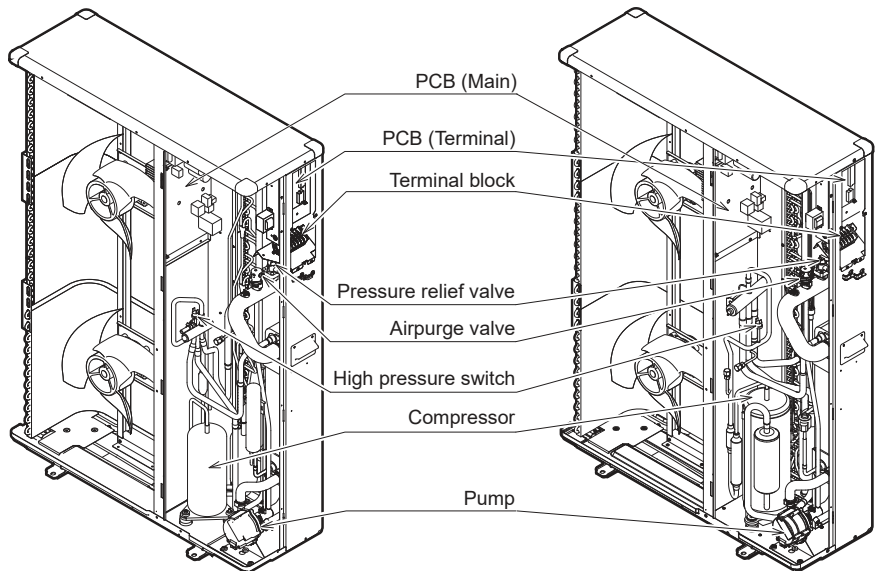


Figure 1-1: Main components - all models



## 2 Technical Data

### 2.1 HEAT PUMP TECHNICAL DATA

**Table 2-1:** Technical data

	Unit	Model			
		HPID6R32	HPID10R32	HPID13R32	HPID17R32
Heating capacity (BS EN 14511 - air: 7°C / water: 35°C)	kW	6.92	11.1	13.6	18.0
COP (BS EN 14511 - air: 7°C / water: 35°C)		4.91	5.28	5.25	4.79
SCOP (average climate conditions) - 35°C		4.61	5.20	5.40	4.54
Heating capacity (BS EN 14511 - air: 7°C / water: 55°C)	kW	6.24	10.5	11.4	15.3
COP (BS EN 14511 - air: 7°C / water: 55°C)		3.04	3.12	3.23	3.15
SCOP - average climate conditions (BS EN 14825 - water: 55°C)		3.29	3.47	3.72	3.57
Power supply		~230V 1ph 50Hz			
Effective power input (BS EN 14511 - air: 7°C / water: 35°C)	kW	1.41	2.10	2.59	3.77
Effective power input (BS EN 14511 - air: 7°C / water: 55°C)	kW	2.05	3.36	3.53	4.87
Mechanical protection		IPX4			
Compressor		DC twin rotary - inverter driven			
Pressure (maximum)	MPa	4.2			
Refrigerant		R32			
Mass of R32	kg	0.80	1.55	2.20	2.80
Circulating pump	m head	10	6	12	12
Rated air flow (BS EN 14511 - air: 7°C / water: 35°)	m³/h	2,082	2,664	4,464	4,464
Rated air flow (BS EN 14511 - air: 7°C / water: 55°)	m³/h	2,082	2,664	4,664	4,464
Power input of fan (BS EN 14511 - air: 7°C / water: 35°)	kW	-	-	-	-
Power input of fan (BS EN 14511 - air: 7°C / water: 55°)	kW	-	-	-	-
Power input of circulating pump (BS EN 14511 - air: 7°C / water: 35°)	kW	-	-	-	-
Power input of circulating pump (BS EN 14511 - air: 7°C / water: 55°)	kW	-	-	-	-
Flow rate (minimum)	litres/min	5	10	15	15
Rated flow rate (BS EN 14511 - air: 7°C / water: 35°)	litres/min	20.22	32.16	40.68	50.88
Rated flow rate (BS EN 14511 - air: 7°C / water: 55°)	litres/min	11.34	19.26	20.76	27.90
Outdoor temperature	°C	-20 to 43			
Maximum inlet water temperature (not operating)	°C	70			
Water pressure (system)	MPa (bar)	0.1 to 0.3 (1 to 3 bar)			
Sound power level at 1 metre (external)	dB(A)	65.2	64	60.8	61.6
Sound pressure level at 1 metre (external) (Q=1)	dB(A)	54.2	53	49.8	50.6
Water connections	BSPF	¾"	1"	1¼"	1¼"
Weight (empty)	kg	51	70	99	118
Weight (full)	kg	52.8	71.8	101	120
Water content	litres	1.8	1.8	2.0	2.0
Heat pump casing volume	m³	0.167	0.247	0.468	0.468
ErP rating (low temperature: 35°C flow) - heating		A++ (A+++ from September 2019)			
ErP rating (low temperature: 55°C flow) - heating		A++ (HPID13R32 will be A+++ from September 2019)			

## 2.2 MAINS SUPPLY CABLE

Always assume maximum possible load when considering cable sizing.

The cable supplying power from the consumer unit to the heat pump must be connected via an external 2 pole isolator. This allows the service engineer to isolate the power supply before working on the heat pump safely.

Refer to Section 6 for connection details.

**Table 2-2:** Electrical installation requirements


Heat pump model	Maximum running current (A)	MCB	
		Rating (A)	Type
HPID6R32	11.2	16	C
HPID10R32	17.5	20	C
HPID13R32	23.0	32	C
HPID17R32	25.3	32	C

## 2.3 BASE TRAY HEATER


The factory fitted electric heater prevents condensate in the base of the heat pump from freezing. When the ambient temperature reaches 2.5°C, the base tray heater turns on and at 5.5°C turns off ( $\Delta T$  of 3k). This cannot be adjusted or turned off.

Base tray heater specification	
V	230V
P	185W
t	110°C
A	0.8A
Resistive load	
R	290 $\Omega$

## 2.4 HEAT PUMP DIMENSIONS

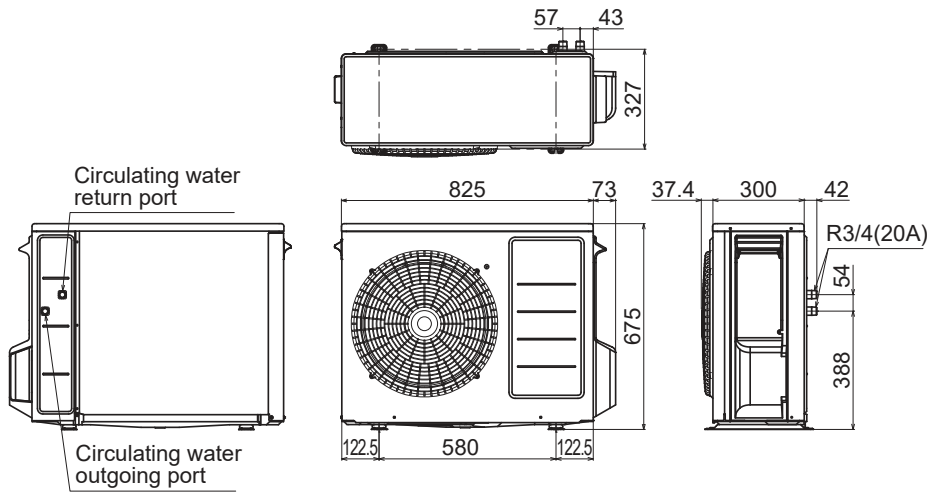

**Figure 2-1:** HPID6R32 heat pump dimensions

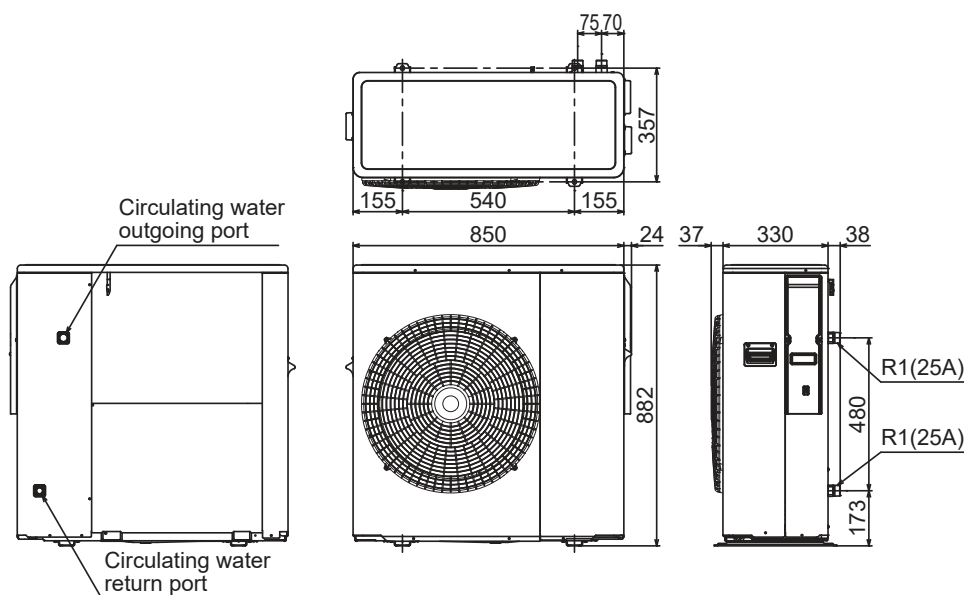

**Figure 2-2:** HPID10R32 heat pump dimensions

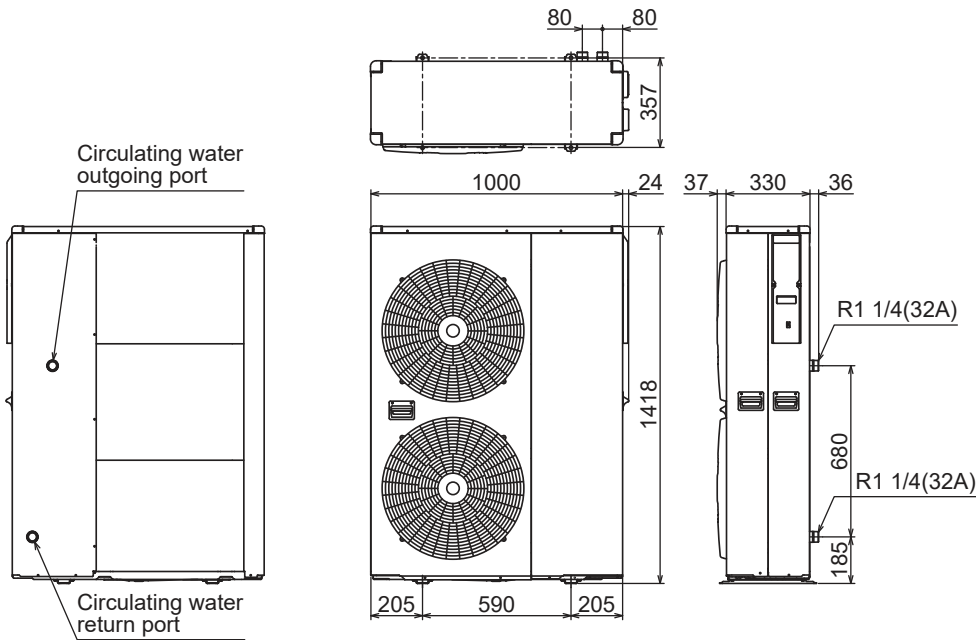


Figure 2-3: HPID13R32 & HPID17R32 heat pump dimensions

## 2.5 REMOTE CONTROLLER DIMENSIONS

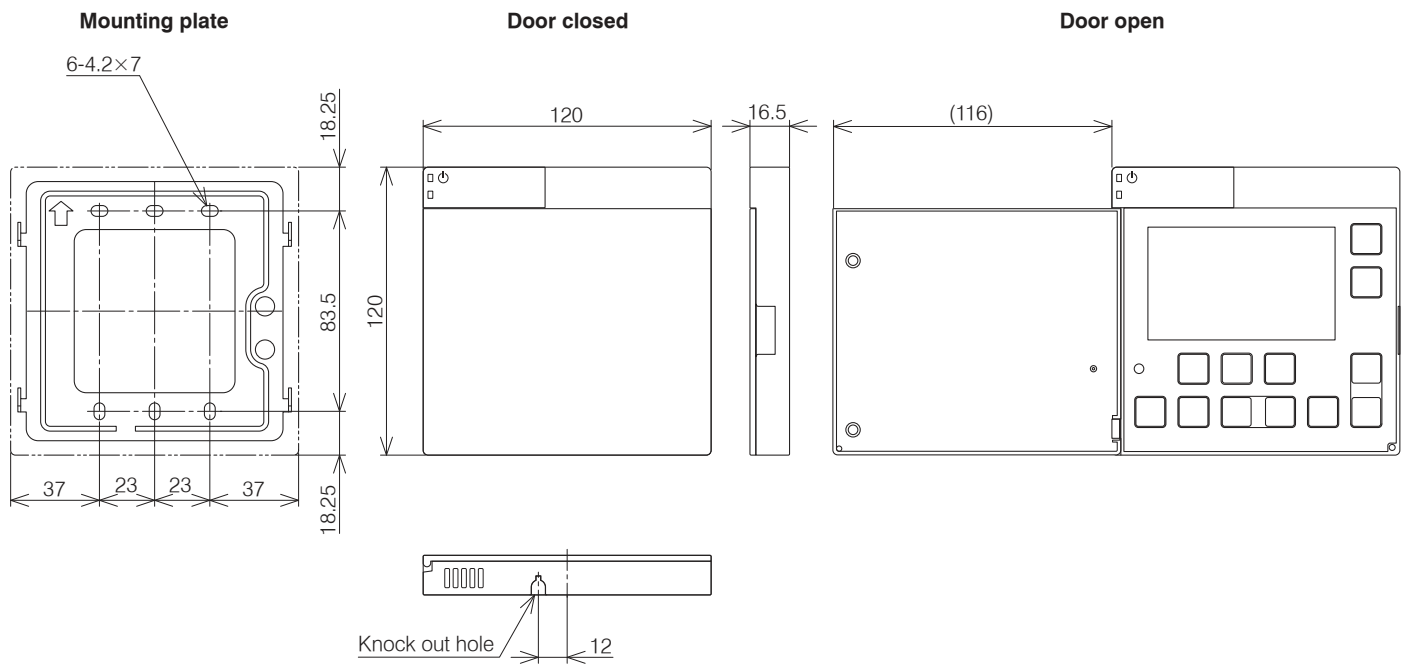


Figure 2-4: Remote controller dimensions

# 3 Installation Information

## 3.1 INTRODUCTION

### ! NOTE !

**Grant Aerona<sup>3</sup> heat pumps should be stored and transported in an upright position. If not, then the heat pump MUST be positioned in an upright position for at least four hours before being operated.**

For the heat pump to operate satisfactorily, install it as outlined in this installation manual.

- The Grant Aerona<sup>3</sup> heat pump should only be installed by a competent person.
- Before installing the heat pump, please read the following installation information carefully and install the heat pump as instructed.
- Be sure to follow the safety notices given.
- After completing the installation, check the product operates correctly. Then, explain to the user about the operation and maintenance requirements as shown in this manual.
- Be sure to install the heat pump in a suitable location that can support the heat pump when filled. Installation in an unsuitable location may cause injury to persons and damage to the heat pump.
- Do not install in a position where there is any possibility of flammable gas leakage such as from LPG cylinder around the heat pump. Leaked flammable gas around the heat pump may cause a fire.
- If the leaked refrigerant is exposed to fire, poisonous gas may be produced.
- Connect the heat pump with the flexible hoses and valves supplied, as described in this installation manual.
- Do not use an extension cable.
- Do not turn on the power until all installation work is complete.
- Only use correct Grant UK parts and accessories to avoid accidents such as electric shock, fire and leakage of water.
- Never touch electrical components immediately after the power supply has been turned off as electrical shock may occur. After turning off the power, always wait five or more minutes before touching electrical components.
- Be sure to connect the power supply cable correctly to the terminal block as overheating can cause a fire.
- Ensure the wiring lid is fitted following installation to avoid electric shock at the terminal block.
- Always connect the earth wire to the heat pump.
- Install a correctly rated circuit breaker.
- After installation, the heat pump and heating system must be commissioned. Hand over all documentation to the end-user and explain the operating functions and maintenance according to these instructions.

## 3.2 HEATING SYSTEM DESIGN CRITERIA

Before continuing with the installation of the Aerona<sup>3</sup> heat pump, please spend a few minutes confirming the suitability of the heat pump to your system. Failure to do so may result in poor performance and wasted time:

- Has a room-by-room heat loss calculation been carried out?
- Is this system designed for mono or bivalent?
- If monovalent, what is the total heating capacity?
- If bivalent, what is the load capacity of the heat pump?
- If bivalent, what is/are additional heat source(s)?
- Type of system design? - S-plan, S-plan plus
- Will a buffer be used?

- If yes, what is the capacity of the buffer?
- Has cavity wall insulation been installed?
- Has loft insulation of 270mm been installed?
- Have all system pipes been lagged correctly?
- Are the existing controls being upgraded?

### 3.2.1 SYSTEM DESIGN CRITERIA

A typical condensing oil or gas fired boiler operates with a flow of 70°C and a return of 50°C, i.e. with a  $\Delta T$  of 20°C. A heat pump operates with a flow of between 30°C and 55°C with a  $\Delta T$  of 8°C.

The design of any system in the UK is typically based on the following parameters:

1. That the outside design air temperature can fall to -3°C or lower
2. The internal design temperature can be between 18-22°C depending on the room concerned.
3. The heat pump operates at lower water temperatures than an oil or gas fired appliance.

Designing a new system for use with a heat pump is straight forward, assuming the insulation properties of the dwelling meets or exceeds current Building Regulations and the lower flow/return temperatures are taken into account in the selection of the type and size of the heat emitters used.

While underfloor heating is the preferred heat emitter, a combination of underfloor heating and radiators, or radiators only, works just as efficiently. It is necessary, however, to calculate the size of radiator required accurately – if this is not done, the house will fail to reach the target temperature and will be costly to rectify after the installation is complete.

When tested to BS EN 14511, the heat output for an heat pump is declared at the test conditions of 7°C outside air temperature and 35°C or 55°C water flow temperature.

At all other values of outside air temperature and water flow temperature the actual heat pump output will vary, e.g. the heat output will:

- decrease with lower outside air temperatures and increase with higher outside air temperatures at any given water flow temperature, and
- decrease with higher water flow temperatures and increase with lower water flow temperatures at any given outside air temperature

A back-up boiler can be added to the rated output of the heat pump.

Provided that the heat pump is sized correctly for the system, this back-up heater will only compensate for any short fall in meeting the heat load for the property below the minimum design air temperatures.

### 3.2.2 HEAT EMITTER SIZING

For guidance on sizing heat emitters, e.g. radiators and/or underfloor heating, refer to MCS Heat Emitter Guide (MCS 021).

## 3.3 REGULATIONS

Installation of a Grant Aerona<sup>3</sup> heat pump must be in accordance with the following recommendations:

- National Building Regulations, e.g. Approved Document G
- Local Bylaws (Check with the Local Authority for the area)
- Water Supply (Water Fittings) Regulations 1999

- MCS Installers Standards (if applying for the Renewable Heat Incentive)
  - MIS 3005 (Requirements for contractors undertaking the supply, design, installation, set to work commissioning and handover of microgeneration heat pump systems)
  - MCS 020 (MCS Planning Standards)
  - MCS 021 (MCS Heat Emitter Guide for Domestic Heat Pumps)

The installation should also be in accordance with the latest edition of the following standards and codes of Practice:

- BS 7671 and Amendments
- BS EN 12831
- BS 7593

### 3.4 HEAT PUMP LOCATION

#### 3.4.1 SELECTION OF POSITION

- Consider a place where the noise and the air discharged will not affect neighbours.
- Consider a position protected from the wind.
- Consider an area that reflects the minimum spaces recommended.
- Consider a place that does not obstruct the access to doors or paths.
- The surfaces of the floor (or the wall for wall mounted heat pumps - Refer to Section 3.6) must be solid enough to support the weight of the heat pump and minimise the transmission of noise and vibration.
- Take preventive measures so that children cannot reach the unit.
- Install the heat pump in a place where it will not be inclined more than 5°.
- When installing the heat pump where it may be exposed to strong wind, brace it securely.
- If the Aeronas heat pump is to be installed within 1 mile of the coast, avoid siting facing the sea.
- If the Aeronas heat pump is to be installed within 2 miles of the coast, the evaporator must be sprayed with ACF50 and this must be repeated on each service, unless a factory supplied 'Blygold' Aeronas heat pump has been installed. Refer to Section 3.10 for further information on corrosion protection.

Decide the mounting position as follows:

1. Install the heat pump in a location which can withstand the weight of the heat pump and vibration. Please make sure it is installed level.
2. Will a Grant external volumiser be fitted behind the heat pump? (Refer to installation instructions supplied with the external volumiser for more details). The Grant external volumiser is not suitable for units that have been wall mounted.
3. Provide the indicated space to ensure good airflow. (Refer to Section 3.5.2).
4. Do not install the heat pump near a source of heat, steam or flammable gas.
5. During heat pump operation, condensate water flows from the heat pump. Therefore, install the heat pump in a place where the condensate water flow will not be obstructed.
6. Do not install the heat pump where strong wind blows directly onto the heat pump or where it is very dusty.
7. Do not install the heat pump where people pass frequently.
8. Install the heat pump in a place where it will be free from adverse weather conditions as much as possible.

#### 3.4.2 NOISE LEVEL

All heat pumps make a noise. Discuss the potential nuisance factor with the end-user when considering the final position of the heat pump. Take opening windows and doors into account. It is not essential for the heat pump to be positioned next to a wall of the house. Behind an out-building may be more suitable so discuss the options with the end-user.

#### 3.4.3 ORIENTATION

The North face of the building will usually have colder ambient air than any other side. To ensure maximum efficiency from the Grant Aeronas heat pump, position the heat pump on a warmer side. In order of preference, site the heat pump on a South face followed by either South East or South West, then by East or West. Only install on a North face if there is no other alternative.

### 3.5 PREPARATION FOR INSTALLATION

#### 3.5.1 BASE

Unless the heat pump is to be wall mounted (refer to Section 3.6 for further information), it should be installed on a firm flat level surface capable of supporting the weight of the heat pump and minimising the transmission of noise and vibration, for example:

- A flat trowelled concrete base 150mm thick.
- Paving slabs on compacted hard core of a sufficient depth for the ground condition.

This surface should extend at least 150mm beyond the heat pump on three sides.

If this surface is level with or above the damp course for the building, leave a gap of approximately 150mm between the edge of the base and the wall of the house to avoid bridging the DPC.

The heat pump should NOT be installed on loose or uneven surfaces such as grass, soil, shingle or gravel.

The heat pump must be raised up from the surface of the base by approximately 100mm on suitable anti vibration mounts or blocks.

#### 3.5.2 CLEARANCES

The following **minimum** clearances must be used to enable the product to be easily commissioned, serviced and maintained and allow adequate air flow in and out of the heat pump.


Refer to Table 3-1 and Figure 3-1.

**Table 3-1:** Clearances

Aspect	Minimum clearance required (mm)
Top	300
Bottom	Approximately 100*
Front	600
Rear	300
Left	100
Right	600

\* Height of A/V mounts (product code: HPIDFOOT/KIT)

If the heat pump is to be wall mounted the rear clearance can be reduced to 150mm. Refer to Section 3.6 for further information on wall mounting Grant Aeronas heat pumps.

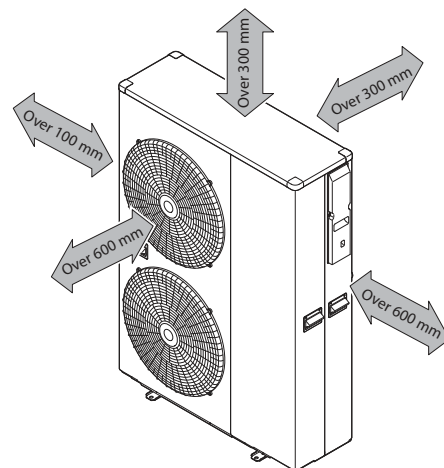

**Figure 3-1:** Clearances (applicable to all models)

### 3.5.3 CONDENSE DISPOSAL

The underside of the heat pump has a condensate outlet (refer to Figure 3-2) that allows any condensate to drain from the heat pump. Provision must be made to safely collect and dispose of the condensate.

For example, use 40 mm waste pipe to form a condensate disposal system into which the condensate flows from the opening in the bottom of the heat pump casing running to a suitable gully or soakaway.

## ! WARNING !

It is essential that the condensate is able to drain away and not allowed to run onto any adjacent paths or driveways where, in winter, this will result in icing and a potential hazard for anyone walking near the heat pump. The top of the concrete base must be either level with, or above, the surrounding ground level.

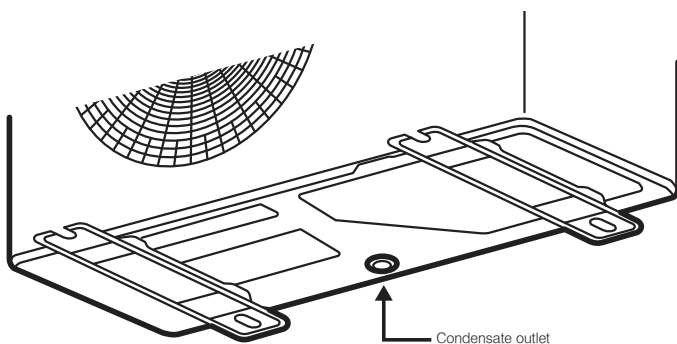


Figure 3-2: Condensate outlet

### 3.5.4 VIBRATION

If the vibration from the heat pump is likely to cause a nuisance, use the anti-vibration mounts (product code: HPIDFOOT/KIT2) and fix the heat pump securely to the mounts. These anti-vibration mounts are not suitable for units that have been wall mounted.

### 3.6 WALL MOUNTED INSTALLATIONS

All four sizes of Grant Aerona<sup>3</sup> heat pump can be wall mounted at a safe height, with the top of the unit no more than 2m above ground level, where no specialist access equipment (such as mobile tower or scaffolding) is required to provide a safe working place to carry out servicing or repairs.

Grant UK can supply a suitable mounting bracket for the HPID6R32 and HPID10R32 models (product code: HPIDWALLBRKT2). This has a maximum Safe Working Load of 90kg and is thus suitable for both the HPID6R32 and HPID10R32 heat pumps only.

If any other method of wall mounting is used, for example with the HPID13R32 and HPID17R32 heat pumps, it is the responsibility of the installer to select a suitable mounting method. Grant UK cannot take any responsibility for any mounting brackets other than the one supplied.

In all cases, care should be taken to determine that the condition of the wall is suitable to carry the load imposed by the heat pump and ensure that the mounting bracket is firmly secured to the wall, using suitable fixings for the wall construction concerned.

If installed in a position where specialist access equipment, such as a mobile tower or scaffolding, is required to provide a safe place of work to carry out servicing or repairs, then the cost and provision of this equipment is the responsibility of the property owner/user irrespective of whether the heat pump is deemed to be at fault or not.

## 3.7 INSTALLING THE HEAT PUMP

### 3.7.1 INSULATION

The complete water circuit, including all pipework, must be insulated to prevent heat loss reducing the efficiency of the heat pump and also to prevent damage due to frozen pipes.

### 3.7.2 CONNECTING THE HEATING SYSTEM TO THE HEAT PUMP

- Water connections must be made in accordance with diagrams in this manual and the labels on the heat pump.
- Be careful not to deform the heat pump pipework by using excessive force when connecting.
- Pipework should be flushed before connecting the heat pump.
- Hold the pipe end downwards when removing burrs.
- Cover the pipe end when inserting it through a wall so that no dust and dirt can enter.
- **The heat pump is only to be used in a sealed heating system. It must not be used as part of an open-vented system.**

Before continuing the installation of the heat pump, check the following points:

- The maximum system water pressure is 3 bar.
- Make sure the hose is connected to the pressure relief valve to avoid any water coming into contact with electrical parts.
- Air vents must be provided at all high points of the system. The vents should be located at points which are easily accessible for servicing. An automatic air purge valve is provided inside the heat pump. Check that the air purge valve can operate.
- Take care that the components installed in the pipework can withstand the water pressure.

### 3.7.3 SLEEVING FOR PIPES AND CABLES

All pipes passing through external walls should be individually sleeved, using either copper or plastic pipe for the sleeve.

The inside diameter of this sleeving should be large enough to accommodate the insulation on heating system pipes, usually at least 6mm larger than the outside diameter of the insulation.

It is important that the sleeve is correctly built into the wall structure using a cement mortar or suitable filler.

The annular gap between the pipe/insulation and the sleeve should be even all round with at least one end sealed with a mastic sealant, to prevent the ingress of water or vermin whilst allowing the pipe to move and maintain the fire-resistant properties of the structure.

Whilst not essential, it is also recommended as good practise to sleeve any cables passing through external walls, following the basic requirements as given above. This will make it easier to remove/replace any cables in future, should it be necessary.

### 3.7.4 SYSTEM CONNECTIONS

The system connections of the heat pump must be carried out using the flexible hoses, valves and fittings supplied with the heat pump.

The hydraulic circuit must be completed following the recommendations below:

1. It is important to install the isolation valves between the heat pump and the building.
2. The flow regulator (supplied with the heat pump) must be installed on the return to the heat pump. Refer to Figure 4-1 and Section 9.14.
3. The system must have drain cocks in the lowest points.
4. Air vents must be included at the highest points of the system.
5. A system pressure gauge must be installed upstream of the heat pump.
6. All pipework must be adequately insulated and supported.
7. The presence of solid particles in the water can obstruct the heat exchanger. Therefore, protect the heat exchanger using a magnetic filter such as a Grant Mag-One.

8. After system assembly flush and clean the whole system, paying particular attention to the state of the filter.
9. A new installation must be thoroughly flushed and cleaned before filling and adding anti-freeze/biocide/inhibitor.

### 3.7.5 REMOTE CONTROLLER

For details on how to install the remote controller, refer to Section 7. For setting, refer to Section 9.

## ! WARNING !

**Do not use the heat pump to treat industrial process water, swimming pool water or domestic drinking water. Install an intermediate heat exchanger for all of the above cases.**

### 3.8 METERING REQUIREMENTS

The MCS Heat Pump Standard (Installation) MIS3005-1 requires that:

1. A means of recording and displaying the total electricity consumption of the system shall be installed.
2. The heat pump(s) should be installed so that heat metering could be added at a future date with minimum cost or disruption.

A means of making the addition of heat metering possible with minimum disruption would be to include straight and surface mounted flow and return pipes near the heat pump and each incorporate two full bore isolation valves.

Those isolation valves on the flow pipe should be separated by no less than 175mm.

On the return pipe, those valves should be separated by no less than 20x the pipe diameter.

For example, the distance between the valves should be 560mm or more of straight pipe when pipe diameter of 28mm is used.

### 3.9 VOLUMISER TANKS

A 'Volumiser' tank is simply a vessel used to increase the volume of the system, to meet the system requirements as given below.

It will have only two connections, one inlet and one outlet, and it must be fitted in the flow from the heat pump if the volumiser contains an immersion element that is to be used as a supplementary heater.

A weatherproof, insulated 30 litre 'Volumiser' tank designed for external installation and suitable for this purpose, is available from Grant UK (product code: HPIDVOL30EXT). For further information, please contact Grant UK on +44 (0)1380 736920.

Refer to Figure 4-1 and Table 4-1.

#### System Conditions

A 'Volumiser' tank is required for all Grant Aeronas<sup>3</sup> R32 heat pump installations, except when the heat pump is connected to a Grant combined volumiser/low loss header, buffer or thermal store.

For further information on the Grant combined volumiser/low loss header, please refer to Grant UK DOC 0184 (supplied with the volumiser/low loss header).

The water pump, fitted in the heat pump, is supplied factory set at Level 3 (maximum output). It is unlikely that this level of output will be required, so it is recommended that the pump output is reduced to either Level 2 (medium output) or Level 1 (minimum output) as required. This will usually be indicated by achieving a temperature difference between the heat pump flow and return of approximately 8°C when the heating system is operating and up to temperature.

Refer to Section 8.3.6 for guidance on how to change the pump output level.

To determine the temperature difference between flow and return, check the flow and return temperatures using the 'Monitor Display Function' on either the remote controller or Terminal PCB. Refer to Section 10.7 for guidance on how to check the flow and return water temperatures.

### 3.10 COASTAL INSTALLATIONS

Heat pumps installed in coastal locations are prone to corrosion damage due to exposure to the sea air.

Corrosion of the aluminium fins and copper tubes of the evaporator can reduce the output and limit the lifespan of the unit. To prevent this happening for all installations within 2 miles of the sea Grant recommends using an anti-corrosion treatment.

Two possible options of anti-corrosion treatment are available for the Aeronas<sup>3</sup> range of heat pumps.

#### Blygold coating

All Grant Aeronas<sup>3</sup> air source heat pumps are available in a Blygold treated version. This involves a factory applied corrosion protection coating of the evaporator. This MUST be specified when ordering the unit as it is NOT available as a retro fit option for on-site application.

The coating applied to the evaporator (Blygold PoluAl XT) is polyurethane impregnated with aluminium. Once applied it seals the dissimilar materials of the evaporator from the atmosphere to protect it from the marine environment.

This coating is water repellent, helping to prevent dirt adhering to the evaporator fins that could reduce the heat pump output. As with any such evaporator, it must be periodically cleaned to maintain the benefits of the coating and maintain the efficient operation of the heat pump.

Refer to Section 10 of these instructions for further details of the servicing requirements.

#### ACF50 coating

This is a retro fit option that is applied to the evaporator on-site. The outer casing of the heat pump will have to be removed for the evaporator fins and tubes to be sprayed from both sides. Refer to the instructions supplied with the ACF50 for more detailed information on the application procedure.

Originally developed for the aerospace industry, ACF50 is a hydrocarbon based anti-corrosion compound that forms a self-healing barrier on new metal. It is an ultra-thin fluid film that dispels any moisture (including salt water) already present and provides an atmospheric barrier preventing any further moisture coming in contact with the surface in question.

It continues to creep into narrow gaps, seams, etc. providing protection for 12 months and thus must be re-applied on an annual basis to maintain the level of protection. Refer to Section 10 of these instructions for further details of the servicing requirements.

### 3.11 HYDRAULIC DIAGRAMS

Hydraulic diagrams are available in Figure 4-1 and Appendices A, B and C at the back of these installation instructions.

### 3.12 BEFORE YOU COMMISSION

#### 3.12.1 FLUSHING AND CORROSION PROTECTION

To avoid the danger of dirt and foreign matter entering the heat pump the complete heating system should be thoroughly flushed out – both before the heat pump is operated and then again after the system has been heated and is still hot.

This is especially important where the heat pump is installed as a replacement for a boiler on an existing system. In this case the system should be first flushed hot, before the old boiler is removed and replaced by the heat pump.

For optimum performance after installation, this heat pump and the central heating system must be flushed in accordance with the guidelines given in BS 7593 'Treatment of water in domestic hot water central heating systems'.

This must involve the use of a proprietary cleaner, such as Sentinel X300 or X400, or Fernox Restorer.

After flushing, a suitable thermal fluid should be used, such as Grant HPC thermal fluid, specifically designed for use in air source heat pump installations. This provides long term protection against corrosion and scale as well as the risk of the freezing in the external section of the heating system (i.e. the flexible hoses, condenser and circulating pump within the heat pump casing) in the event of power failure during winter months.

In order to avoid bacterial growth, due to the lower system operating temperatures in heat pump systems, a suitable biocide should be used in conjunction with the thermal fluid.

**As Grant HPC thermal fluid already contains a biocide, no separate biocide is required.**

The thermal fluid, and separate biocide when required, should be added to the system water when finally filling the heating system.

The level of frost protection depends on the percentage concentration of thermal fluid used.

Grant recommends using a thermal fluid concentration to give a MINIMUM level of frost protection of -10°C, and down to lower temperatures than this where local conditions are more severe.

With Grant HPC fluid, to ensure good corrosion protection, a concentration of 25% by volume is recommended. This provides antifreeze protection to -12°C. Refer to table 3-2 below for details of concentration v antifreeze protection.

**Table 3-2:** Antifreeze protection levels using Grant HPC fluid

% Grant HPC by volume	20	25	30	35	40	45
Freeze point °C	-10	-12	-15	-20	-25	-30

**IMPORTANT: Mixtures with a concentration of more than 70% by volume of Grant HPC in water are NOT recommended because the physical properties i.e. heat transfer, are no longer sufficient.**

Always follow the manufacturers instructions on the correct use of thermal fluids and biocides.

Failure to implement the guidelines outlined in Section 3.12.1 for fully flushing the system and using a suitable thermal fluid to provide adequate protection against corrosion, scale, bacterial growth and freezing will invalidate the heat pump product guarantee.

**Table 3-3:** Antifreeze concentration

Correction factor	% Monoethylene glycol inhibitor	20%	25%	30%	35%	40%	45%
	Freezing temperature*	-10°C	-12°C	-15°C	-20°C	-25°C	-30°C
Capacity	Power absorbed	0.995	0.990	0.985	0.980	0.975	0.970
	Pressure drop	1.051	1.060	1.065	1.071	1.077	1.080

\* The temperature values are indicative. Always refer to the temperatures given for the specified product used. For details of how to access the parameter settings, refer to Section 9.3.

## ! NOTE !

**When using thermal fluids and biocides, ensure that the volume of any volumisers, buffers and thermal stores are taken into account, in addition to the heating system pipework, when determining how much is required to correctly dose the system.**

**Grant Engineering (UK) Limited strongly recommends that a Grant Mag One in-line magnetic filter/s (or equivalent\*) is fitted in the heating system pipework. This should be installed and regularly serviced in accordance with the filter manufacturer's instructions.**

\* As measured by gauss. The Mag One magnetic filter has a gauss measurement of 12000.

#### 3.12.2 ANTI-FREEZE FUNCTION SETTING

This function is factory set to ON, i.e. DIP SW1 is set to ON (up position).


With the frost protection function set to ON, it will operate as described in Sections 8.4.1, 8.4.2 and 8.4.3.

This function is not required if ethylene glycol is used in the heating system water to prevent freezing.

If a suitable concentration of ethylene glycol (heating system antifreeze) is used in the system water. Refer to Tables 3-2 & 3-3 for suitable antifreeze concentrations or follow the manufacturer's instructions supplied with the antifreeze.

If not required, frost protection function can be disabled as follows:

- Remove the wiring cover at the right hand end of the heat pump. Refer to Figure 6-1.
- Set DIP SW1 to OFF (down position). Refer to Figure 3-6.
- Replace the wiring cover and secure in place with the screws provided.

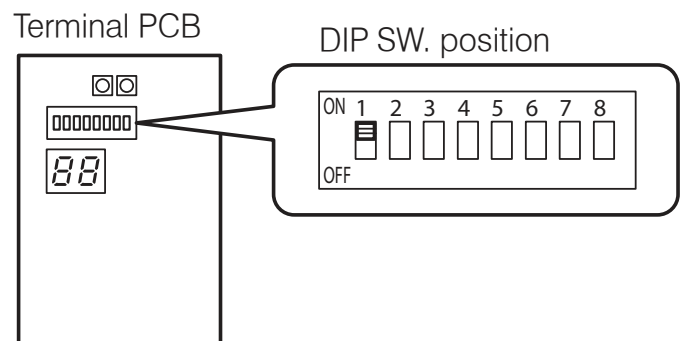

**Figure 3-6:** Anti-freeze function setting

## ! NOTE !

**Dip switch positions:**

**Up: ON**

**Down: OFF**

**Refer to Sections 8.4.1, 8.4.2 and 8.4.3.**



To do this, use the remote controller as follows (refer to Section 9.1):

First access the Installer level:

1. Press and hold the Menu I and the – or + o buttons together for 3 seconds to enter the installer level.
2. "InSt" parameter number "00 00" and parameter value "-- --" will be shown on the display. The first two digits of the parameter number will be blinking.

Then, access the Service level:

1. Use the Up or Down Ⓢ buttons to change these first two digits to 99 and then press the + button Ⓣ.
2. The second two digits will then blink. Use the Up or Down Ⓢ buttons to change these two digits to 99 and then press the Set button Ⓩ.
3. The parameter value on the display will now be '0'.
4. Use the 'Up' and 'Down' (8) buttons to change the parameter value to "738" and then press the 'Set' (7) button.

Now, reset the value for parameter 4300 to 0 (disabled):

1. The first two digits of the 4-digit parameter number (the parameter group number) will blink.
2. Set the parameter group number to 43 using the Up or Down Ⓢ button.
3. Press the + buttons Ⓣ and the second two digits (the parameter code) will blink.
4. Set the parameter code number to 00 using the Up or Down Ⓢ button.
5. Press Set button Ⓩ and the parameter value 4300 (1 = enabled) will be displayed and will blink.
6. Reset the parameter value 4300 to 0 (disabled) using the Up or Down Ⓢ button.

Repeat this process to reset the values of parameters 4310, 4320 and 4330 to 0.

Return to normal operation:

Press and hold the Menu Ⓜ and the – or + Ⓣ buttons together for 3 seconds or simply leave the remote controller for 10 minutes.

## ! NOTE !

**Do NOT disable the heat pump antifreeze function unless a suitable concentration of glycol is present in the system water. Refer to Tables 3-2 & 3-3. If there are any leaks of water from the heating system and the system requires topping up then the concentration of ethylene glycol must be checked and topped up as required.**

**Failure to follow this instruction will invalidate the product guarantee.**

### 3.13 COMPLETION

Please ensure that the heat pump commissioning form (supplied with the heat pump) is completed in full and that it is signed by the householder/user.

Leave the copy with the user and retain one copy for your own records.

**Table 3-4:** Frost protection parameters

Level	Parameter		Function description	Display and input value				Remarks
	Group	Code		Default	Min.	Max.	Unit	
S	43	00	Frost protection on room temperature 0=disable 1=enable	1	0	1	-	
S	43	10	Frost protection by outside temperature 0=disable 1=enable	1	0	1	-	
S	43	20	Frost protection based on outgoing water temperature 0=disable 1=enable	1	0	1	-	
S	43	30	DHW storage frost protection 0=disable 1=enable	1	0	1	-	

Ensure that these installation and servicing instructions and the user instructions are handed over to the householder.

### 3.14 INSTALLATION CHECKLIST

#### Location and positioning

- The vibration damping feet/shoes are fitted (if supplied)
- The heat pump is fixed to the surface or mountings that it rests on
- Maintenance clearances comply with those given in this manual
- The position of the remote controller complies with the guidance given in this manual
- All safety requirements have been complied with

#### Water circuit pipework and appliances

- Water connections have been carried out as per the information in this manual
- All water connections are tight with no leaks
- The magnetic in-line filter is installed on the primary circuit return as close to the heat pump as possible but still within the building and in a position that is easy to access for maintenance
- The pressure gauge with a suitable scale is installed on the sealed system pipework or expansion vessel manifold
- The connection pipes are suitably supported so that these do not weigh on the appliance
- The expansion vessel installed on the heating circuit is suitably sized
- Volumiser tank is installed unless a buffer, thermal store or buffer cylinder is connected to the heat pump (refer to Section 3.9).
- The water circuit has been thoroughly flushed
- The air vent valves are installed at the highest points on the system
- There is no air in the system (vent if necessary)
- The shut off valves are installed on the inlet/outlet of system circuit
- The drain valves are installed at the lowest points in the system
- The flexible hoses are installed on the inlet/outlet of system circuit
- The system water content complies with the specification in the manual
- The DHW immersion heater has been installed in DHW tank for Legionella prevention
- Suitable water flow rate for operation of the entire heat pump is achieved as specified in this manual. Refer to Section 9.12
- All pipes are insulated with suitable vapour barrier material to prevent formation of condensation and heat loss, with control and shut-off devices protruding from the insulation
- The flow regulator (supplied) is fitted on the return pipe to the heat pump. Refer to Section 9.14 for further information.


#### Electrical connections

- All electrical connections are secure
- Electrical connections have been carried out correctly
- Voltage is within a tolerance of 10% of the rated voltage for the heat pump (230V)
- Electrical power supply complies with the data on the rating plate and as specified in the manual
- The earth wires are connected securely

# 4 Sealed Systems

## 4.1 SEALED SYSTEM REQUIREMENTS

**IMPORTANT**  
If the external volumiser arrangement is used, (see item 6a below) then item 6 in the adjacent schematic will not be required.

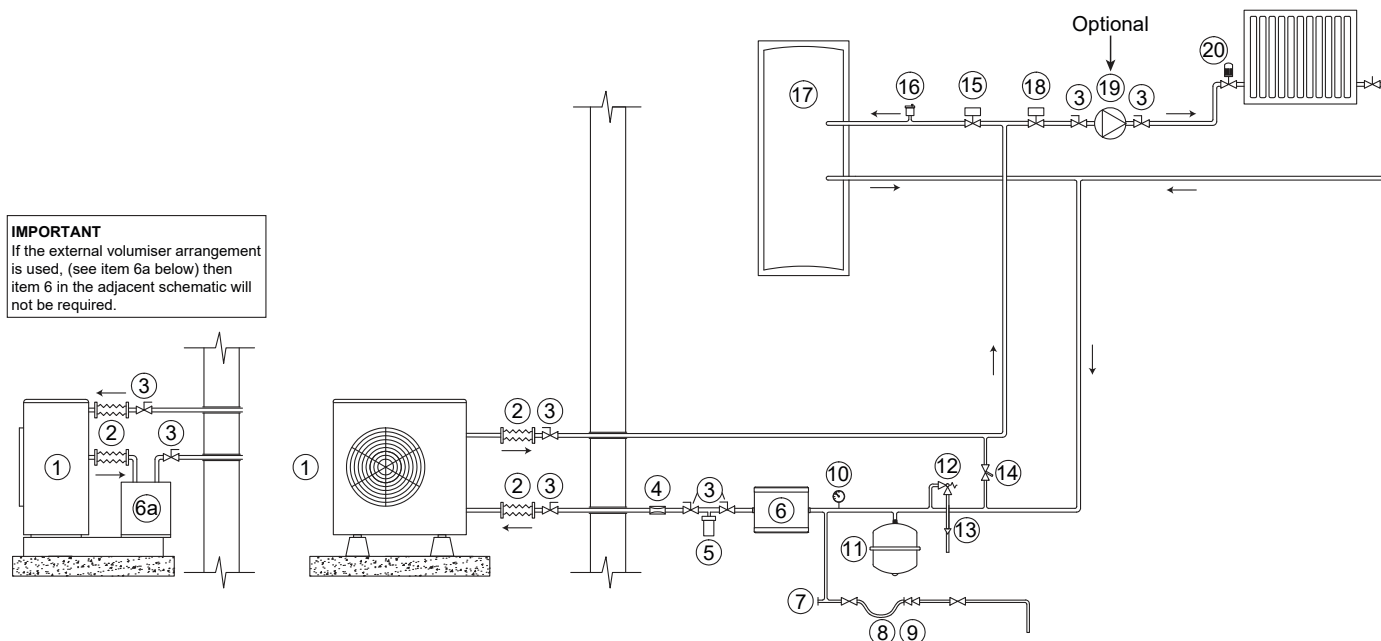

**Figure 4-1:** Sealed System heating components

**Table 4-1:** Key to Figure 4-1

Key	Description
1	Grant AERONA³ ASHP
2	Flexible hose
3	Isolation valve
4	Flow regulator
5	Mag One magnetic filter
6	Volumiser
6a	Grant External Volumiser
7	Drain point
8	Removable filling loop
9	Double check valve
10	Pressure gauge
11	Expansion vessel
12	Pressure relief valve
13	Tundish
14	Automatic system by-pass
15	Motorised 2-port valve (DHW)
16	Automatic air vent
17	DHW cylinder
18	Motorised 2-port valve (CH)
19	Additional circulating pump (refer to Section 8.3.7)
20	Thermostatic radiator valve

All Grant AERONA³ heat pumps must be used with sealed systems complying with the requirements of BS EN 12828, BS EN 12831 and BS EN 14336.

The system must be provided with the following items:

- Diaphragm expansion vessel complying with BS EN 13831
- Pressure gauge
- Pressure relief (safety) valve
- Approved method for filling the system

### Expansion vessel

The expansion vessel can be fitted in either the return or flow pipework in any of the recommended positions as shown in Figure 4-1. To reduce the operating temperature of the expansion vessel, position it below the pipe to which it is connected.

The expansion vessel may be positioned away from the system, providing the connecting pipe is not less than 13 mm diameter. If the expansion vessel is connected via a flexible hose, care must be taken to ensure that the hose is not twisted.

## ! NOTE !

**Ensure that the expansion vessel used is of sufficient size for the system volume. Refer to BS 7074:1:1989 or The Domestic Heating Design Guide for sizing the required vessel.**

### Pressure Gauge

The pressure gauge must have an operating range of 0 to 4 bar. It must be located in an accessible place next to the filling loop for the system.

### Safety Valve

The safety valve (provided with the heat pump) is set to operate at 3 bar. It should be fitted in the flow pipework near to the heat pump.

The pipework between the safety valve and heat pump must be unrestricted, i.e. no valves. The safety valve should be connected to a discharge pipe which will allow the discharge to be seen, but cannot cause injury to persons or damage to property.

### Filling Loop

Provision should be made to replace water lost from the system. This can be done manually (where allowed by the local water undertaking) using an approved filling loop arrangement incorporating a double check valve assembly.

The filling loop must be isolated and disconnected after filling the system.

### Heating System

The maximum 'setpoint' temperature for the central heating water is 55°C.

An automatic air vent should be fitted to the highest point of the system.

If thermostatic radiator valves are fitted to all radiators, a system by-pass must be fitted. The by-pass must be an automatic type and correctly set when the system is commissioned.

All fittings used in the system must be able to withstand pressures up to 3 bar. Radiator valves must comply with the requirements of BS 2767:1991.

One or more drain taps (to BS 2879) must be used to allow the system to be completely drained.

## 4.2 FILLING THE SEALED SYSTEM

Filling of the system must be carried out in a manner approved by the local Water Undertaking.

# ! WARNING !

**Only ever fill or add water to the system when it is cold and the heat pump is off. Do not overfill.**

The procedure for filling the sealed system is as follows:

1. Check the air charge pressure in the expansion vessel BEFORE filling the system.  
The expansion vessel charge pressure should always be approximately 0.2 bar lower than the maximum static head of the system, at the level of the vessel (1 bar = 10.2 metres of water).  
Refer to Figure 4-1.  
**The charge pressure must not be less than the actual static head at the point of connection.**
2. Check that the small cap (or screw) on all automatic air vents is open at least one turn. The cap (or screw) remains in this position until filling is completed and then it is closed.
3. Remove the top (HPID6R32) and front right (HPID10R32, HPID13R32 and HPID17R32) casing and loosen the plug on the automatic air vent located inside the heat pump. Refer to Figure 4-2.

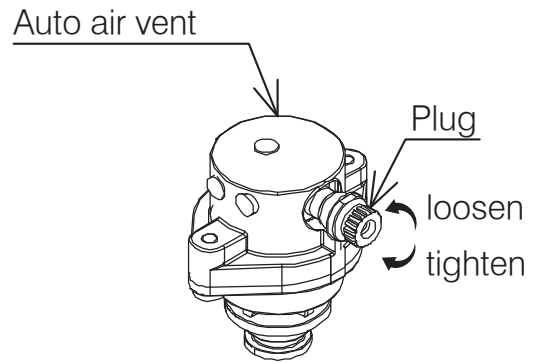


Figure 4-2: Auto Air Vent

4. Ensure that the flexible filling loop is connected and that the double check shut off valve connecting it to the water supply is closed. A valve is open when the operating lever is in line with the valve, and closed when it is at right angles to it.
5. Open the fill point valve.
6. Gradually open the double check valve from the water supply until water is heard to flow.
7. When the needle of the pressure gauge is between 0.5 and 1.0 bar, close the valve.
8. Vent each radiator in turn, starting with the lowest one in the system, to remove air.
9. Continue to fill the system until the pressure gauge indicates between 0.5 and 1.0 bar. Close the fill point valve. The system fill pressure (cold) should be 0.2 - 0.3 bar greater than the vessel charge pressure – giving typical system fill pressures of approx 0.5 bar for a bungalow and 1.0 bar for a two storey house.  
Refer to the Domestic Heating Design Guide for further information if required.
10. Repeat steps 8 and 9 as required until system is full of water at the correct pressure and vented.
11. Water may be released from the system by manually operating the safety valve until the system design pressure is obtained.
12. Close the fill point and double check valves either side of the filling loop and disconnect the loop.
13. Check the system for water soundness, rectifying where necessary.

# ! NOTE !

**The air charge pressure may be checked using a tyre pressure gauge on the expansion vessel Schraeder valve. The vessel may be re-pressurised, when necessary, using a suitable pump. When checking the air pressure, the water in the heating system must be cold and the system pressure reduced to zero.**

## 4.3 PRESSURE RELIEF (SAFETY) VALVE OPERATION

Check the operation of the pressure relief (safety) valve as follows:

1. Turning the head of the valve anticlockwise until it clicks. The click is the safety valve head lifting off its seat allowing water to escape from the system.
2. Check that the water is escaping from the system.
3. Top-up the system pressure, as necessary.

# ! NOTE !

**The expansion vessel air pressure, system pressure and operation of the pressure relief valve must be checked on each service. Refer to Section 10**

# 5 Domestic Hot Water

## 5.1 TEMPERATURE CONTROL

If a DHW demand is made, the heat pump will continue to provide space heating for a minimum period of 15 minutes (parameter 3122 - refer to Table 5-1). If space heating is already being demanded and has been on for this minimum period, then the heat pump will change over to prioritise DHW.

In either case, once DHW is being provided, the flow temperature will target 55°C, irrespective of the space heating target temperature. Also note that there is no weather compensation control when in DHW mode.

The time limit for DHW can be set using parameter 3121. The default setting is 60 minutes. After this time period has been reached, the heat pump will default back to the original demand that was in place prior to the DHW demand or to a stand by state if the change is demand state occurred during the DHW demand.

If the unit times out on parameter 3121, remember the motorised valve of the DHW circuit will remain open as it is controlled by the cylinder thermostat and not the heat pump and will not heat up to the correct temperature when using the space heating flow temperature. It is also possible that the cylinder could be robbed of heat to the space heating circuit if the stored water is hotter than the flow temperature to the space heating circuit.

If the motorised valve for space heating is open during DHW demand, the 55°C flow temperature will also enter the space heating circuit, increasing the recovery time of the cylinder.

To minimise this high temperature period and higher than normal running costs, ensure that space heating and DHW demand times do not occur simultaneously.

## 5.2 QUICK RECOVERY CYLINDERS

As the water temperature from the heat pump is lower than from a traditional system using a boiler, a much larger coil is required inside the cylinder to transfer the heat efficiently.

Grant UK has developed a range of "Quick Recovery" hot water cylinders for use with a heat pump.

In order to ensure that a minimum of at least 8K temperature difference is maintained between cylinder flow and return, the correct Grant UK Quick Recovery cylinder must be selected to match the heat pump output.

Failure to use the correct cylinder can result in a reduced heat transfer in the cylinder and a lower temperature differential.

**Table 5-1:** DHW and space heating parameters

Level	Parameter		Function description	Display and input value				Remarks
	Group	Code		Default	Min.	Max.	Unit	
I	31	21	Maximum time for DHW request	60	0	900	1 min	
I	31	22	Minimum time for space heating	15	0	900	1 min	

For details of how to access the parameter settings, refer to Section 9.3.

### 5.3 LEGIONELLA

It is possible to use the heat pump to raise the HW cylinder to around 50 to 55°C.

For protection against Legionella the temperature can be periodically raised to 60°C using the Grant 7-Day Immersion Programmer, available from Grant UK (product code: HPDHWBK2).

This programmer also allows the cylinder immersion element to be used to raise the temperature to 60°C for one hour either daily or weekly to sterilise the cylinder against Legionella.

## ! NOTE !

**For this system to operate, the existing immersion switch must be left set permanently to ON.**

**To totally prevent operation of the immersion element, the existing immersion switch must be set to OFF.**

#### 5.3.1 LEGIONELLA SANITISATION REGIME

Care must be given to vulnerable people who may be exposed to potentially life-threatening legionella. This group of people include the elderly, pregnant women, young children and those with breathing difficulties.

Care must also be given to households who do not use a lot of water on a daily basis. While this chart is not exhaustive, it is important that you discuss any potential issues with the occupants before deciding on the appropriate regime. It is important that this decision is based on the welfare of the occupants and not on energy saving measures.

**Table 5-2:** Legionella group sanitisation regime

	Uses less than 50 litres of hot water per day	Uses more than 50 litres of hot water per day
Vulnerable Group	Store at 50°C and raise hot water cylinder to 60°C for 1 hour every day	Store at 50°C and raise hot water cylinder to 60°C for 1 hour every 3 days
Non-Vulnerable Group	Store at 50°C and raise hot water cylinder to 60°C for 1 hour every week	Store at 50°C and raise hot water cylinder to 60°C for 1 hour every 2 weeks

## ! WARNING !

**If the hot water stored in the cylinder has not been used for a prolonged period of time (e.g. a few days) and has not been stored at 60°C, then it is important that the temperature is raised to at least 60°C for a period of one hour before using the hot water.**

### 5.4 GRANT 7-DAY IMMERSION PROGRAMMER (LEGIONELLA)

This system uses the existing cylinder immersion heater, which is switched via a contactor relay operated by a small timeswitch, both enclosed in a separate unit to be mounted next to the cylinder. Thus the immersion element can be programmed to operate for the required period on either a daily or weekly basis.

Once set, this system is fully automatic but can be overridden by the user if required. Also, the user can still switch the immersion element off, via the immersion heater switch, irrespective of the programmer or cylinder thermostat setting or whether the heat pump is operating.

#### 5.4.1 INSTALLATION

The Grant 7-Day Immersion Programmer comes pre-wired within its enclosure, ready for installation. The connections to the Immersion heater switch and Immersion heater must be made after it is installed on site.

When installed, this programmer interrupts the electrical supply between the existing immersion heater switch and immersion heater. Refer to Figure 5-2 for electrical connection details.

For more detailed information on the installation of the Grant 7-Day Immersion Programmer, please refer to the instructions supplied with the programmer.

#### IMPORTANT

**Do not alter the pre-wired connections within the enclosure and only make the external connections as shown in the wiring diagrams. See Figure 5-2.**

## ! WARNING !

**Where a 3-phase supply is present, ensure that BOTH the immersion switch and heating system controls are taken from the same phase. If in doubt, contact a qualified electrician.**

## 5.4.2 SETTING

To set the timeswitch use the following procedure:

### To set the time and day:

1. Press and hold down the 'clock' button throughout the 'time and day' setting process.
2. Press 'h+' button repeatedly to set hour (24 hour clock).
3. Press 'm+' button repeatedly to set minutes.

## ! NOTE !

If you hold down either the 'h+' or 'm+' buttons for longer than a second the figures in the display will scroll continuously.

4. Press the 'day' button repeatedly to scroll through to required day of week.
5. Release the 'clock' button. The clock is now running as indicated by the flashing colon.

### To set switching times:

You can set up to six ON and OFF commands per day, if required, as follows:

1. Press the 'timer' button. The actual time will disappear from the display. The first 'ON' indication will be displayed.
2. Press 'h+' button repeatedly to set hour (24 hour clock).
3. Press 'm+' button repeatedly to set minutes.
4. Press the 'day' button repeatedly to scroll through day options – each single day, all weekdays, weekend and entire week.
5. Press the 'timer' button again. The first 'OFF' indication will be displayed.
6. Repeat steps 2 to 4 (above) to set first OFF time – hours minutes and day.

## ! NOTE !

Ensure that day (or days) for the OFF setting match those for the ON setting.

7. Press the 'timer' button again. The second 'ON' indication will be displayed.
8. Repeat the above procedure to set second ON and OFF times, if required.
9. After setting all required ON and OFF times – press the 'clock' button to return to current time display.

### To check ON/OFF settings

Repeatedly press the 'timer' button to scroll through all ON and OFF settings.

### To change an ON or OFF setting

When a setting is showing on the display – press the 'h+' 'm+' or 'day' buttons to alter the setting as required.

### To delete an ON/OFF setting period

1. Press the 'timer' button until the 'ON' setting for the period to be deleted is displayed.
2. Press the 'h+' button repeatedly until '- -' appears (after 23 hours).
3. Press the 'm+' button repeatedly until '- -' appears (after 59 minutes).
4. Press the 'timer' button and the 'OFF' setting for the period to be deleted is displayed.
5. Repeat steps 2 and 3 (above) to delete the 'OFF' setting.
6. Press the 'timer' button to save the amended command.
7. The deleted ON/OFF period is now available for re-programming if required.
8. Press the 'clock' button to return to the current time display.

### To override the timeswitch

If timeswitch is ON - press the 'override' button to set timeswitch to OFF.

If timeswitch is OFF – press the 'override' button to set timeswitch to ON.

### Operation

At the pre-set immersion heater ON time; the timeswitch contact closes and the switched live output from terminal 4 of the timeswitch energises the contactor coil, closing the contactor contacts and connects the electrical supply from the Immersion heater switch to the immersion heater.

At the pre-set immersion heater OFF time; the timeswitch contact opens and breaks the switched live output from terminal 4 of the timeswitch, de-energising the contactor coil, opening the contactor contacts and disconnecting the electrical supply from the Immersion heater switch to the immersion heater.

## ! WARNING !

Ensure that the dedicated power supply is isolated before commencing any work on the Immersion Programmer relay or switch.


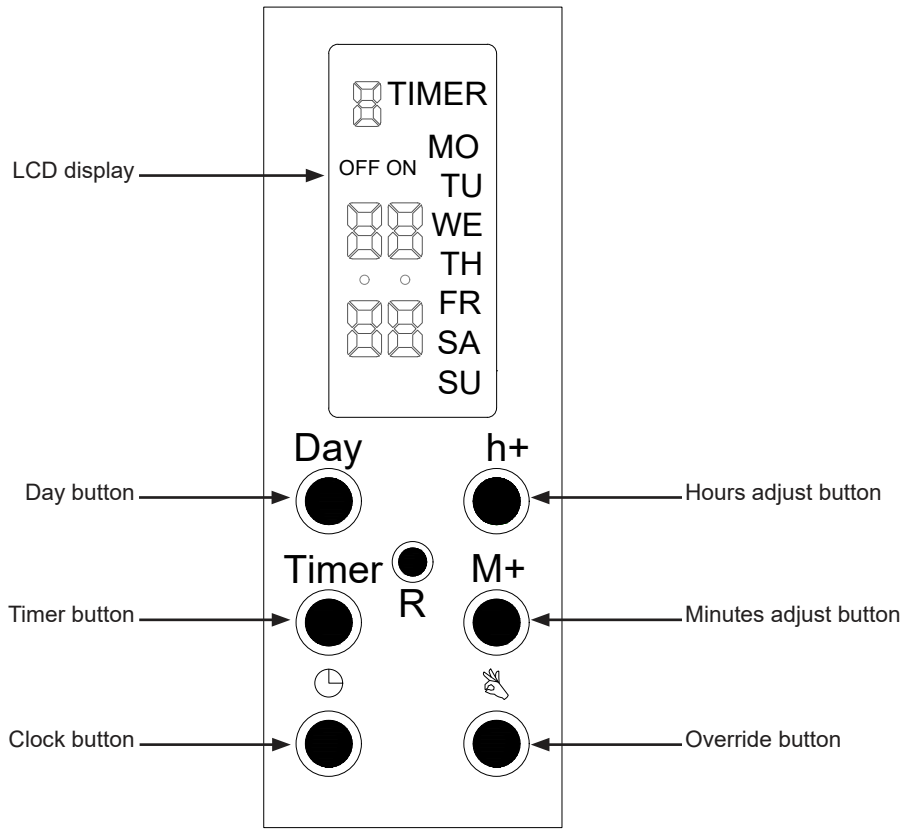


Figure 5-1: Immersion programmer timeswitch

Immersion Heater Switch

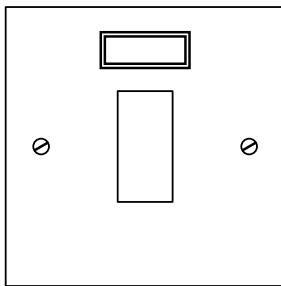

E  
N  
L

**! NOTE !**  
 Earth connections have been excluded for clarity. Ensure all earth connections are made prior to energising.  
 The Grant 7-Day Immersion Programmer contains a power relay and an additional 2-pole isolator and programmable timer.

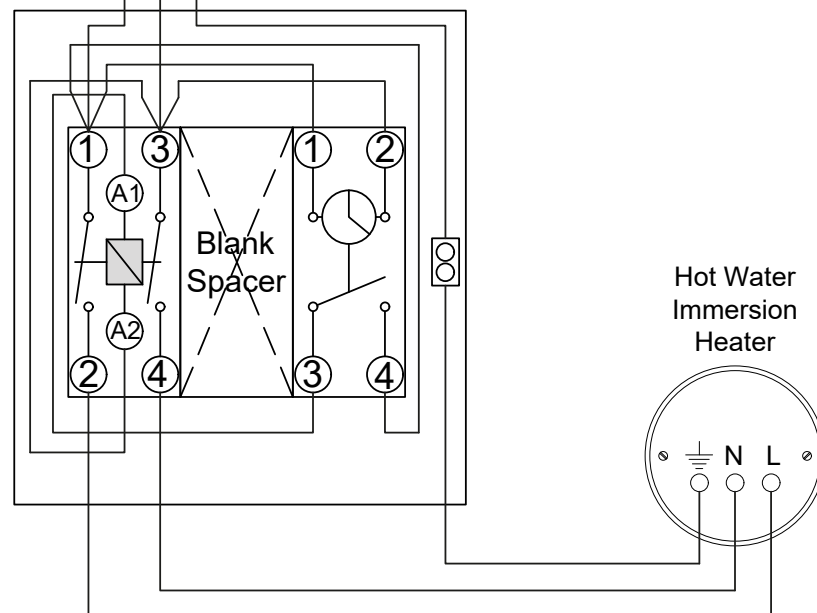


Figure 5-2: Immersion Programmer wiring diagram

# 6 Electrical

## 6.1 WIRING CENTRE

### ! WARNING !

Electric shock may cause serious personal injury or death.  
 All electrical work must be undertaken by a competent person. Failure to observe this legislation could result in an unsafe installation and will invalidate all guarantees.  
 All electrical connections made on-site are solely the responsibility of the installer.

All wiring connections are made to the Terminal PCB (refer to Figure 6-1) and terminal block (refer to Figure 6-2) inside the heat pump.

To access these connections, remove the wiring cover at the right hand end of the heat pump.


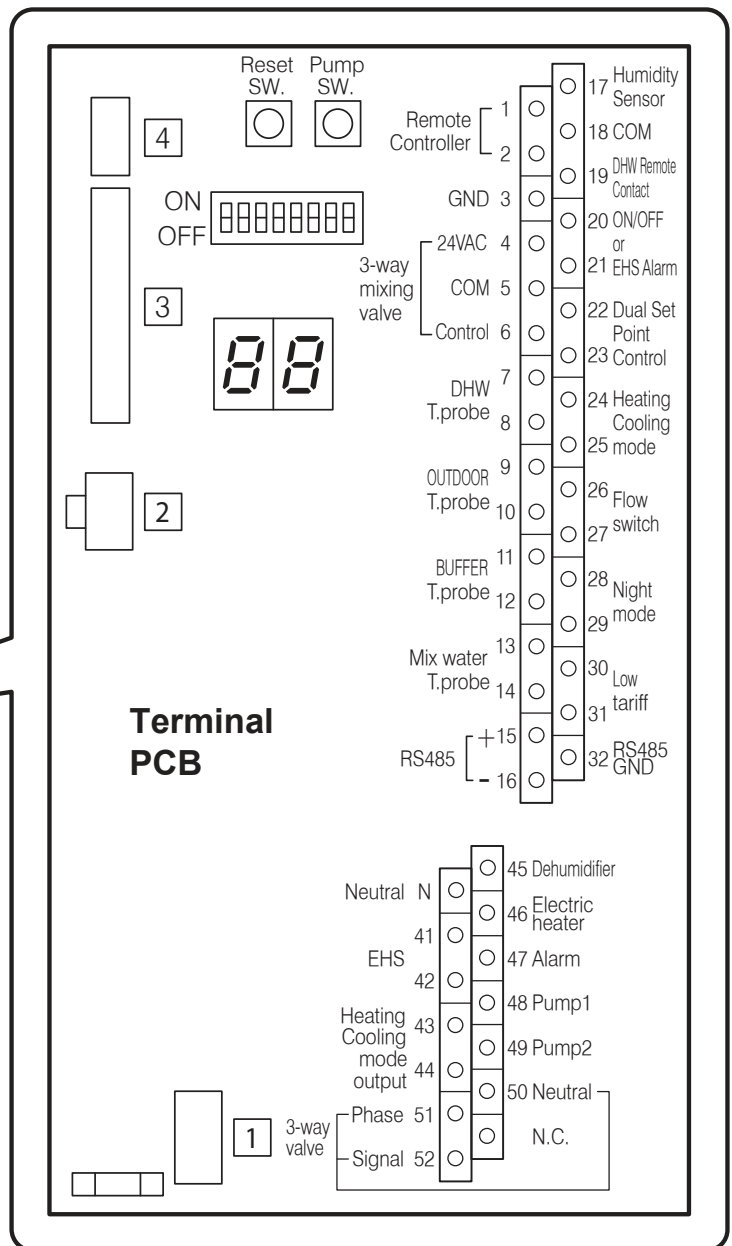


Figure 6-1: Terminal PCB

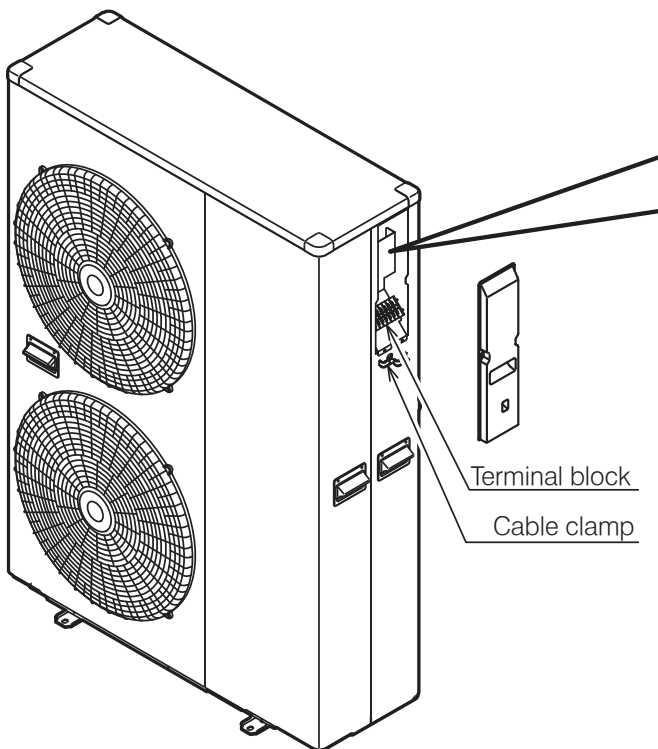

## 6.2 TERMINAL PCB INPUT/OUTPUT

### Serial connections

**Table 6-1:** Terminal PCB remote controller connections

Terminal	Function	Analogue Input	Digital Input
1 - 2 - 3	Remote controller	1=S1, 2=S2, 3=GND	Wire length is maximum 100m with 1mm <sup>2</sup> shielded cables

### Analogue/Digital INPUTS

**Table 6-2:** Terminal PCB input/outputs

Terminal	Function	Analogue Input	Digital Input
19 - 18	DHW remote contact		Voltage free contact 12V10mA
20 - 21	Configurable input -ON/OFF remote contact		
28 - 29*	Night mode - optional		
30 - 31*	Low tariff - optional		

\* Requires external timer


For details of how to access the parameter settings, refer to Section 9.3.

## 6.3 POWER SUPPLY

Use a dedicated power supply with a correctly sized circuit breaker.

The final power supply connection must be made from a weatherproof lockable isolator located outside the building.

The cable should be either armoured or run in a flexible conduit between the isolator and heat pump.

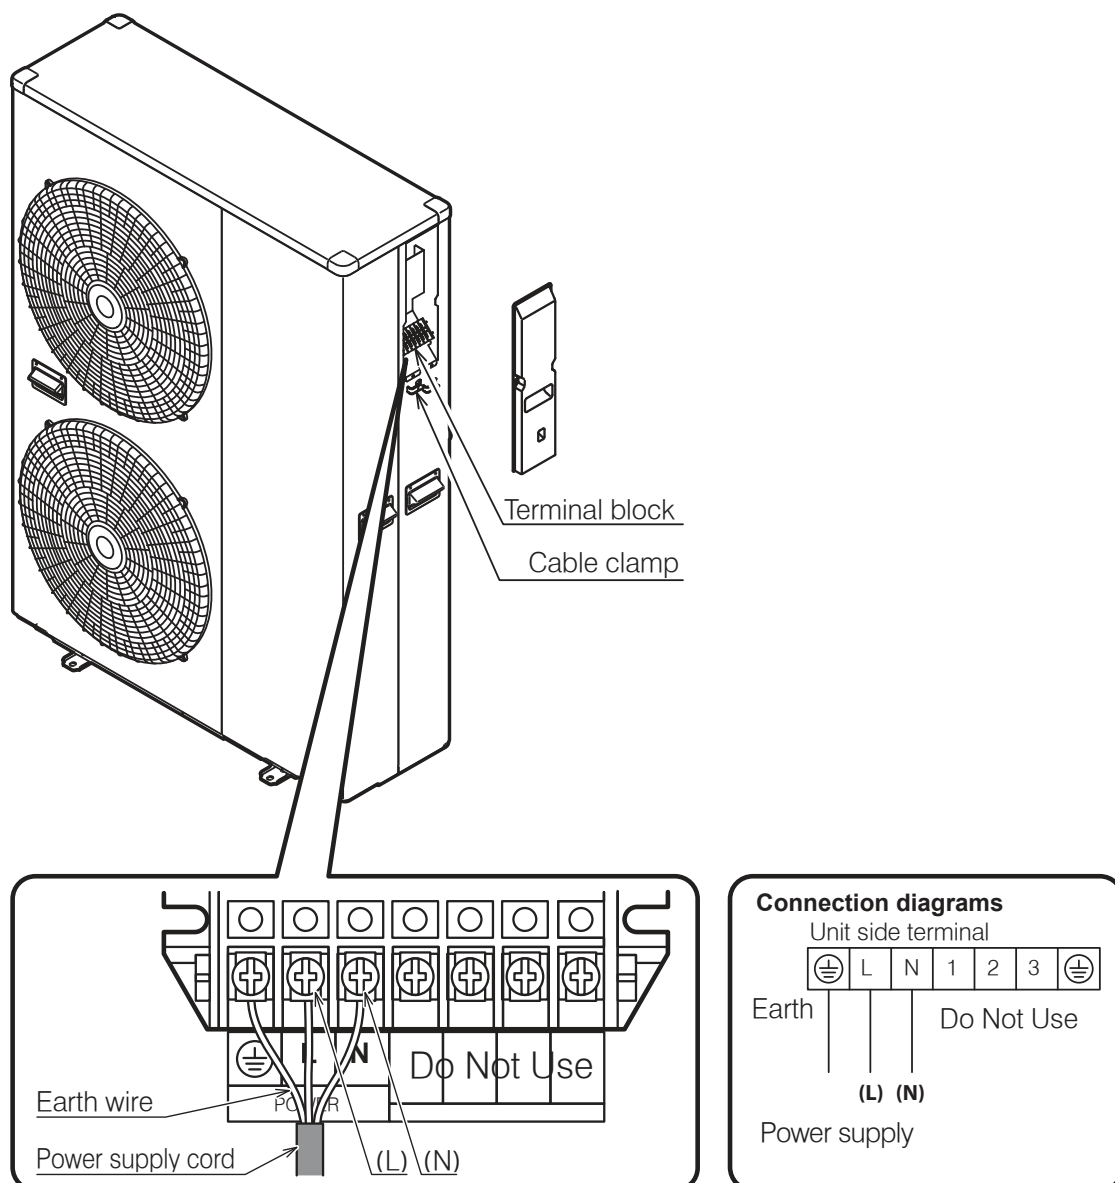

**Figure 6-2:** Power supply

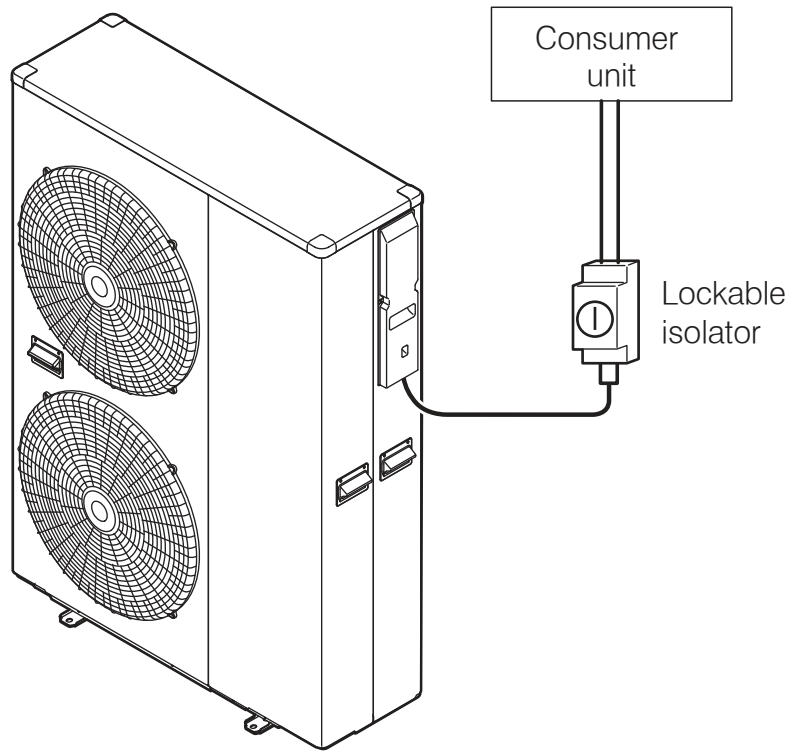


Figure 6-3: Heat pump, isolator and consumer unit

## ! NOTE !

Cable and circuit breakers should be to EN Standards.

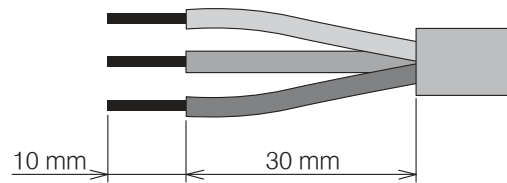


Table 6-3: Power supply cable and breaker capacity

Model	Power supply cable (mm <sup>2</sup> )		Breaker capacity
	Maximum	Minimum	
HPID6R32	4.0	2.5	16A Class C
HPID10R32	4.0	2.5	20A Class C
HPID13R32	6.0	4.0	32A Class C
HPID17R32	6.0	4.0	32A Class C

## ! NOTE !

In the case of long cable runs, selection of correct cable must be done in accordance with BS 7671 (IET Wiring Regulations)

Strip ends of connecting cables in accordance with Figure 6-4.

Crimp terminals with insulating sleeves can be used if required as illustrated in the diagram below for connecting the wires to the terminal block. Stranded conductors shall not be soldered.

- Use a circuit breaker with a 3 mm clearance of air gap between the contacts.
- Be sure to FULLY insert the cable cores into the proper position of the terminal block.
- Faulty wiring may cause not only abnormal operation but also damage to PCB board.
- Fasten each terminal screw securely.
- To check the connections are secure, pull the cable slightly.

Stripped wire :10mm

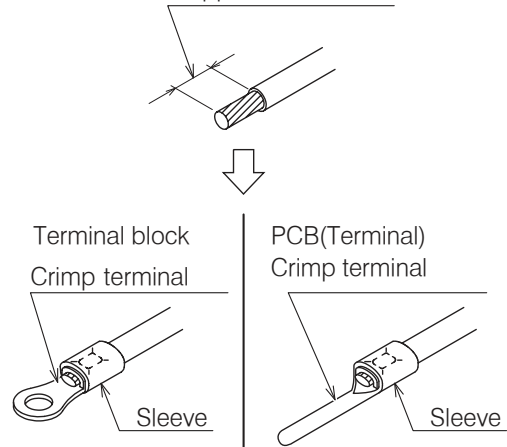


Figure 6-4: Stripping the cables

## ! CAUTION !

It is important that the cable is stripped back 10mm. If shorter, it is possible to clamp down onto the insulation. If longer, a short circuit may occur.

## 6.4 TIGHTENING TORQUES

**Table 6-4:** Tightening torques

Tightening torques	
M4 screw	1.2 to 1.8 N m (12 to 18 kgf cm)
M5 screw	2.0 to 3.0 N m (20 to 30 kgf cm)

# ! WARNING !

**When using crimp type terminals, tighten the terminal screws to the specified torques, otherwise, overheating may occur and possibly cause extensive damage inside the heat pump.**

## 6.5 SOLAR THERMAL

It may be part of the system design to incorporate solar thermal.

This is easily done with the use of an additional two-pole relay.

This can be added to both monovalent and bivalent systems. It is much easier to carry out all these types of systems based on S-plan type controls only.

Y and W type plans can be used, but the need for additional relays is not practical. It is much easier to convert Y and W type plans to S types from the start.

## 6.6 CONNECTION OF HEATING SYSTEM CONTROLS

For information relating to the connection of the heating system controls, refer to Figure 6-5.

## 6.7 CONNECTION OF REMOTE CONTROLLER

For information relating to the connection of the remote controller, refer to Section 7.

## 6.8 GRANT INTERFACE RELAY BOX

The Grant EP002 heat pump interface box is designed to provide the volt free switching required by the Aeronas<sup>3</sup>, using the heating and hot water switched live outputs from the heating system wiring centre.

This box can be installed next to the wiring centre. Alternatively, it can be located nearer to the Aeronas<sup>3</sup> heat pump, but not installed externally.

Refer to Figure 6-5 for a system control wiring diagram including the connection of the interface relay box.

The EP002 Interface Relay Box is available to purchase from Grant UK (product code: EP002).

The EP002 Interface Relay Box is also included in Grant UK Aeronas<sup>3</sup> ASHP Installation Pack C. Refer to Appendix C.

## 6.9 GRANT EP001 WIRING CENTRE

The Grant EP001 wiring centre has been designed as a simple and convenient means of making all system control connections for up to four space heating zones, plus one hot water zone, in one wiring centre, with optional capability to provide both volt free outputs and automatic DHW priority.

The EP001 Wiring Centre is available to purchase from Grant UK (product code: EP001) and is also included in Grant UK Aeronas<sup>3</sup> ASHP Installation Pack A (refer to Appendix A).

For further information on the Grant EP001 wiring centre, please refer to Grant UK DOC 0176 (supplied with the wiring centre).

# ! NOTE !

**All earth connections for electrical components connected to the EP001 wiring centre should be made to the brass earth bar on the inside of the EP001 wiring centre enclosure.**

## 6.10 HOT WATER PRIORITY RELAY

The Grant Hot Water Priority Relay (product code: HPWPR1) ensures that there can be no demand for space heating and hot water at the same time.


When the control system is wired as demonstrated in Figure 6-5, any demand from the DHW timer and cylinder thermostat for hot water will activate the relay, immediately interrupting any heating demand from the digital room thermostats. This will remain interrupted until the demand for hot water stops - either the cylinder thermostat is satisfied or there is no output from the DHW timer.

## 6.11 WIRING DIAGRAMS


An S-Plan Plus type System Control Wiring diagram for a Grant Aeronas<sup>3</sup> heat pump installation, using the Grant EP002 heat pump interface and Grant Hot Water Priority Relay can be seen in Figure 6-5.

More control system wiring diagrams are available in Appendices A, B and C at the back of these installation instructions.


Refer to Appendix D for wiring diagrams of the units in the Aeronas<sup>3</sup> heat pump range.

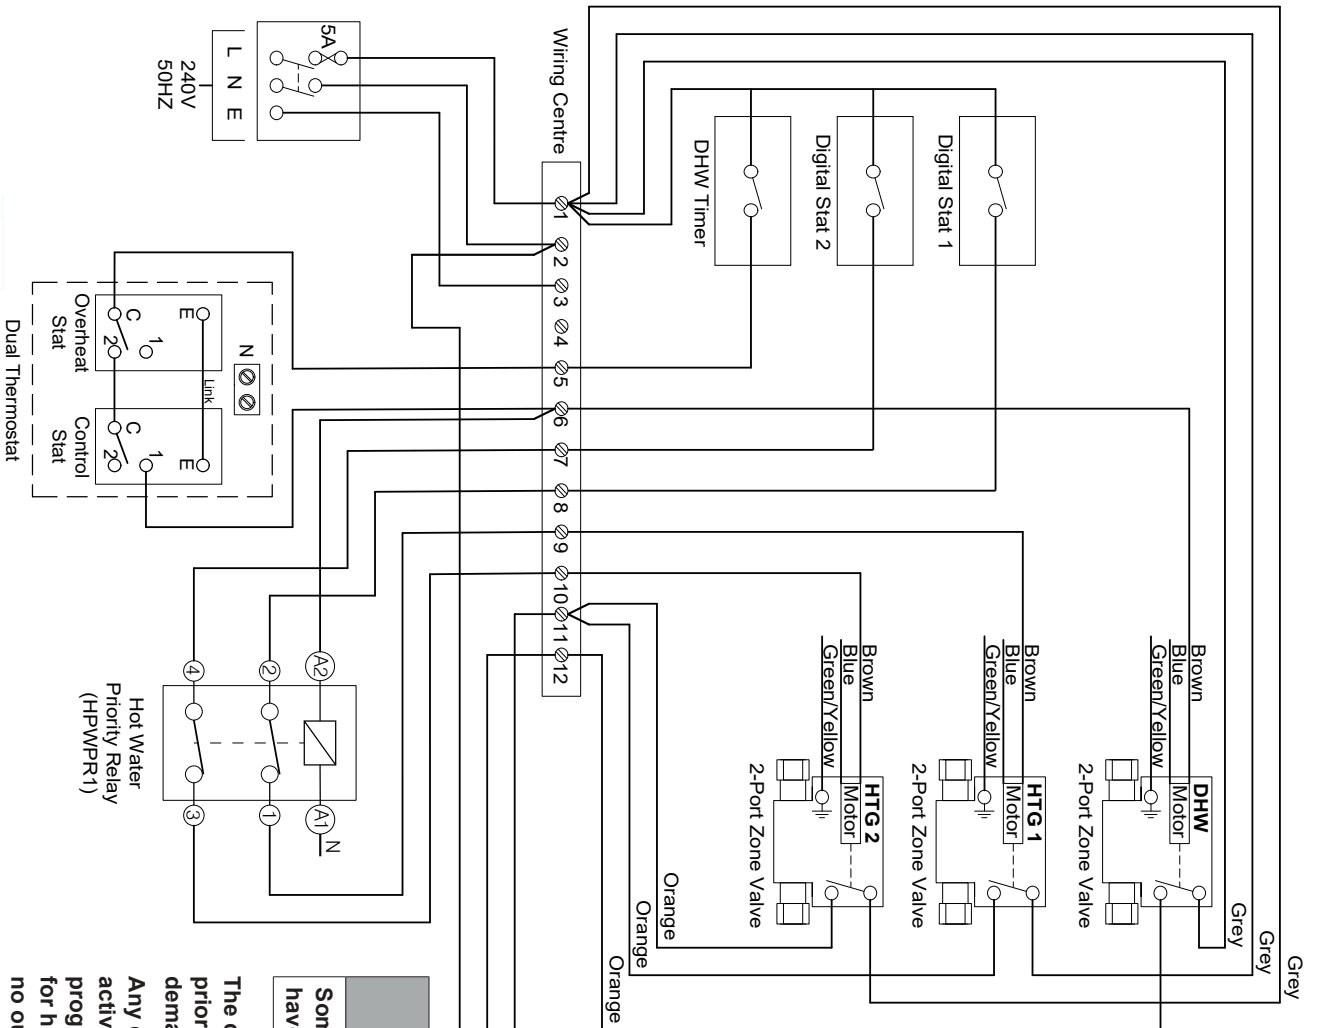

Terminals	
19	Hot water
20	Heating
18 and 21	Common

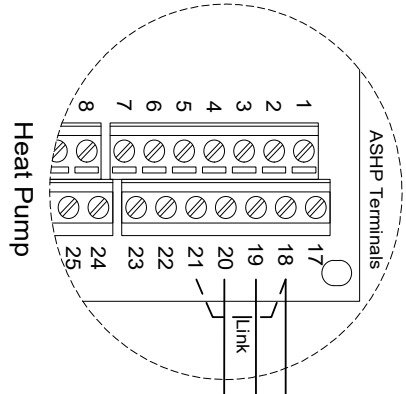

**! NOTE !**  
 This volt free remote contact is provided by the Grant EP002 Interface relay box. Refer to Section 6.8.

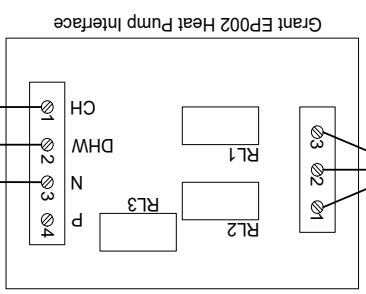

**! NOTE !**  
 Some Neutral and Earth connections have been excluded for clarity.

The control system shown in this diagram includes the Grant hot water priority relay (product code: HPWPR1). This ensures that there can be no demand for space heating and hot water at the same time. Any demand from the DHW timer and cylinder thermostat for hot water will activate the relay, immediately interrupting any heating demand from the programmable room stats. This will remain interrupted until the demand for hot water stops - either the cylinder thermostat is satisfied or there is no output from the DHW timer.

Figure 6-5: S-plan plus system connection diagram

# 7 Remote Controller

## 7.1 REMOTE CONTROLLER

The remote controller is used to:

- switch the heat pump on and off
- display room temperature
- display outdoor temperature
- display day/time (refer to Section 9.2 for setting the day and time)
- access and check/adjust remote controller parameters.
- to access and check/adjust the heat pump control parameters (refer to Section 9 and also Appendix D)

The remote controller will also display any fault error codes should there be a fault condition. Refer to Section 11.

It can also be used view the heat pump operating conditions at any point in time using the Monitor Display function. Refer to Section 10.7.

## 7.2 INSTALLATION REQUIREMENTS

### Notes for the remote controller installation

The remote controller should be installed in a convenient position where the user can easily access it to view the display and operate the on/off switch when necessary.

It is a requirement of MCS installations that any fault indication (e.g. the fault error codes displayed on the remote controller screen) should be visible to the user.

- Do not install the remote controller in damp conditions such as in the bathroom. The remote controller is not waterproof.
- Never install above a cooker or boiler or any other combustion device. This would cause breakdown of electrical parts and deformation of the outer case.
- Do not install in any location subject to steam.
- Do not install in any location subject to direct sunlight.
- Install the remote controller a convenient position where it is out of the reach of children.
- The remote controller can be installed in the same room as underfloor heating.
- Do not install in any location where industrial chemicals are used (ammonia, sulphur, chlorine, ethylene compounds, acids, etc.).
- Route the remote controller cable in such a way that is not in contact with heat.
- Do not damage the remote controller cable and use cable conduit to avoid the damage.

## ! WARNING !

The remote controller must NOT be fitted inside the heat pump casing.

## 7.3 INSTALLING THE REMOTE CONTROLLER

- The connection between the heat pump and the remote controller is low-voltage, so it does not require electrical qualifications, but do follow technical standards for electrical equipment in making this installation.
  - Isolate the main power supply to the heat pump before connecting the remote controller cable.
1. Slide the mounting plate downward to remove from the remote controller (refer to Figure 7-1).

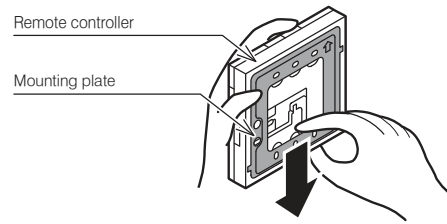


Figure 7-1: Removing the mounting plate

2. Fix the mounting plate to the wall.

### When the wiring is hidden

1. Before starting the remote controller installation, pass the wiring conduit through the inside of the wall (refer to Figure 7-2).
2. Pull out the Remote controller cable, passing it through the wiring conduit and through the wiring hole in the mounting plate.

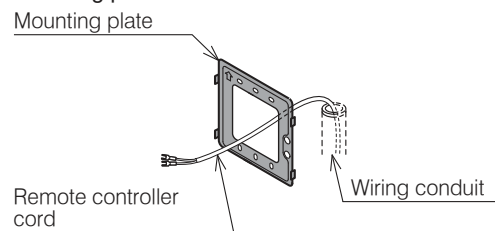


Figure 7-2: Wiring hidden

### When the wiring is exposed

1. Fix the mounting plate to a solid position on the wall with the two screws provided (refer to Figure 7-3).

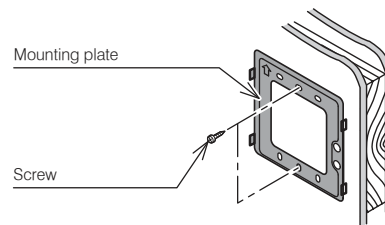


Figure 7-3: Wiring exposed

- Do not over tighten the screws as this can deform or break the screw hole of the mounting plate.
  - Use the wall plugs if the mounting plate is to be fixed by screws to tile, concrete or mortar.
  - The remote controller is connected using the two screw terminals on the rear of the controller. Refer to Figure 7-5.
3. Connect the remote controller cable to the terminal on the rear of the remote controller:
    - Hook the wires under the clamp - locating it onto the four hooks
    - The remote controller has no polarity so wires can be connected either way round.
  4. Install the remote controller.  
Fix the remote controller to the mounting plate by sliding it downwards.
  5. After installing the remote controller, check the fixing is secure. If the mounting plate is not stable, tighten the screws further.

## ! WARNING !

Do not use a power screwdriver. It can damage the screw hole which can cause contact failure.



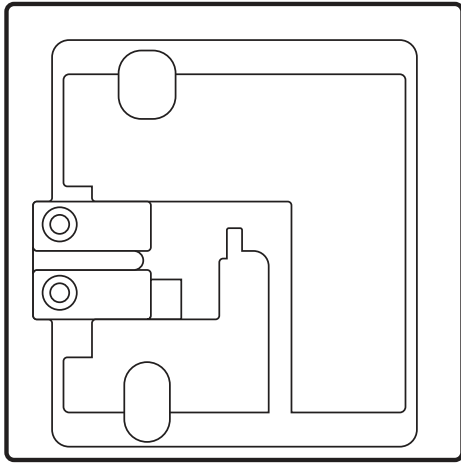


Figure 7-4: Remote controller (rear)

**When the wiring is embedded**

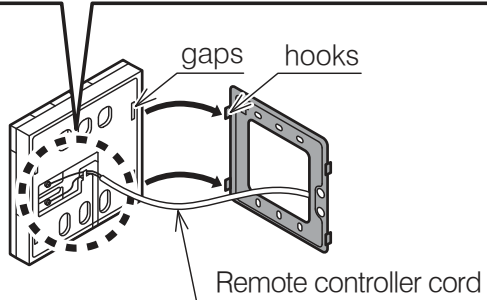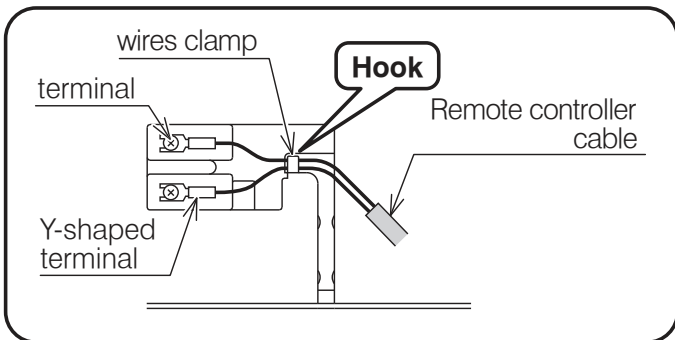

**When the wiring is exposed**

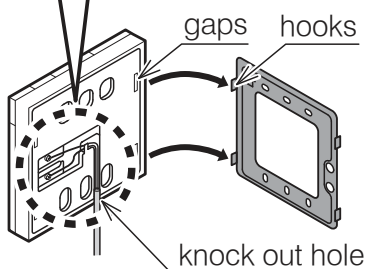
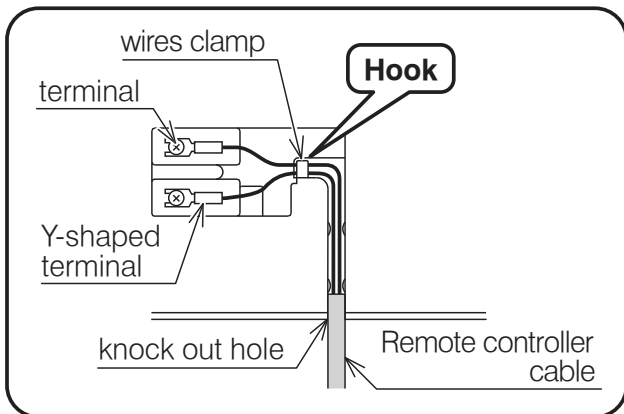


Figure 7-5: Connecting remote controller cable

**7.4 CONNECTING THE REMOTE CONTROLLER TO THE HEAT PUMP**

1. Isolate the mains power supply for the heat pump from the power source.  
Do not connect the remote controller cable with the power on.
2. Remove the wiring cover.
3. Connect the remote controller cable to terminals 1 and 2 on the Terminal PCB. The remote controller has no polarity so it does not matter which wire of the remote controller cable is connected to + and -. Take care not to let your screwdriver etc. touch any of the other electronic parts. Do not use a power driver, it can damage the terminal screw holes.
4. If shielded wire is used, connect it to terminal 3 (GND) on the Terminal PCB.
5. Securely fasten the remote controller cable with the cord fastening fitting. Leave the display board waterproof cover removed.

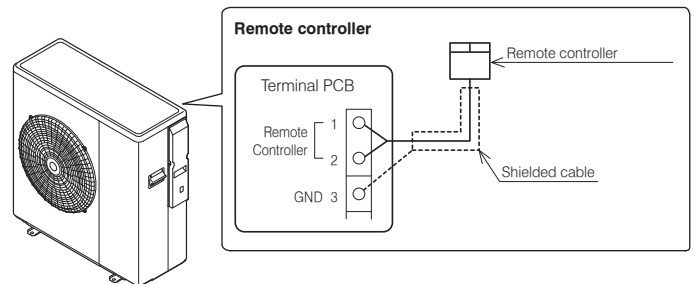


Figure 7-6: Connecting the remote controller to the heat pump

An 8 metre cable is supplied with the heat pump.

The maximum length of the remote controller cable is 100 metres.

Use shielded wire where the length is 30 metres or longer and connect the shielded wire to terminal 3 (GND) on the Terminal PCB.

Table 7-1: Remote controller cable

Distance	Cable (mm <sup>2</sup> )	Shield
~ 30 metres	Minimum 0.5	Non-shielded
30 ~ 100 metres	Minimum 1.0	Shielded

## 7.5 BUTTONS

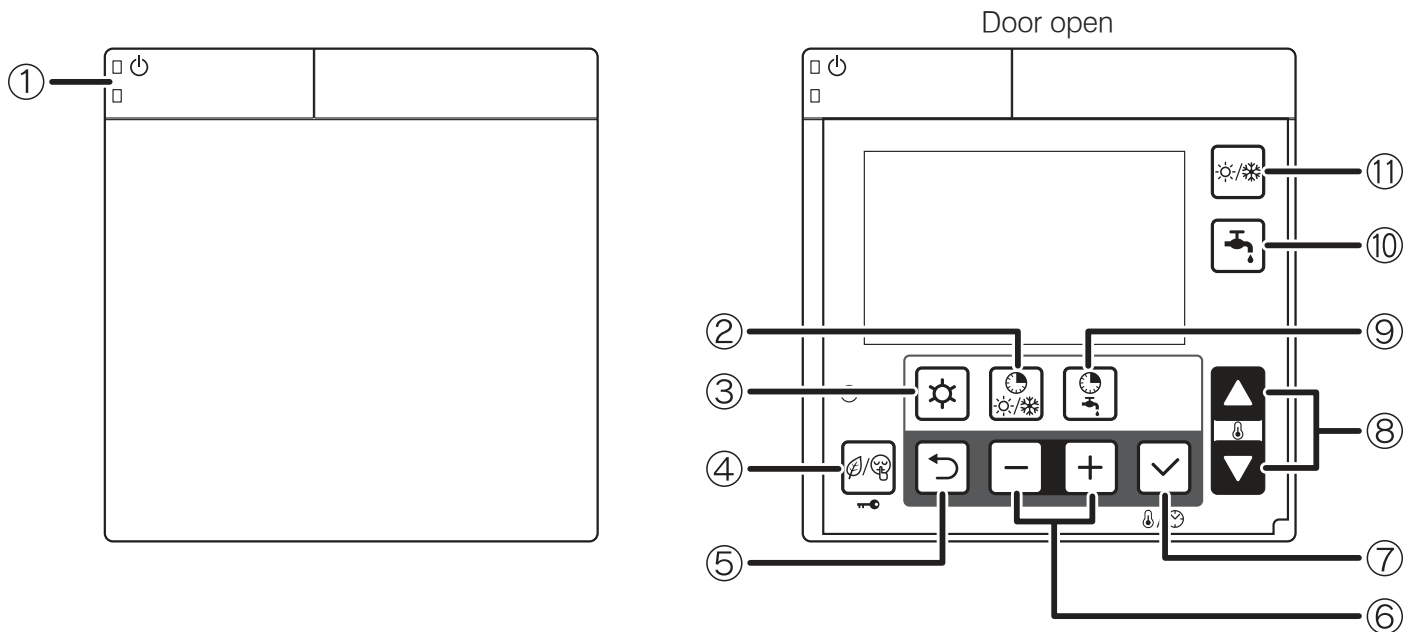


Figure 7-7: Remote controller (buttons)

Table 7-2: Remote controller (buttons)

No.	Button name	Description
1	ON/OFF	Push and hold the button for 3 seconds to turn ON and turn OFF the heat pump. The green LED on the ON/OFF button is lit when the heat pump is ON. The red LED on the ON/OFF button blinks when an error alarm on the heat pump occurs.
2	N/A	This button is reserved for future products - pressing this button will result in an audible 'beep' indicating no function.
3	Menu	Programming: dedicated button for accessing the menu/parameters. Push and hold the Menu button for 3 seconds to access the user level.
4	Timer for low tariff/night mode (key lock)	Refer to Sections 8.7 and 8.8 for details of low tariff/night mode operation. Push the Low tariff/Night button for 3 seconds to lock the button. When Key Lock is active, push 3 seconds to unlock. When key Lock is active, it is only possible to turn OFF the heat pump with the ON/OFF button. For low tariff/night mode function, an external timer must be connected.
5	Return	Return button in parameter programming mode. Push the Return button for 3 seconds to return to the normal display mode.
6	-,+	For parameter setting, select or return to the parameter group or code. Push the Menu,-,+ button together for 3 seconds to access the installer level. During error code display, push - and + button together for 3 seconds to reset display.
7	Set (confirm)	Push the Set button: -During the programming to save the setting. -Change display : Clock → Room set temperature Time setting can be set by remote controller only Push the Set button for 3 seconds to set the current time (day, hour, minutes). Refer to Section 9 (Commissioning)
8	Up, down	For parameter setting, change the parameter group and code numbers. Please note: this is not to be used for setting the room temperature control.
9	N/A	This button is reserved for future products - pressing this button will result in an audible 'beep' indicating no function.
10	N/A	This button is reserved for future products - pressing this button will result in an audible 'beep' indicating no function.
11	N/A	This button is reserved for future products - pressing this button will result in an audible 'beep' indicating no function.

## 7.6 DISPLAY PANEL

For guidance on the operation and setting of the remote controller, refer to Section 9 (Commissioning).

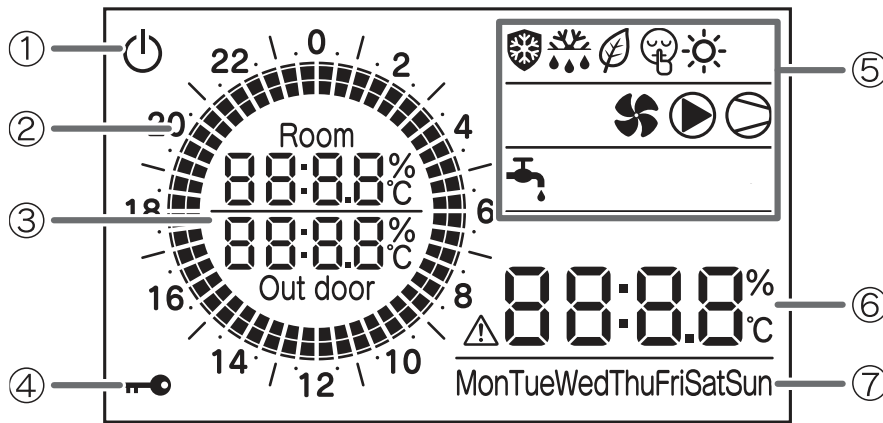


Figure 7-8: Remote controller (display panel)

Table 7-3: Back light display

Back light display	
ON	Door of remote controller open
OFF	Door of remote controller closed
	or Door of remote controller open but no operation of buttons for 60 seconds

To adjust the back light operation, refer to Section 9.8.

Table 7-4: Display panel

No.	Icons	Description
1		Power is ON, but ON/OFF switch is OFF (the heat pump is stopped)
2		Indicates current time of day.
3		Room air temperature, Outdoor temperature
4		Key lock is active
5		Frost protection is active
		Defrost cycle is active
		Low tariff mode is enabled For low tariff mode, an external timer must be connected. Refer to Section 6.
		Night mode is enabled For night mode, an external timer must be connected. Refer to Section 6.
		When this symbol is lit, heating mode is enabled. When this symbol is flashing, the heat pump is in heating mode, however the heating is stopped for the production of DHW which has priority
		Heat pump fan is active
		System pump is active
		Compressor active Flashing: compressor delay
		Indicates DHW demand On: demand
6		Display alarm icon, and indicate error code Clock, Parameters value
7	MonTueWedThuFriSatSun	Day of the Week



# 8 Operation

## 8.1 HEAT PUMP OPERATION

The heat pump control is based on:

1. Outgoing water temperature (measured by outgoing water temperature sensor on heat pump)
2. Thermal store temperature

During heating operations, parameter 4100 is set to 1. The control of the heat pump is based on the outgoing water temperature.

The operation by water temperature can be “outgoing water temperature” or “thermal store temperature”. If parameter 5111 is set to “enable” for thermal store temperature sensor. In this case the operation will be based on thermal store temperature.

Set the parameter correctly for enable/disable of thermal store (parameter 5111), the main water pump setting (parameter 4200). Refer to Table 8-1.

**Table 8-1: Parameters**

	Parameter 5111 thermal store temperature	Parameter 4100 heat pump ON/ OFF	Parameter 4200 main water pump
Outgoing water temperature	0=disable	1=Water set point	0=always ON 2=detect cycle
Thermal store temperature	1=enable	0=room set point	0=always ON 1=thermal store temperature 2=detect cycle

For further information, refer to Section 3.9 (volumiser tanks).

### 8.1.1 HEAT PUMP CONTROLLED BASED ON OUTGOING WATER TEMPERATURE

Based on the outgoing water temperature setting, the compressor is controlled and turned ON/OFF.

#### Start of Operation

When the outgoing water temperature is below the water set point, the heat pump is turned ON.

Heating : Outgoing water temp  $\geq$  Water set point (parameter 2100~2105) – Hysteresis (parameter 2141)

#### Compressor Control

The compressor is controlled so that the Outgoing water temperature can reach the water set point.

#### When the water setpoint temperature is reached, compressor is stopped

With the minimum compressor frequency, if the Outgoing water temperature is in the following conditions, or if the Outgoing water temperature reaches the water set point to protect heat pump, then compressor shall be turned OFF.

Heating : Outgoing water temp.  $\geq$  Water set point (parameter 2100~2115) +1°C

Outgoing water temp.  $\geq$  60.5°C

**Table 8-2: Parameters**

Level	Parameter		Function description	Display and input value				Remarks
	Group	Code		Default	Min.	Max.	Unit	
I	41	00	The heat pump turns ON/OFF based on 1=water set point	1	0	1	-	To be set to the following combinations parameter 5111=0 →Parameter 4200=0 or 2 parameter 5111=1 →Parameter 4200=0 or 1 or 2
I	42	00	Type of configuration of main water pump 0=always ON 1=ON/OFF based on buffer tank temperature 2=ON/OFF based on detect cycles	0	0	2	-	
I	51	11	Terminal 11-12: thermal store temperature probe 0=disable 1=enable	0	0	1	-	

For details of how to access the parameter settings, refer to Section 9.3.

#### Compressor OFF→ON control

When the Outgoing water temperature reaches the set point and after the compressor is turned OFF, or when the conditions below are met, the compressor shall be turned ON.

However, the compressor is not turned ON during 3 minutes OFF-ON waiting time.

### 8.1.2 HEAT PUMP CONTROLLED BASED ON THERMAL STORE TEMPERATURE

In order to reach the thermal store set point, compressor frequency shall be controlled so that outgoing water temperature can reach the maximum temperature in Heating mode (60°C) And, the compressor is turned ON/OFF based on thermal store set point also being reached.

#### Start of Operation

When the Outgoing water temperature does not reach the water set point, heat pump is turned ON.

#### Compressor Control

The compressor is controlled to reach the maximum flow temperature in Heating mode (60°C).

#### When the water set point is reached, compressor is stopped

The compressor shall be turned OFF if the thermal store set point is reached, or if the Outgoing water temperature is in the following conditions, or the Outgoing water temperature reaches the set point to protect heat pump.

Heating: thermal store temperature  $\geq$  thermal store set point (parameter 2161)

Outgoing water temp.  $\geq$  Maximum Outgoing water set point (60°C) +1°C

Outgoing water temp.  $\geq$  62.5°C

#### Compressor OFF→ON control

When the thermal store temperature reaches the set point, or when the conditions below are met after the compressor is turned OFF due to the set point protecting the heat pump, the compressor is turned ON.

However, the compressor is not turned ON during 3 minutes OFF-ON waiting time.

Heating: thermal store temp.  $\leq$  thermal store set point (parameter 2161) – Hysteresis (Parameter 2141)

Outgoing water temp.  $\leq$  Water set point (60°C) – Hysteresis (parameter 2141)

Outgoing water temp.  $\leq$  57.5°C

Based on Water Temperature

### Heating mode

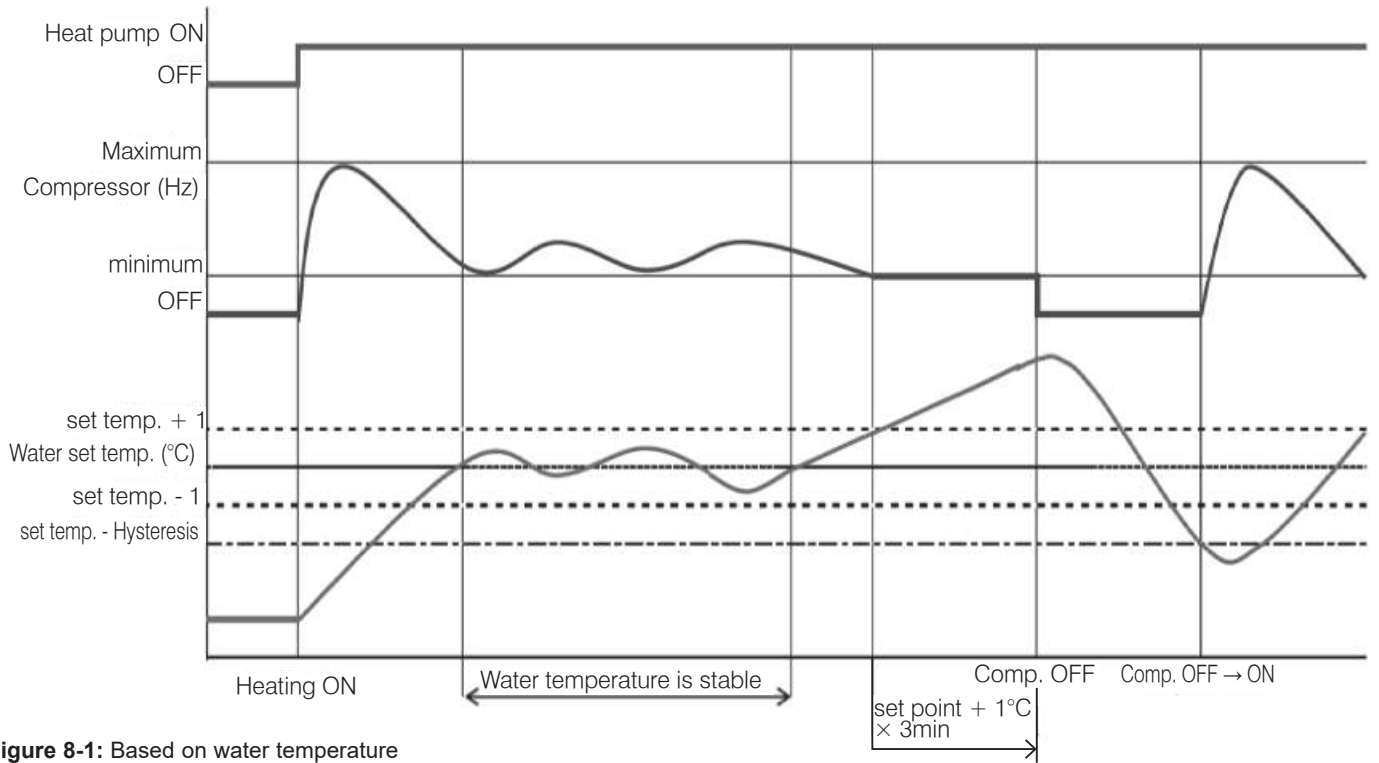


Figure 8-1: Based on water temperature

## 8.2 WEATHER COMPENSATION

### 8.2.1 WATER TEMPERATURE CONTROL POINT

The water temperature control point is based on a variable set point calculated automatically using climatic (weather compensation) curves as described below.

### 8.2.2 HEATING CLIMATIC CURVES

The regulation of the temperature of the outlet water from the heat pump, in normal winter heating operation, is based on the climatic curves.

The basic logic is to modulate the temperature of the outlet water depending on the outdoor air temperature.

**During commissioning, the four climatic curve parameters must be checked and the default values adjusted to suit the design parameters for the system in question.**

For example:

Maximum outgoing (flow) temperature in heating mode (Tm1) – Parameter 2102, must be set to the design maximum flow temperature for the system.

Minimum outdoor air temperature (Te1) – Parameter 2104, must be set to the same value as used in the design heat loss calculations for the building.

### 8.2.3 FIXED SET POINT

The heat pump is supplied with parameter 2100 set to a default setting of 1 (Climatic curve operation).

For the heat pump to operate based on a fixed outgoing water set point parameter 2100 must be reset to 0 (fixed set point).

With parameter 2100 set to 0, the outgoing water fixed set point is determined by parameter 2101 (factory default value = 45°C).

To stop operation of the weather compensation function, and set the outgoing water temperature control to 'fixed set point', set Parameter 2100 to 0 and parameter 2101 to the required 'fixed set point' value.

## ! NOTE !

**If the installation is receiving an RHI payment, do NOT set the outgoing water control to 'fixed set point' as the weather compensation function MUST be operational.**

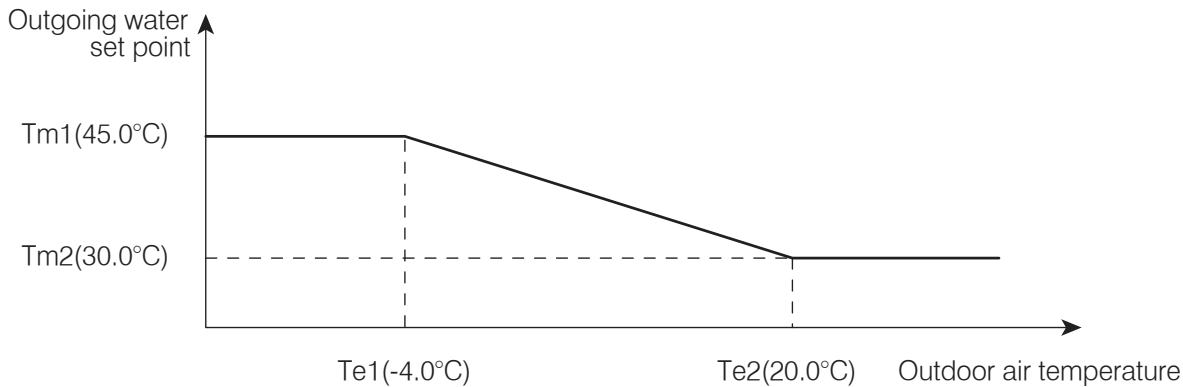


Figure 8-2: Climatic curves

Table 8-3: Outgoing water temperature parameters

Level	Parameter		Function description	Display and input value				Remarks
	Group	Code		Default	Min.	Max.	Unit	
I	21	00	Enable outgoing water set point 0=fixed set point* 1=climatic curve	1	0	1	-	
I	21	01	Fixed outgoing water set point*	45.0	23.0	60.0	0.5°C	
I	21	02	Maximum outgoing water temperature in Heating mode (Tm1)	45.0	23.0	60.0	0.5°C	
I	21	03	Minimum outgoing water temperature in Heating mode (Tm2)	30.0	23.0	60.0	0.5°C	
I	21	04	Minimum outdoor air temperature corresponding to maximum outgoing water temperature (Te1)	-4	-20.0	50.0	0.5°C	
I	21	05	Maximum outdoor air temperature corresponding to maximum outgoing water temperature (Te2)	20.0	0.0	40.0	0.5°C	
I	21	41	Hysteresis of water set point in heating	8.0	0.5	10.0	0.5°C	

\* Fixed set point - thermal store require temperature sensor

For details of how to access the parameter settings, refer to Section 9.3.

### 8.3 WATER PUMP MANAGEMENT

#### 8.3.1 MAIN WATER PUMP

Fundamentally, the ON/OFF of the main water pump links to ON/OFF of the compressor, but the setting ON/OFF of the pump during compressor OFF states, due to reaching the room set point shall be set in the following parameters:

- Always ON, apart if any alarms are active or if the heat pump is in OFF mode
- ON/OFF based on thermal store temperature
- ON/OFF based on detect cycle

If the thermal store temperature probe is enabled, the main water pump turns ON if the thermal store temperature is lower than outgoing water set point (fixed or calculated by climatic curve) – hysteresis, in heating mode. When the thermal store temperature reached the set point (fixed or calculated by climatic curve), the main pump turns OFF.

#### 8.3.2 CONTINUOUS OPERATION “ALWAYS ON”

When the heat pump is set to “heating” (i.e. not in standby) the main water pump will always remain ON.

When the heat pump is set to standby, the pump will remain OFF and will only be started in the conditions described in paragraph in Section 8.4 (Frost protection).

#### 8.3.3 DETECT OPERATION “DETECT CYCLE”

In order to minimise energy consumption, the main water pump can be configured to start only when there is demand from the temperature controller.

The pump will be activated periodically, for a time set by parameter. Five seconds before the cycle ends, if the outgoing water temperature is lower than “water set point – hysteresis”, the compressor will be activated and the pump will remain ON. When

the compressor stops, the pump will continue running for a time set by parameter, after which it will be switched OFF and will repeat the detect cycles.

The interval between one detect cycle and the next is set by a parameter.

Refer to Figure 8-3 (detect cycle).

! NOTE !

The ‘detect cycle’ is allowed only for space heating. If the heat pump is working to produce DHW the main water pump has to run continuously.

#### 8.3.4 WARM WEATHER OPERATION

At ambient temperatures exceeding the maximum outdoor air temperature setting (Te2) – Parameter 2105, the weather compensation function will not allow the heat pump to operate to provide space heating.

**To override this and force the operation of the heat pump (e.g. to check operation or commission the heat pump) parameter 2100 must be set to 0. With this setting the heat pump will operate at a fixed set point of 45°C irrespective of the outdoor air temperature.**

If the weather compensation function is required, Parameter 2100 must be reset to 1 once the heat pump has been commissioned or its operation checked.

! NOTE !

The weather compensation function **MUST** be operational if the installation is receiving an RHI payment.

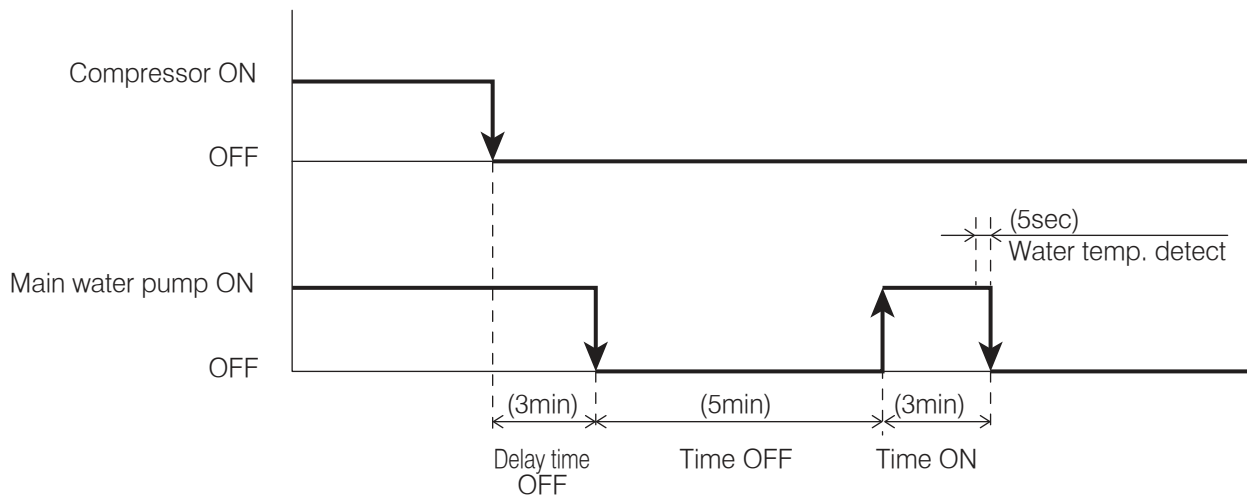


Figure 8-3: Detect cycle

Table 8-4: Detect cycle parameters

Level	Parameter		Function description	Display and input value				Remarks
	Group	Code		Default	Min.	Max.	Unit	
I	42	00	Type of configuration of Main water pump 0=always ON 1=ON/OFF based on thermal store temperature 2=ON/OFF based on Detect	0	0	2	-	To be set to the following combinations Parameter 5111=0 →Parameter 4200=0 or 2 Parameter 5111=1 →Parameter 4200=0 or 1 or 2
I	42	01	Time ON main water pump for detect cycle	3	1	15	1min	
I	42	02	Time OFF main water pump	5	5	30	1min	
I	42	03	Delay time OFF main water pump from OFF compressor	3	1	15	1min	
I	51	11	Terminal 11-12 : thermal store temperature probe 0=disable 1=enable	0	0	1	-	

For details of how to access the parameter settings, refer to Section 9.3.

### 8.3.5 UNBLOCK PUMP FUNCTION

When the heat pump is stopped for more than 48 hours (parameter 4211), the water pump turns ON for 5 seconds (parameter 4212) to prevent seizing up and increases the life time of the pump.

In the case of the main pump and the additional pump, the down time after the previous operation stop is counted individually. Furthermore, the pump operation time can be set individually to prevent seizing.

Level	Parameter		Function description	Display and input value				Remarks
	Group	Code		Default	Min.	Max.	Unit	
I	42	11	OFF time for unblock pump function start	48	0	240	1 hr	
I	42	12	Time ON main water pump for unblock pump function	5	0	10	1 sec	

Table 8-5: Unlock pump function parameters

### 8.3.6 PUMP OUTPUT ADJUSTMENT FUNCTION

Adjust the main water pump output so that the required flow rate is produced in the heating system.

Using the DIP SW on the Terminal PCB, three level settings are possible.

! NOTE !

**An excessively low flow rate may cause problems including reduced capacity and poor circulation.**

To select one of the three performance curves, set DIP SW5 and DIP SW6 as shown in Figure 8-4.

Factory default setting:

DIP SW5 and DIP SW6 set to OFF (level 3)

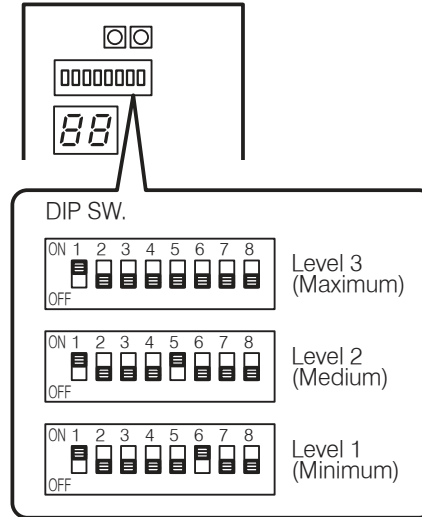


Figure 8-4: Pump output adjustment flow rate - DIP switches

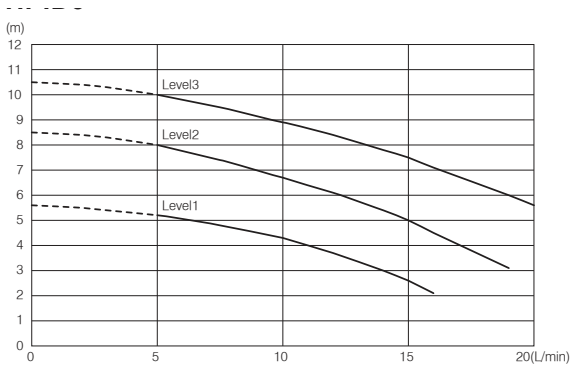


Figure 8-5: Pump output adjustment flow rate - HPID6R32

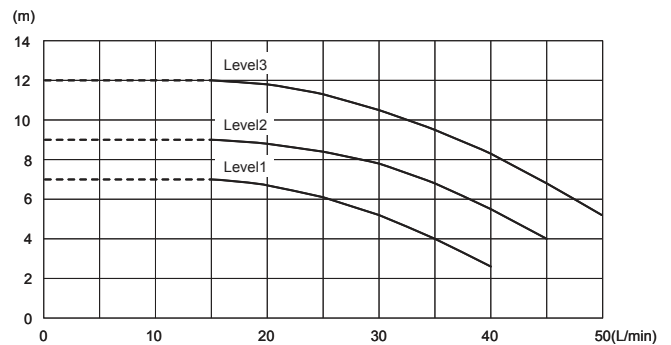


Figure 8-7: Pump output adjustment flow rate - HPID13R32

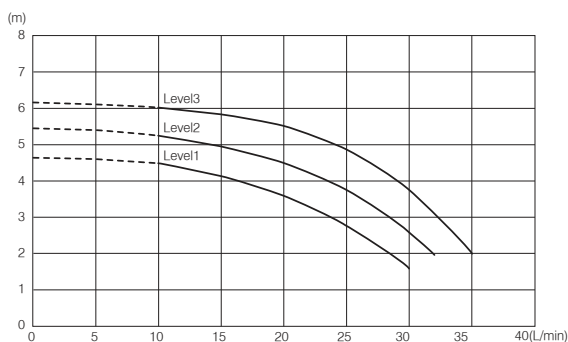


Figure 8-6: Pump output adjustment flow rate - HPID10R32

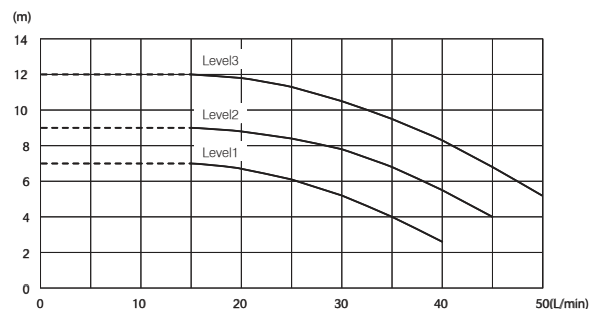


Figure 8-8: Pump output adjustment flow rate - HPID17R32

# ! CAUTION !

The water flow rate must be sufficient to achieve an 8K difference between the flow and return water temperatures.

## 8.3.7 ADDITIONAL WATER PUMP

Parameter 5148 can be utilised to use an additional water pump.

Parameter 4220 can be used to set the desired type of pump operation as follows:

1. Depending on main water pump setting
2. Depending on main water pump setting but always OFF when DHW mode is activated
3. Always ON apart from if any alarms are active or if the heat pump is in OFF mode

Option 2 is recommended for the majority of applications.

The connection between neutral and terminal 48 (Pump1) is limited to 1 amp, therefore a relay must be installed if an additional water pump is used. Refer to Figure 8-9.

# ! NOTE !

In reference to option 3 in Section 8.3.7 (and parameter 4220 in Table 8-6), 'OFF' mode means there is a power supply to the heat pump but there is no heating or hot water demand.

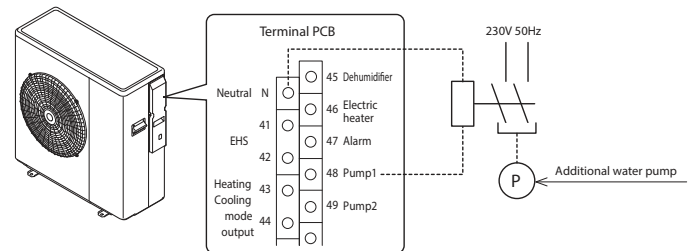


Figure 8-9: Additional water pump

Table 8-6: Additional water pump parameters

Level	Parameter		Function description	Display and input value				Remarks
	Group	Code		Default	Min.	Max.	Unit	
I	51	48	Terminal 48 0=disable 1=additional water pump	0	0	1	-	
I	42	20	Type of operation of additional water pump 0=disable 1=depending on main water pump setting 2=depending on main water pump setting but always OFF when the DHW mode is activated 3=always ON, apart from if any alarms are activated or if the heat pump is in OFF mode	0	0	3	-	

For details of how to access the parameter settings, refer to Section 9.3.

## 8.4 FROST PROTECTION

Frost protection can be activated when the heat pump is in OFF mode.

This is based on either:

- Outdoor air temperature - refer to Section 8.4.1 and Figure 8-10.
- Flow water temperature - refer to Section 8.4.2 and Figure 8-11.
- Room air temperature - refer to Section 8.4.3 and Figure 8-12.

This function is not required if ethylene glycol (heating system antifreeze) is used in the heating system water. Refer to Section 3.12.2 for guidance on how to switch off the frost protection function.

### 8.4.1 FROST PROTECTION BASED ON OUTDOOR AIR TEMPERATURE

This frost protection function is always active, even when the heat pump is not operating (but the mains supply is switched on).

The water pump is activated if the outdoor air temperature (measured by the heat pump outdoor temperature sensor) is less than the start temperature - parameter 4311 (default: 4°C).

It is deactivated when the outdoor air temperature reaches 'outdoor air temperature set point + Hysteresis' - parameter 4311 plus the hysteresis parameter 4312 (default: 7°C).

The 'frost protection' symbol (❄️) will be displayed on the remote controller screen when this frost protection function is in operation.

Under low ambient air conditions the water pump may operate for an extended period to provide frost protection when the heat pump is not operating, e.g. possibly throughout the night, until the heat pump starts the following morning.

Whilst the water pump may operate for long periods, when the prevailing conditions dictate, the cost to protect the heat pump from freezing is small due to the low water pump power consumption.

### 8.4.2 FROST PROTECTION BASED ON FLOW WATER TEMPERATURE

This frost protection function is always active, even when the heat pump is not operating (but the mains supply is switched on).

The water pump is activated if the flow water temperature is less than the start temperature - parameter 4321 (default 4°C).

It is deactivated when the flow water temperature reaches 'flow water temperature set point (parameter 4321) + hysteresis - parameter 4322 (default 3°C)'.

The 'frost protection' symbol (❄️) will be displayed on the remote controller screen when this frost protection function is in operation.

Under low ambient air conditions the water pump may operate for an extended period to provide frost protection when the heat pump is not operating, e.g. possibly throughout the night, until the heat pump starts the following morning.

Whilst the water pump may operate for long periods, when the prevailing conditions dictate, the cost to protect the heat pump from freezing is small due to the low water pump power consumption.

### 8.4.3 FROST PROTECTION BASED ON ROOM AIR TEMPERATURE

This frost protection function is always active, even when the heat pump is not operating (but the mains supply is switched on).

The water pump is activated if the room air temperature (measured by the heat pump remote controller) is less than the start temperature - parameter 4301 (default: 14°C).

It is deactivated when the room air temperature reaches 'room air temperature set point + Hysteresis' - parameter 4301 plus the hysteresis parameter 4302 (default: 1°C).

The 'frost protection' symbol (❄️) will be displayed on the remote controller screen when this frost protection function is in operation.


Under low room air conditions the water pump may operate for an extended period to provide frost protection when the heat pump is not operating, e.g. possibly throughout the night, until the heat pump starts the following morning.

Whilst the water pump may operate for long periods, when the prevailing conditions dictate, the cost to protect the heat pump from freezing is small due to the low water pump power consumption.


**Table 8-7:** Frost protection parameters

Level	Parameter		Function description	Display and input value				Remarks
	Group	Code		Default	Min.	Max.	Unit	
I	43	01	Start temperature of frost protection on room air temperature	14.0	0.0	40.0	0.5°C	
I	43	02	Hysteresis of room air temperature of frost protection	1.0	0.5	5.0	0.5°C	
I	43	11	Start temperature of Frost protection on Outdoor air temperature	4.0	0.0	10.0	0.5°C	
I	43	12	Hysteresis of Outdoor air temperature	3.0	0.5	5.0	0.5°C	
I	43	14	Hysteresis of Flow water temperature	3.0	0.5	5.0	0.5°C	
I	43	21	Start temperature of Frost protection on Flow water temperature	4.0	0.0	10.0	0.5°C	
I	43	22	Hysteresis of Flow water temperature	3.0	0.5	5.0	0.5°C	


For details of how to access the parameter settings, refer to Section 9.3.

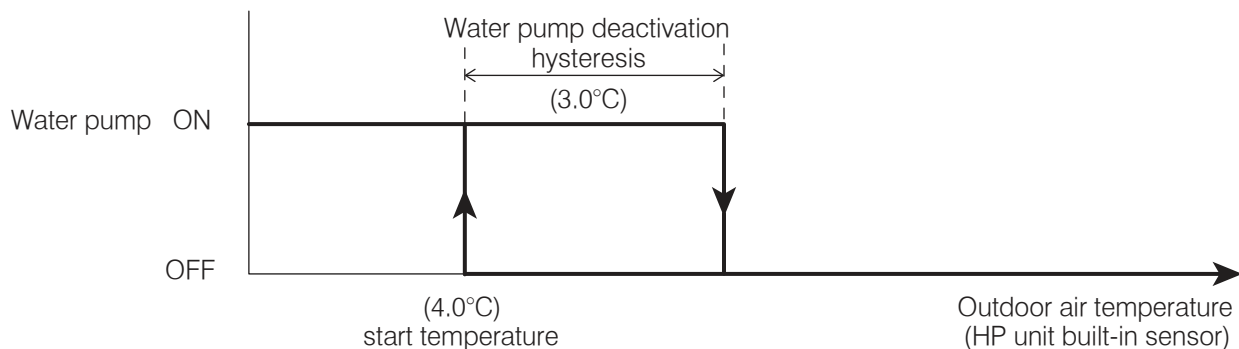

**Figure 8-10:** Frost protection (outdoor air temperature) - water pump

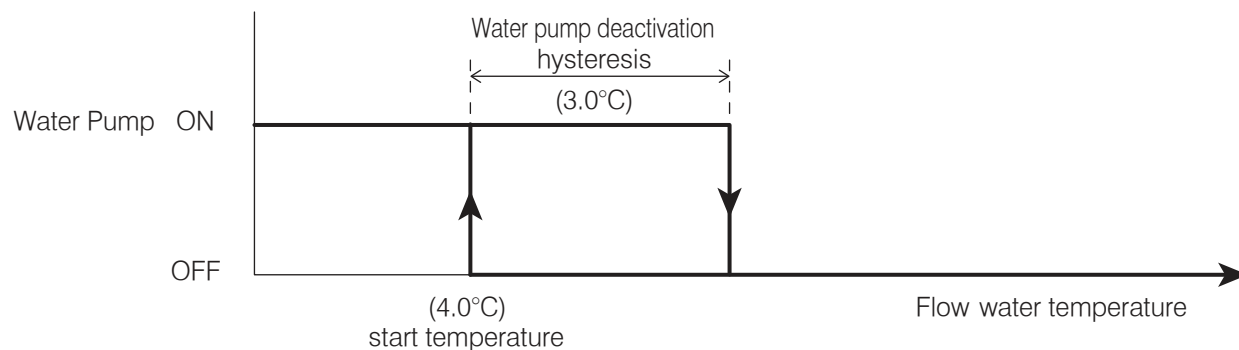

**Figure 8-11:** Frost protection (flow water temperature) - water pump

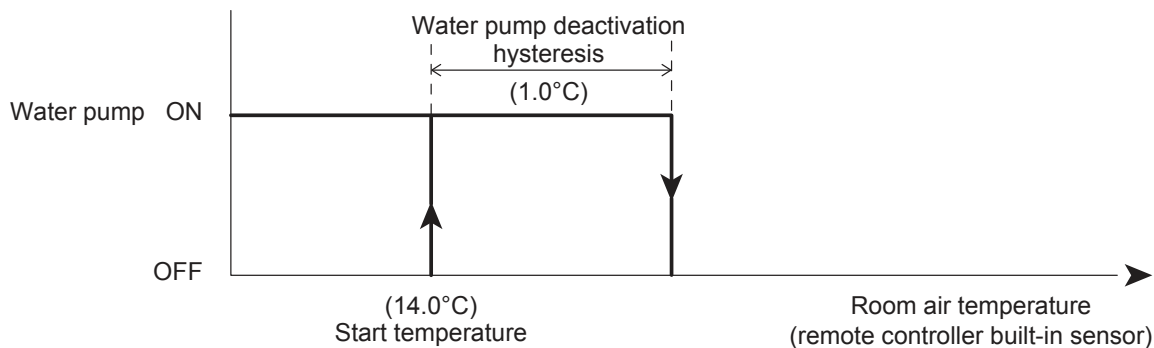

**Figure 8-12:** Frost protection (room air temperature) - water pump



### 8.5 ON/OFF DHW PRODUCTION REMOTE CONTACT

The heat pump operation for DHW production is controlled from a remote contact, e.g. a cylinder thermostat or motorised valve switch.

The remote ON/OFF DHW contact is enabled by parameter 5119. Refer to Table 8-8. The DHW mode cannot be controlled automatically by the remote controller.

When DHW is turned ON by the remote contact and the heat pump is ON it will start operation in DHW (comfort) mode.

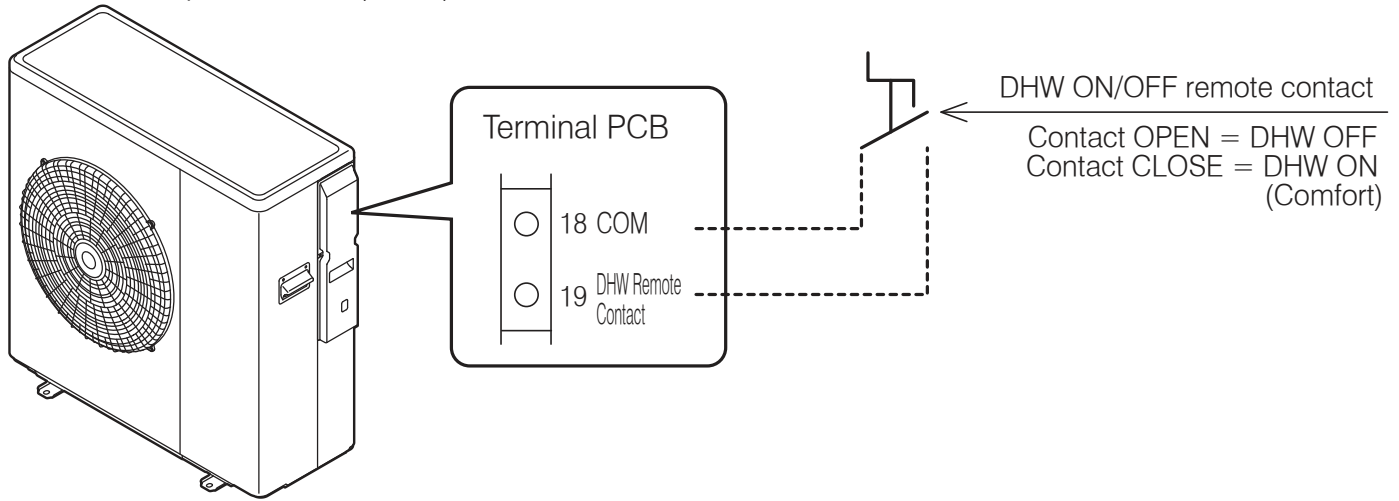


Figure 8-13: ON/OFF DHW production remote contact

**! NOTE !**  
 In order to use DHW function, it is necessary to set parameter 3101=1 and parameter 5119=1.

**! NOTE !**  
 Turn ON both remote controller using ON/OFF button, and DHW ON/OFF remote contact to start heat pump for DHW.

**! NOTE !**  
 This volt free remote contact is provided by the Grant EP002 Interface relay box. Refer to Sections 6.8 and 6.10.

Table 8-8: DHW ON/OFF contact parameters

Level	Parameter		Function description	Display and input value				Remarks
	Group	Code		Default	Min.	Max.	Unit	
I	31	01	DHW production priority setting 0=DHW is unavailable 1= DHW is available, and priority DHW over space heating 2= DHW is available, and priority space Heating over DHW	1	0	2	-	
I	51	19	Terminal 19-18 : DHW remote contact 0=disable (Remote controller only) 1=enable	1	0	1	-	

For details of how to access the parameter settings, refer to Section 9.3.

## 8.6 ON/OFF HEATING REMOTE CONTACT

The heat pump operation for heating is controlled from a remote contact, e.g. an external programmer, motorised valves and/or a room thermostat.

The ON/OFF heating contact is enabled by parameter 5120. Refer to Table 8-9.

The heating operation cannot be automatically controlled by the remote controller.

Heat pump will be turned ON/OFF according to remote contact.

For heating operation, both the remote controller and remote contact must be ON. If remote contact is turned OFF, then the heating will be turned OFF as well. Refer to Table 8-10.

If the remote controller is turned OFF, then the heat pump will be turned OFF.

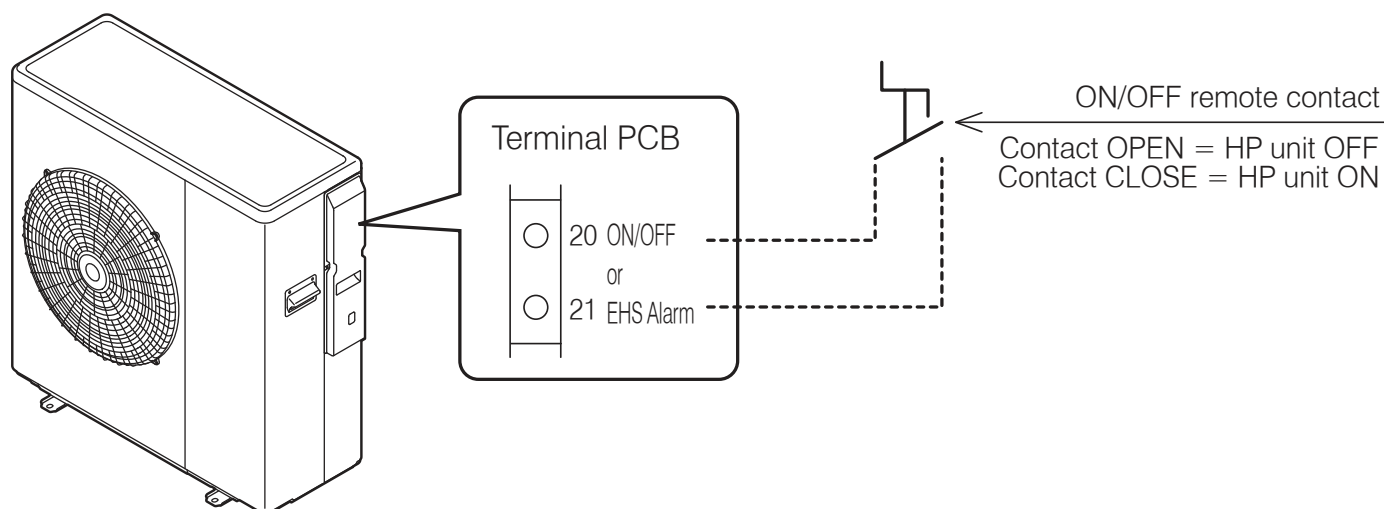


Figure 8-14: ON/OFF heating remote contact

Table 8-9: Heating ON/OFF contact parameters

Level	Parameter		Function description	Display and input value				Remarks
	Group	Code		Default	Min.	Max.	Unit	
I	51	20	Terminal 20-21 : ON/OFF remote contact input 0=disable (Remote controller only) 1=ON/OFF remote contact	1	0	2	-	ON/OFF by Remote controller 0=enable 1= On/Off enable 2= enable

For details of how to access the parameter settings, refer to Section 9.3.

Table 8-10: Remote controller / remote contact operation

Remote controller connected			Heat pump unit status	
Remote controller	Remote contact		Heat pump	Heating
ON	ON	→	ON	ON
ON	OFF	→	ON*	OFF
OFF	ON	→	OFF	OFF
OFF	OFF	→	OFF	OFF

\* Heat pump will be on standby or could be operating for DHW production

### ! NOTE !

The frost protection is active even when the heat pump is switched OFF from the ON/OFF (heating) remote contact.

### ! NOTE !

This volt free remote contact is provided by the Grant EP002 Interface relay box. Refer to Sections 6.8 and 6.10.

## 8.7 NIGHT MODE

If there is a need to reduce the electricity consumption or noise produced by the compressor, e.g. in night-time operation, it is possible to activate the night mode function using an external contact, e.g. a timeswitch (with volt free contacts) connected between terminals 28-29 on the PCB terminal.

To enable these terminals, parameter 5128 must be set to 1. Refer to Table 8-11.

When the night mode function starts, according to the time setting, the maximum frequency will be decreased to the value selected on parameter 4111 in the ON time by time band setting (refer to Table 8-11). Otherwise it will operate in normal mode.

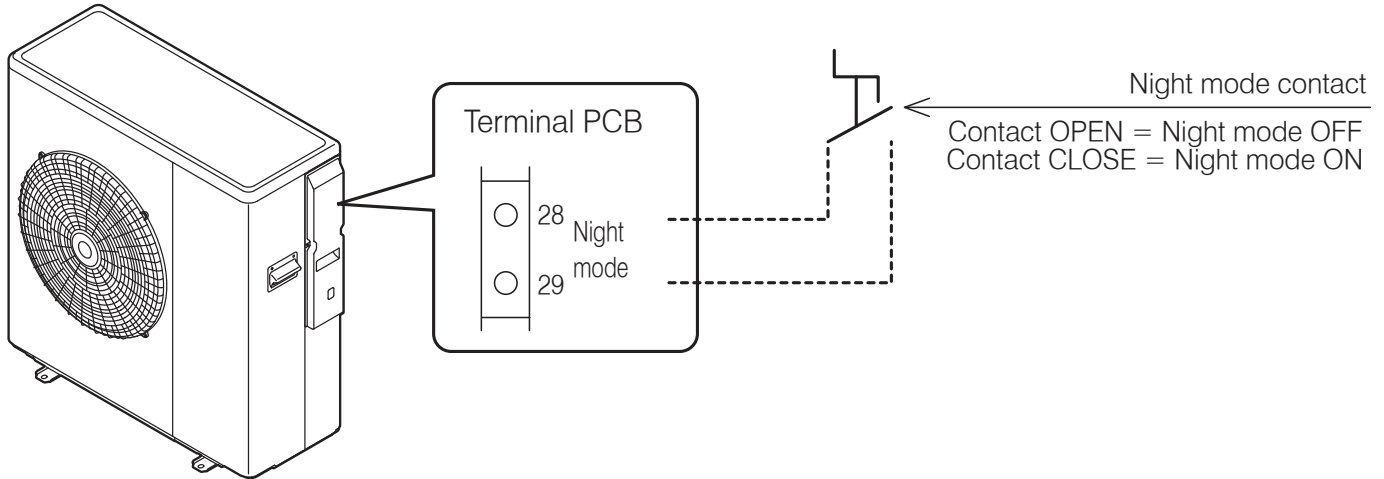


Figure 8-15: Night mode

### ! NOTE !

Parameter 5128 (night mode) and parameter 5130 (low tariff) are automatically synchronized to same value. If parameter 5128 is changed to 1 (enable), then parameter 5130 will be also changed to 1 (enable). With parameters 5128 and 5130 both set to 1 (enable), the night mode and low tariff function will operate independently of each other.

### ! NOTE !

During night mode with night mode contact ON, if parameter 5128 is changed to 0, the heat pump will continue to operate in night mode. During night mode by the remote controller button, if parameter 5128 is changed to 1, the heat pump will follow the signal of ON/OFF by night mode contact.

Table 8-11: Night mode parameters

Level	Parameter		Function description	Display and input value				Remarks
	Group	Code		Default	Min.	Max.	Unit	
I	51	28	Terminal 28-29 : Night mode 0=disable (Remote controller only) 1=enable	0	0	1	-	Parameter 5128 and parameter 5130 are synchronized in same value
I	41	11	Maximum frequency of Night mode	80	50	100	5%	

For details of how to access the parameter settings, refer to Section 9.3.

### 8.8 LOW TARIFF

The purpose of this function is to heat any thermal stores and DHW cylinders at a time when electricity rates are inexpensive.

This can be achieved by using an external contact, e.g. a timeswitch (with volt free contacts) connected between terminals 30-31 on the PCB terminal.

To enable these terminals, parameter 5130 must be set to 1. Refer to Table 8-12.

When low tariff function is activated the heating set point (calculated by the climatic curve) increases for heating (parameter 2151) by the low tariff differential water set point (refer to Table 8-12).

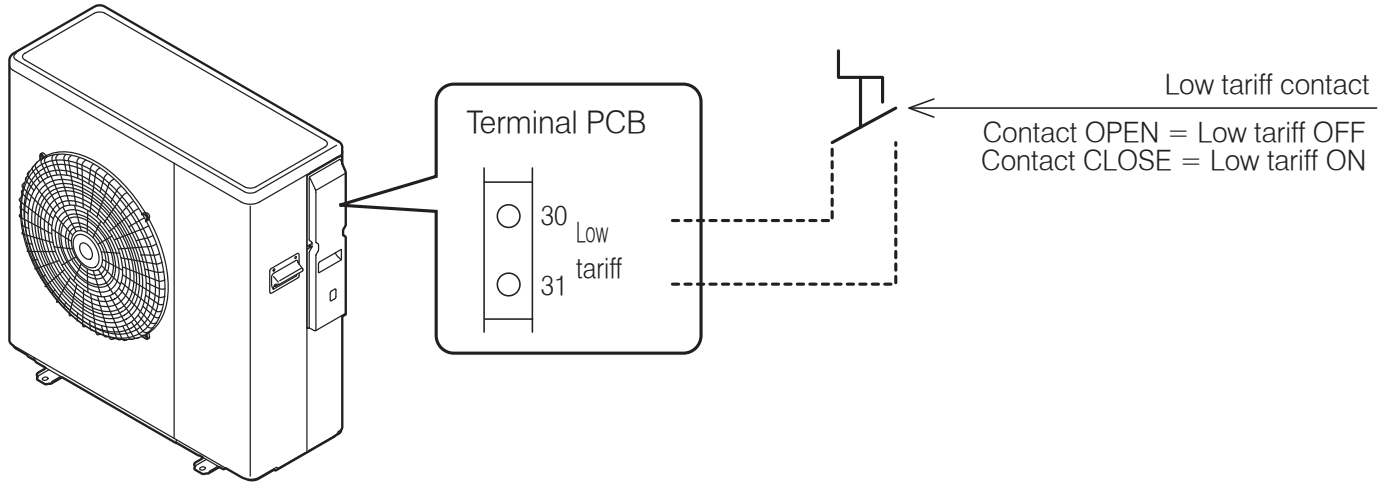


Figure 8-16: Low tariff mode

#### ! NOTE !

Parameter 5128 (night mode) and parameter 5130 (low tariff) are automatically synchronized to same value.

If parameter 5128 is changed to 1 (enable), then parameter 5130 will be also changed to 1 (enable).

#### ! NOTE !

During low tariff with low tariff contact ON, if parameter 5130 is changed to 0, the heat pump will continue to operate in low tariff.

During low tariff by the remote controller button, if parameter 5128 is changed to 1, the heat pump will follow the signal of ON/OFF by low tariff contact.

Table 8-12: Low tariff mode parameters

Level	Parameter		Function description	Display and input value				Remarks
	Group	Code		Default	Min.	Max.	Unit	
I	51	30	Terminal 30-31 : Low tariff 0=disable (Remote controller only) 1=enable	0	0	1	-	Parameter 5128 and parameter 5130 are synchronized in same value
I	21	51	Low tariff deferential water set point for Heating	5.0	0.0	60.0	0.5°C	

For details of how to access the parameter settings, refer to Section 9.3.

# 9 Commissioning

## 9.1 SYSTEM SETUP

The numbers in Figure 9-1 will be used for the system setup in this section.

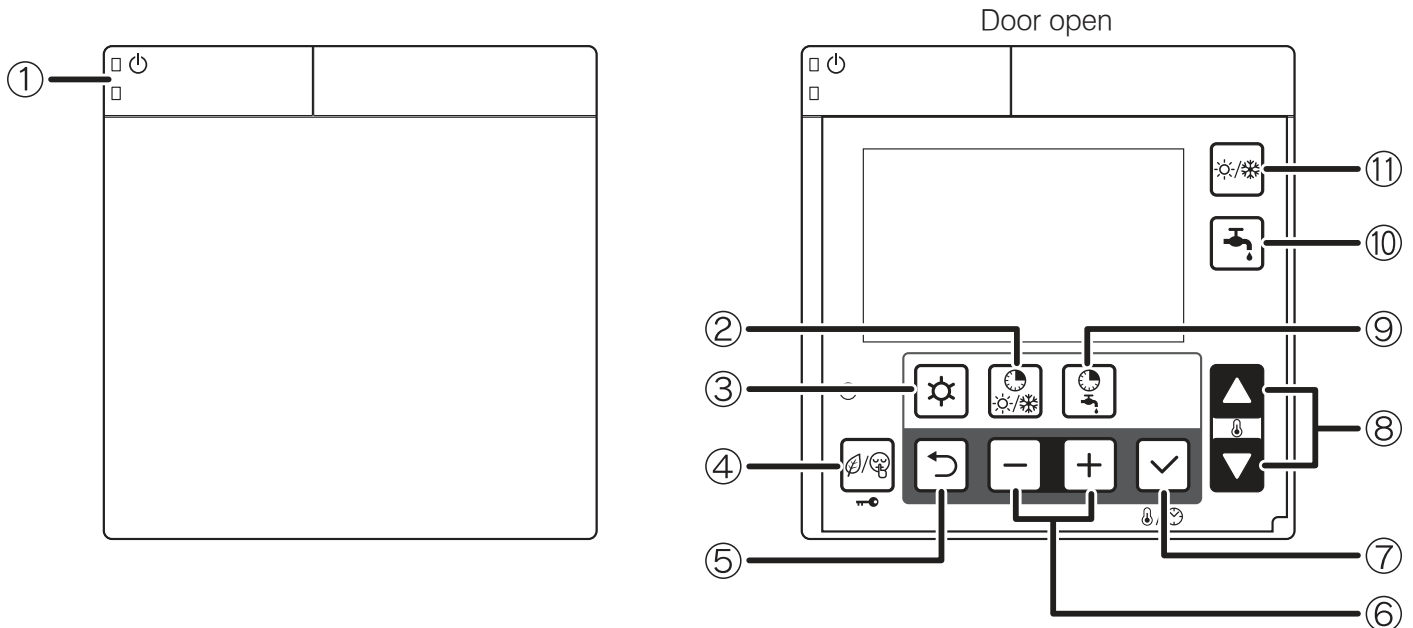


Figure 9-1: Remote controller buttons

### 9.1.1 TURNING THE HEAT PUMP ON AND OFF

Press ON/OFF switch ① for three seconds to turn the heat pump on or off. The green LED of ON/OFF switch is lit when the system is ON.


The heat pump will start in response to a demand for either heating or DHW.

## ! NOTE !


The heat pump may take up to seven minutes after the demand as the heat pump will run the circulating pump and check the water temperature in the system before starting.

### 9.2 SETTING THE DAY AND TIME

1. Press the Set button ⑦ for three seconds.
2. The day 'Mon' indicator will blink. Select the day by pressing the - or + buttons ⑥ and press set button ⑦ to save the setting. The day display stops blinking.

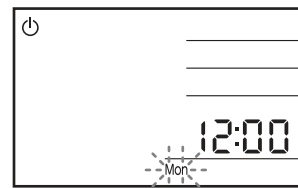


3. When the day of the week is set, 12:00 blinks; set the current time by pressing the - or + button.

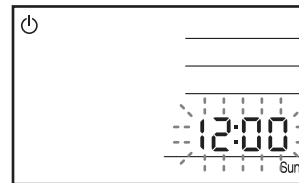

When the - or + buttons ⑥ is pressed, the time changes in one minute increments; when the - or + buttons ⑥ is pressed and held, it changes in ten minute increments.

Press the Set button ⑦ to save the time setting. Then the display reverts to normal operation.

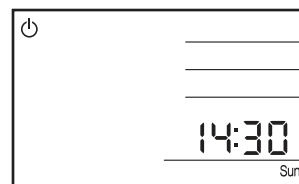

The accuracy of the clock is  $\pm 30$  second/month.

If there is a power cut, the day and time setting is maintained for approximately 24 hours. If the power cut continues over 24 hours, the day and time must be reset.

After installation and before setting the time or when the heat pump is reset after a power cut (lasting over 24 hours), the '12:00' and 'Mon' will blink, indicating that the time must be reset.

### 9.3 ACCESS FOR PARAMETER SETTINGS

The parameters are accessed and set using the remote controller.

There are two levels of access for parameter settings.

Access levels:

- U – End user level (accessible to user only)
- I – Installer Level (accessible to user and installer)

Refer to Sections 9.4 and 9.5 for how to access the above levels as there is a different procedure for each level.

### 9.4 ACCESSING THE PARAMETER SETTING MENU (USER LEVEL)

The procedure for accessing, checking and setting the parameters is as follows:

1. Press the Menu button ③ on the remote controller for three seconds to enter the user level.
2. Parameter number "0000" and parameter value "----" will be shown on the display.
3. The first two digits of the 4-digit parameter number (the parameter group number) will blink.
4. Set the parameter group number, as required, using the Up or Down ⑧ buttons.
5. Press the – or + buttons ⑥ to switch to the parameter code and the second two digits will blink.
6. Set the parameter code number, as required, using the Up or Down ⑧ buttons.
7. Press Set ⑦ and the parameter value will be displayed.  
For 'read-only' items the number displayed remains on (not blinking) and pressing the Set button ⑦ does not affect the display.
8. If an invalid parameter (not accessible to the user) is entered and the Set button ⑦ pressed "----" is displayed. Press the Return button ⑤ to return to the parameter number.
9. If the parameter value can be adjusted it will blink.
10. Set the parameter to the required value using the Up or Down ⑧ buttons.
11. Press the Return ⑤ or Set ⑦ button. The parameter code number will blink to allow setting of another parameter, if required.
12. To return to normal operation, press and hold the Menu button ③ for three seconds, or simply leave the remote controller for ten minutes.

### 9.5 ACCESSING THE PARAMETER SETTING MENU (INSTALLER LEVEL)

In the INSTALLER level more parameters can be accessed than in the USER level. The procedure for accessing, checking and setting the parameters is as follows:

1. Press the Menu ③ and the – and + ⑥ buttons on the remote controller simultaneously for three seconds to enter the installer level.
2. "InSt" parameter number "0000" and parameter value "----" will be shown on the display.
3. The first two digits of the 4-digit parameter number (the parameter group number) will blink.
4. Set the parameter group number, as required, using the Up or Down ⑧ buttons.
5. Press the – and + ⑥ buttons to switch to the parameter code and the second two digits will blink.
6. Set the parameter code number, as required, using the Up or Down ⑧ buttons.
7. Press Set ⑦ and the parameter value will be displayed and will blink.
8. Set the parameter to the required value using the Up or Down ⑧ buttons.

9. Press the Return ⑤ or Set ⑦ button. The parameter code number will blink to allow setting of another parameter, if required.
10. To return to normal operation, press and hold the Menu ③ and the – and + ⑥ buttons simultaneously for three seconds, or simply leave the remote controller for ten minutes.

#### Master Reset (resetting all parameters to their defaults)

All parameters can be reset to their original defaults. The procedure is as follows:

1. Press the Menu ③ and the – and + ⑥ buttons on the remote controller simultaneously for three seconds to enter the installer level.
2. Press and hold the low tariff/night mode (key lock) ④ button for ten seconds. All parameters will now be reset.
3. To return to normal operation, press and hold the Menu ③ and the – and + ⑥ buttons simultaneously for three seconds, or simply leave the remote controller for ten minutes.

### 9.6 TEMPERATURE CONTROL – DHW FUNCTION

The heat pump is supplied with a factory-set heat pump flow temperature for the DHW function and this is determined by the value of parameter 4130.

This temperature should be set to 55°C. This must be checked (by accessing parameter 4130) during commissioning, using the following procedure:

On the remote controller (refer to Section 9.1), first access the installer level:

1. Press and hold the Menu ③, – and + buttons ⑥ together for 3 seconds to enter the installer level.
2. "InSt" parameter number "00 00" and parameter value "----" will be shown on the display. The first two digits of the parameter number will be blinking.

Then, access the service level:

1. Use the – or + buttons ⑥ to change these first two digits to 99 and then press the + button ⑥.
2. The second two digits will then blink. Use the – or + buttons ⑥ to change these two digits to 99 and then press the + button ⑥.
3. The parameter value on the display will now be '0'.
4. Use the – or + buttons ⑥ to change the parameter value to "738" and then press the Set ⑦.

Now, check parameter 4130:

1. The first two digits of the 4-digit parameter number (the parameter group number) will blink.
2. Set the parameter group number to 41 using the – or + buttons ⑥.
3. Press the + button ⑥ and the second two digits (the parameter code) will blink.
4. Set the parameter code number to 30 using the – or + buttons ⑥.
5. Press Set ⑦ and the parameter value (41 30) will be displayed and will blink.
6. Check that the value of parameter 41 30 is 55 (i.e. 55°C).
7. If NOT, set the parameter value to 55 using the – or + buttons ⑥.
8. Return to normal operation: Press and hold the Menu ③, – and + buttons ⑥ together for 3 seconds or simply leave the remote controller for 10 minutes.

## 9.7 PARAMETERS INPUT/OUTPUT

The following parameter settings must be checked on commissioning.

**Table 9-1:** Parameters input/output

Level	Parameter		Function description	Display and input value				Remarks
	Group	Code		Default	Min.	Max.	Unit	
I	51	19	Terminal 19-18 : DHW remote contact 0=disable (Remote controller only) 1=enable	1	0	1	-	
I	51	20	Terminal 20-21 : ON/OFF remote contact (CH) Alarm input 0=disable 1=ON/OFF remote contact	1	0	1	-	ON/OFF by Remote controller 0=enable 1=ON/disable OFF/enable 2=enable
I	51	28	Terminal 28-29 : Night mode* 0=disable 1=enable Refer to Section 8.6.	0	0	1	-	Parameter 5128 and Parameter 5130 are synchronised in same value
I	51	30	Terminal 30-31 : Low tariff* 0=disable 1=enable Refer to Section 8.7.	0	0	1	-	
I	51	46	Terminal 46 : DHW Electric heater or Backup heater 0=DHW Electric heater 1=Backup heater	0	0	1	-	

\* External timer required

For details of how to access the parameter settings, refer to Section 9.3.

## 9.8 REMOTE CONTROLLER BACK LIGHT DISPLAY PARAMETERS

The following parameters can be changed to adjust the back light display.

**Table 9-2:** Back light display parameters

Level	Parameter		Function description	Display and input value				Remarks
	Group	Code		Default	Min.	Max.	Unit	
U	02	03	Back light display at door open 0=OFF 1=ON	1	0	1	-	
U	02	04	Time to turn off the back light display	60	10	300	10 sec	
U	02	05	Time to back to normal display screen	120	10	300	10 sec	

For details of how to access the parameter settings, refer to Section 9.3.

## 9.9 WEATHER COMPENSATION

During commissioning, the four climatic curve parameters **MUST** be checked and the default values adjusted to suit the design parameters for the system in question. Refer to Section 8.2.2 for details.

### Warm Weather Operation

**If, during commissioning, the ambient air temperature is higher than the air temperature setting (Te2) - parameter 2105 for the climatic curve, the weather compensation function will NOT allow the heat pump to operate to provide space heating.**

To override this and force operation of the heat pump (e.g. to check operation or commission the heat pump), parameter 2100 must be set to 0. The weather compensation will be switched off and the heat pump will operate at a fixed set point of 45°C irrespective of the outdoor air temperature.

If weather compensation is required, e.g. if the installation is to meet RHI requirements, parameter 2100 **MUST** be reset to 1 once the heat pump has been commissioned or the operation checked.

Alternatively, to operate the heat pump without touching the weather compensation settings, set the system controls to provide a hot water demand so that the heat pump operates to provide hot water heating. Reset the hot water controls to the normal setting once the heat pump has been commissioned or the operation checked.

## ! NOTE !

**The weather compensation function MUST be operational for the installation to meet RHI requirements.**

## 9.10 FROST PROTECTION FUNCTION SETTING

Refer to Section 3.12.2 for details.

## 9.11 PUMP OPERATION AND AIR BLEEDING FROM HEATING SYSTEM

The circulating pump can be operated to aid removal of the air from the heating system.

To operate this function access the Terminal PCB.

- Check DIP SW4 is set to 'OFF'.


## ! NOTE !

### Dip switch positions:

**Up: ON**  
**Down: OFF**

- Press the Pump SW. Refer to Figure 9-2.
- Wait for a few seconds. The pump will start and each of the six outer digital segments on the right-hand digit of the display on the terminal PCB will light up sequentially during pump operation.
- The pump stops automatically after 10 minutes of operation. If all the air could not be released from the water circuit, press Pump SW again (after the pump has stopped) to operate the pump for another 10 minutes.

If you want to stop the pump before it stops automatically, press Pump SW again.

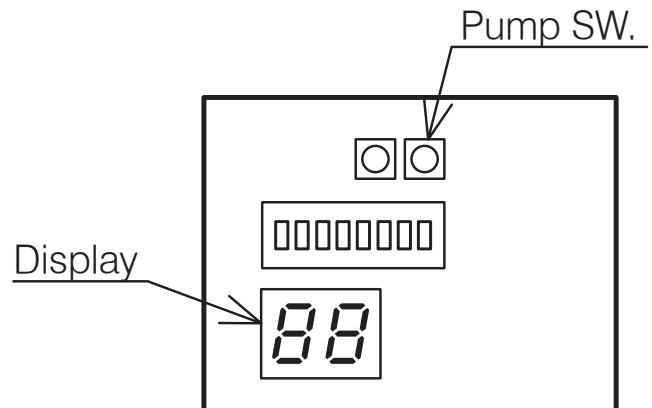

**Figure 9-2:** Water loading and air bleeding in the hydraulic circuit

## 9.12 PUMP OUTPUT SETTING

The water pump is supplied factory set to maximum output (level 3), i.e. with both DIP SW5 and DIP SW6 in the OFF position (down position). Refer to Figure 8-4.

It is unlikely that this level of output will be required, so it is recommended that the pump output is reduced to either Level 2 (medium output) or Level 1 (minimum output) as required.

Refer to Section 8.3.6 for guidance on how to change the pump output level.

During commissioning, check that the required flow rate is produced in the heating system.

This will usually be indicated by achieving a temperature difference between the heat pump flow and return of approximately 8°C when the heating system is operating and up to temperature.

To determine the temperature difference, check the flow and return temperatures using the 'Monitor Display Function' on either the remote controller or Terminal PCB. Refer to Section 10.7 of these installation Instructions for details of how to check the flow and return water temperatures.

If necessary, the water pump output can be adjusted to achieve the required temperature difference between flow and return when the heat pump is operating. Refer to Section 8.3.6 for guidance on how to change the pump output level.

## 9.13 COASTAL INSTALLATIONS

If the Aeronas heat pump is to be installed within 2 miles of the coast, the evaporator must be sprayed with ACF50 and this must be repeated on each service, unless a factory supplied 'Blygold' Aeronas heat pump has been installed. Refer to Section 3.10 for further information regarding corrosion protection.

## 9.14 FLOW REGULATOR

A flow regulator is supplied with the heat pump. This must be fitted in the return pipe to the heat pump. Refer to Section 3.7, Figure 4-1 and Figure 9-3.

The flow regulator can be fitted vertically or horizontally but must be installed such that the arrow on the brass body points in the direction of flow.

For an accurate and stable reading, ensure that there is straight pipe of at least 5 times the pipe diameter (i.e. for 28mm pipe: 5 x 28mm = 140mm) before the inlet to the regulating valve.

During system commissioning, the flow regulator must be set to achieve the required flow rate in the primary circuit to the heat pump.

The required flow rate will be dependent on the required heat pump output (at design conditions) and the temperature differential between the heat pump flow and return.



This flow rate can be calculated as follows:

$$\text{Flow rate} = \frac{\text{Heat output (kW)}}{\text{Temperature differential (K)} \div \text{Specific heat capacity of water (4.2kJ/kgK)}} *$$

**Example:**

Heat output = 12kW

Differential = 5K

Specific heat capacity of water = 4.2 kJ/KgK

$$\text{Flow rate} = 12 \div 5 \div 4.2 = 0.571 \text{ kg/sec}$$

$$= 0.571 \times 60 = 34.3 \text{ kg/min (or 34.3 litres/min)}$$

**! NOTE !**

\* The use of an antifreeze/inhibitor/biocide fluid will alter the value of Specific Heat Capacity but, as the difference is minimal, use 4.2kJ/kgK as a constant for the calculation of flow rate.

To set the flowrate, the system should be set to maximum demand, i.e. with all emitters and zone valves open. The flow rate is then adjusted by rotating the regulating valve until the required flow rate is indicated on the flow regulator scale.

- To increase the flow rate - rotate valve anticlockwise
- To decrease the flow rate - rotate valve clockwise

The actual flowrate must be read from the LOWER edge of the float, in the flow regulator window. Refer to Figure 9-3.

Grant Aeronas heat pumps are supplied with the circulating pumps set to the highest of three possible performance curves. In order to achieve the required flow rate it may be necessary to select one of the other pump performance curves. Refer to Section 8.3.6.

If two heat pumps of the SAME output are connected to a Grant Combined Volumiser/Low Loss Header, both flow regulators should be set to the SAME flowrate, as calculated for the output of each heat pump.

If the two heat pumps are of DIFFERENT outputs:

- Calculate the required flow rate for each heat pump, based on their respective outputs.
- Set the flow rate of each heat pump separately, i.e. with only one heat pump operating at a time.

Please refer to the installation instructions supplied with the volumiser/low loss header for further information.

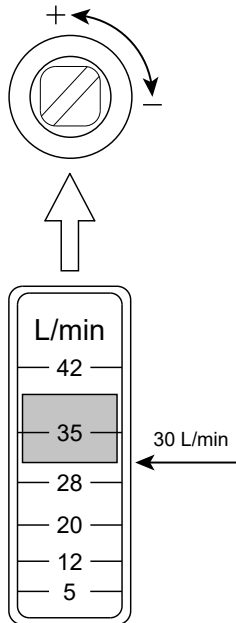


Figure 9-3: Flow regulator adjustment

**9.15 BALANCING THE PRIMARY CIRCUIT**

With the heat pump installed as described in these installation instructions, any hot water cylinders connected to the system filled with water and the primary circuit filled and vented (refer to Section 4.2); the primary circuit can be balanced.

To balance the primary circuit:

- Access the automatic system bypass valve (see Figure 4-1).
- Fully open all TRVs fitted to radiators on the system.
  - In warmer climates it may be necessary to slacken the TRV heads off, in order to prevent the ambient temperature closing the TRVs down.
- Ensure the automatic bypass valve is fully closed.
- Set any circulating pumps fitted to the system to their optimum setting.
  - Initially set the circulating pump contained in the Aeronas heat pump to level 1 (minimum). Refer to Section 8.3.6.
  - If the system requires, increase the pump speed to level 2 or even level 3.
- Turn the heat pump on, operate the system in space heating mode and allow the system to start heating up.
- With the system flow temperature approaching its set value, check the temperature difference between the flow and return pipes connected to each heat emitter on the system, starting with the emitter closest to the heat pump.
  - In the case of a Grant Aeronas heat pump, this temperature difference should be approximately 6 to 8°C.
- In instances where this temperature difference is too low, close the appropriate radiator lockshield valve fully and open no more than half a turn. Repeat this process for the next radiator in the circuit until the desired flow/return temperature difference has been achieved for all heat emitters on the system.

**! NOTE !**

Throughout the process of balancing the system, it is important to ensure that the heat pump is continuously operating to provide heat to the space heating circuit.

- Turn the heat pump off and allow the system to cool.
- While the system is cooling and with the automatic bypass valve still fully closed, tighten any TRV heads that were slackened and fully close all TRVs on the system.
- With all TRVs on the system fully closed, turn the heat pump on and operate the system in space heating mode. Allow the system to reach operating temperature.
- Open the automatic bypass valve until you detect that water is just starting to flow through it. The valve is opened by rotating it anti-clockwise (viewed from beneath valve).
- Ensure the heat pump is operating at the chosen flow temperature without modulating down.
 

If the appliance is modulating down, open the automatic bypass valve slightly until a situation is achieved where all TRVs on the system are fully closed and the heat pump continues to run at the chosen operating temperature.
- Leave the automatic bypass valve in this position, open all TRVs fully and allow the system to run according to the householder's requirements.

The primary circuit has now been balanced and the automatic bypass valve has been set.

# 10 Servicing

## 10.1 GENERAL

Grant Aerona<sup>3</sup> Heat Pumps require only the minimum of routine servicing and maintenance.

This should be carried out on an annual basis and consist of the following:

### 10.1.1 HEAT PUMP

#### Check the following:

- Visual condition of the heat pump
- Any obstructions to airflow into the ASHP – remove if found
- The fan outlet is not obstructed - remove obstructions if found
- Condensate drain opening is clear
- Flexible hose condition
- Pipe insulation condition
- Remote controller settings
- There are no refrigerant leaks. Refer to Section 10.6.
- All electrical connections and PCB for scorching or dry cables

#### Clean the evaporator

Carefully remove any dirt or debris from the evaporator fins using either a soft brush or by gently vacuuming. Take care not to damage the fins during this manual cleaning process.

Wash the evaporator with a neutral detergent cleaner, e.g. EnviroCoil, using a low-pressure spray.

Do NOT use a pressure washer to clean the evaporator fins as this may damage them.

Do NOT use any aggressive cleaning agents as these will attack and damage the aluminium fins.

#### For coastal locations

For all Aerona<sup>3</sup> heat pumps installed within 2 miles of the coast, Grant recommends using an anti-corrosion treatment on the evaporator, either Blygold or ACF50. Refer to Section 3.10 for details.

#### Blygold treated units

This is a factory applied coating. It must be cleaned on an annual service exactly as described above.

#### ACF50 treated units

This is applied on site and must be re-applied on an annual basis to maintain the level of protection.

The evaporator must first be cleaned exactly as described above.

Once cleaned, the evaporator must be sprayed with ACF50 from both sides. This will require some of the outer casing to be removed to gain access to the entire evaporator.

## ! NOTE !

**As ACF50 'creeps' over surfaces and into crevices, only a thin film is required. Take care not to apply too much spray to the evaporator surfaces.**






### 10.1.2 HEATING SYSTEM

#### Check the following:

- Expansion vessel pressure
- Operation of pressure relief valve
- Heating system pressure – top up if necessary
- Correct concentration of corrosion/antifreeze protection
- Heating and hot water controls settings
- Any leaks on system
- Magnetic filter is cleaned

### 10.1.3 MASTER RESET (RESETTING ALL PARAMETERS TO THEIR DEFAULTS)

All parameters can be reset to their original defaults. The procedure is as follows:

1. Press the Menu  and the – and +  buttons on the remote controller simultaneously for three seconds to enter the installer level.
2. Press and hold the low tariff/night mode (key lock)  button for ten seconds. All parameters will now be reset.
3. To return to normal operation, press and hold the Menu  and the – and +  buttons simultaneously for three seconds, or simply leave the remote controller for ten minutes.

## 10.2 AIR INLET AND OUTLET

The air inlet grille and evaporator must be checked and leaves or any other debris removed from the space between the grille and the evaporator fins.

## ! CAUTION !

**Take care not to damage or distort the Aluminium fins of the evaporator when removing any debris.**

Ensure that both the air inlet to the evaporator and the discharge from the fan outlet are unobstructed. Any foliage, plants, etc. near the heat pump must not be allowed to grow over the heat pump.

Under no circumstances should anything be stacked on or against the heat pump.

Refer to Section 3.5.2 for the required clearances around the heat pump.

## 10.3 CONDENSATE DISPOSAL

Check that the condensate drain hole in the bottom of the heat pump is not blocked.

## 10.4 HEATING SYSTEM CONNECTIONS

Check the condition of the flexible hoses. Replace if damaged or leaking.

## 10.5 HEAT PUMP CONTROLS

Check that settings on the remote controller are as set when commissioned. Refer to settings given in the relevant sections of these instructions. Reset to commissioned settings if necessary.

## 10.6 REFRIGERANT

Under no circumstances should the refrigerant be vented from the charging points on the refrigerant circuit of the heat pump.

If any work is required to be carried out on the refrigerant circuit, it MUST be undertaken by an F-gas registered refrigeration engineer

On no account should any such work be carried out by unqualified personnel.

## 10.7 MONITOR DISPLAY FUNCTION

The heat pump operating conditions, as listed in Table 10-1, can be displayed and checked on either the remote controller or Terminal PCB.

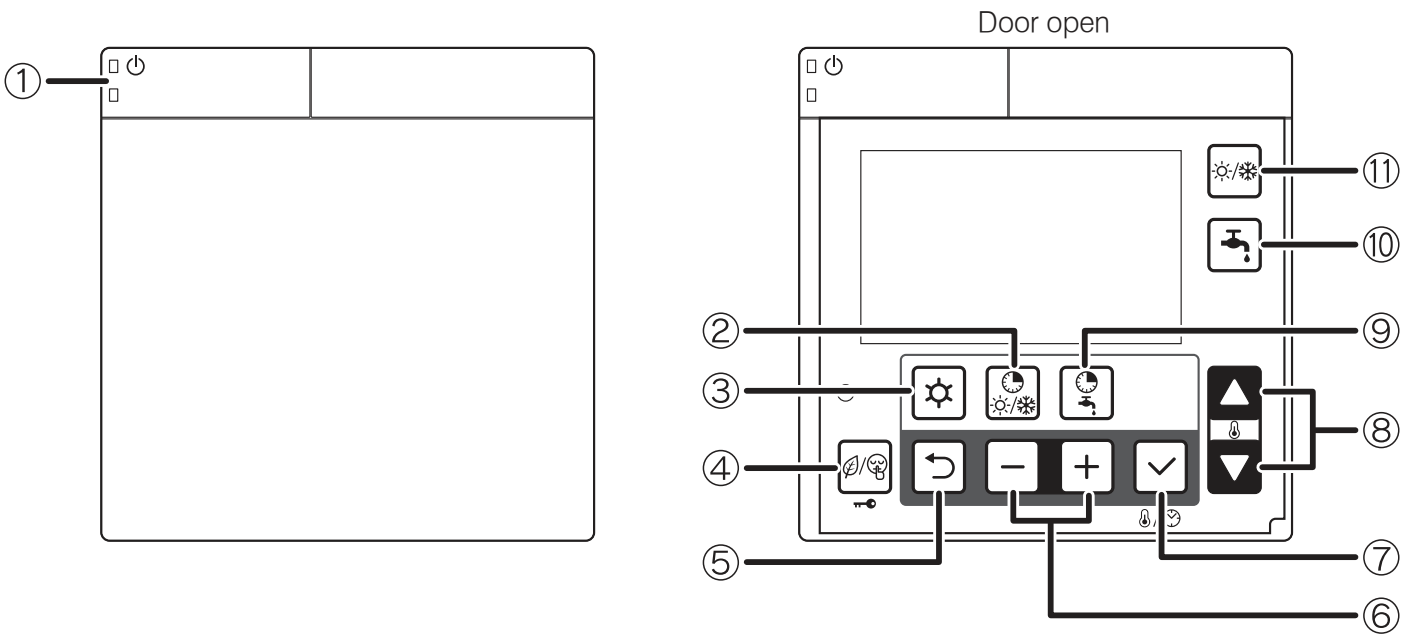


Figure 10-1: Remote controller buttons

### Display on Remote controller

1. Press Return (Ⓢ) button for three seconds to enter monitor mode and display the user level value of parameter group 01. A 2 digit code number of parameter group 01 (default value is 00) will be displayed on the left of remote controller screen. The corresponding parameter value will displayed on the right of the screen (default value is ----.)
2. Press the Up or Down (⬆/⬆) buttons to change the code number and then press the Set (Ⓢ) button to display the parameter value. Only code numbers from 00 to 09 can be displayed.
3. To return to normal display, press and hold the Return (Ⓢ) button for three seconds or simply do nothing and leave it for about ten minutes.

### Display on Terminal PCB display

1. Set the DIP SW4 on the Terminal PCB to 'ON' (up) to display the monitor number and monitor data alternately.
2. Push the Pump SW. of the Terminal PCB to switch the display number alternately.
3. To return to normal display, set the DIP SW4 to 'OFF' (down).

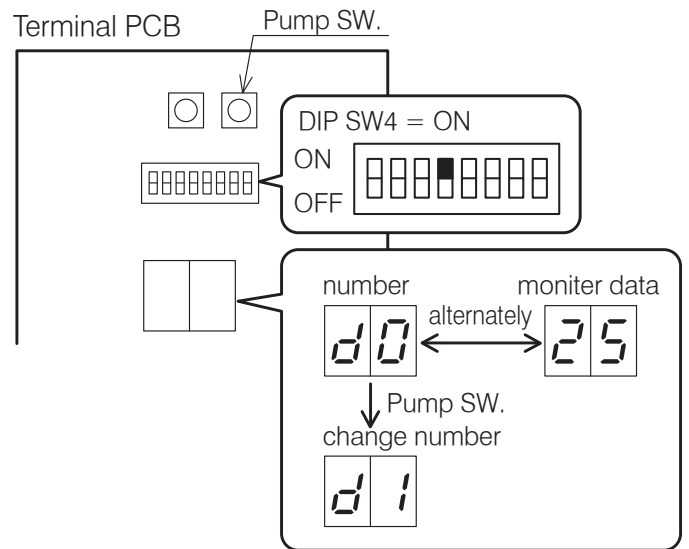


Figure 10-2: Display on Terminal PCB display

Table 10-1: Monitor display

Terminal PCB Number	Remote controller		Function description	Display and input value			
	Level	Parameter Group Code		Default	Minimum	Maximum	Unit
d0	U	01 00	Circulating water return temperature	-	-20	100	1°C
d1	U	01 01	Compressor operating frequency	-	0	200	1Hz
d2	U	01 02	Discharge temperature	-	-20	150	1°C
d3	U	01 03	Power consumption value	-	0	9900	100W
d4	U	01 04	Fan control number of rotation	-	0	1000	10rpm
d5	U	01 05	Defrost temperature	-	-20	100	1°C
d6	U	01 06	Outdoor air temperature	-	-20	100	1°C
d7	U	01 07	Water pump control number of rotation	-	0	9900	100rpm
d8	U	01 08	Suction temperature	-	-20	100	1°C
d9	U	01 09	Circulating water flow temperature	-	-20	100	1°C

# 11 Fault Finding

## 11.1 ERROR CODE DISPLAY

In the event that a fault is detected, a red LED on the ON/OFF switch of the remote controller will flash and a warning icon and error code will be displayed on LCD screen and also on the Terminal PCB display.

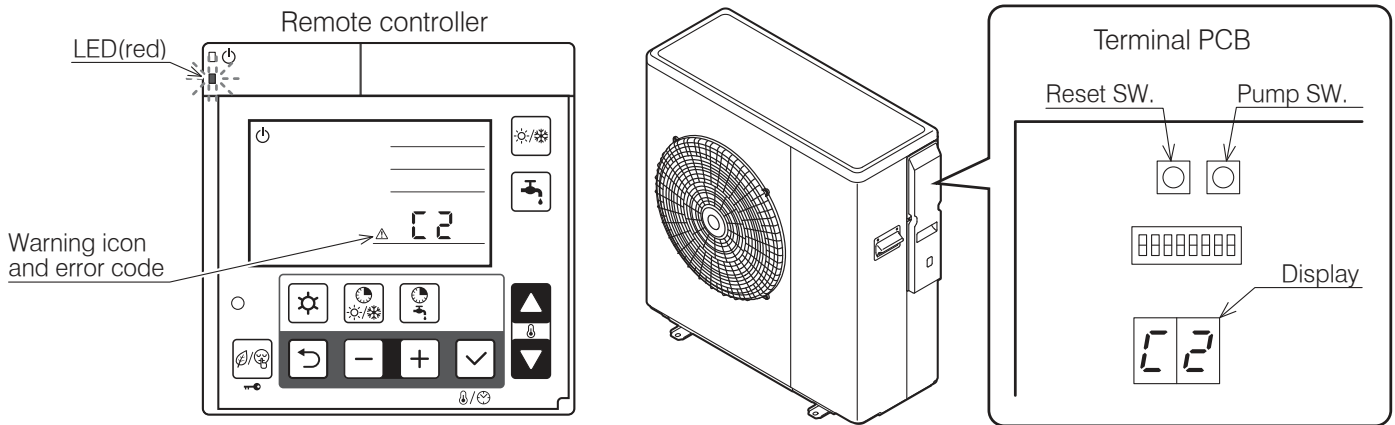


Figure 11-1: Error code display

## 11.2 ERROR HISTORY DISPLAY

The previous 10 error codes can be displayed on Terminal PCB display.

### Procedure to display on Terminal PCB display:

1. Press Pump SW and Reset SW on Terminal PCB at the same time for five seconds and the error history order and error code will be displayed alternately. The first one is the latest error code.
2. Press Pump SW to go through the history order up to the 10th error code and then go back to the latest error code.
3. When there is no error history, '---' will be displayed.

If no operation is carried out for five minutes or both the Pump SW and Reset SW are pressed together for five seconds, the display returns to normal display.

### Deletion of the error history:

During error code display, press Reset SW and Pump SW for ten seconds to delete the error history.

## 11.3 RESET ERROR CODE DISPLAY

### Auto

Once it returns to normal condition, the error will automatically be reset.

When the heat pump stops, it may not possible to reset automatically. In this case, reset manually.

### Manual

To reset, press – and + Ⓞ buttons on the Remote Controller at the same time for three seconds, or press Reset SW on the Terminal PCB.

Refer to Figure 11-2.

It is possible to reset by turning the mains power supply switch OFF → ON, although this is not recommended.

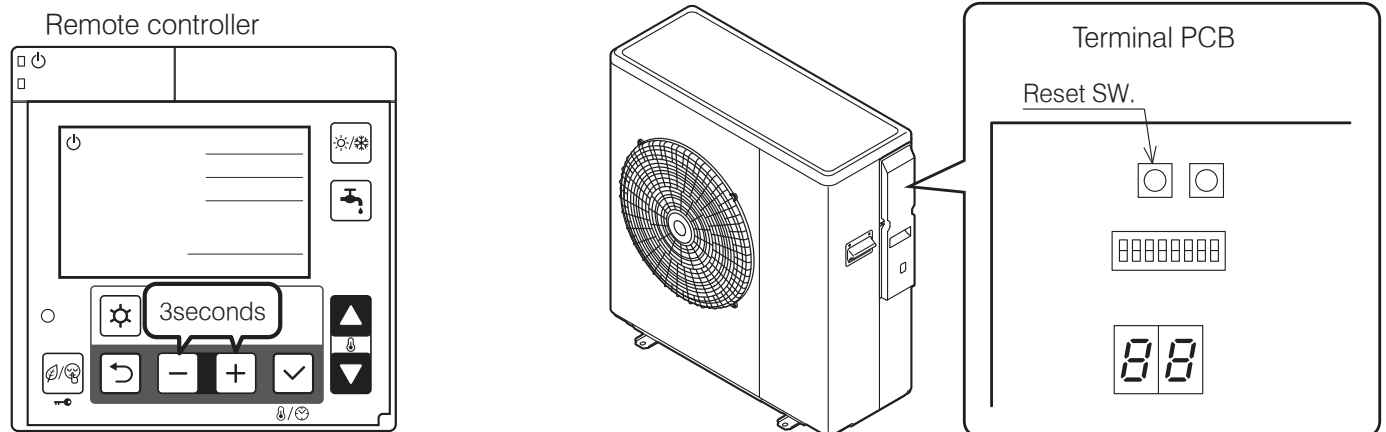


Figure 11-2: Resetting error code display

## 11.4 ERROR CODES

Error code	Error	Method of check	Troubleshooting	Figure/table	Error reset	
-	-	Power supply	Check the power supply	Confirm the power supply	-	-
		Fuse CF1 HPID6R32: 250V 15A HPID10R32: 250V 25A HPID17R32: 250V 30A	Check the electric continuity of Fuse CF1 by tester	If CF1 is blown, Main PCB should be replaced	Figure 11-3	
		Fuse CF3 (250V 3A)	Check the electric continuity of Fuse CF3 by tester	If CF3 is blown, Main PCB should be replaced		
		Fuse CF4 HPID6R32: 250V 3A HPID10R32: 250V 3A	Check the electric continuity of Fuse CF4 by tester	If CF4 is blown, Main PCB should be replaced		
		Main PCB	Other than described above	Main PCB should be replaced	-	
A0	DC voltage error	Fan motor	Operate without lead wire for Fan motor Check the electric continuity of Fuse by tester	If the same error code appears again, Main PCB or Pump should be replaced If other error codes appear, Fan motor should be replaced	-	Power OFF
		Fuse CF6 HPID17R32: 250V 3A		If CF6 is blown, it should be replaced	Figure 11-4	
		Fuse CF7 HPID10R32: 250V 3A HPID17R32: 250V 3A		If CF7 is blown, it should be replaced		
		Pump	Operate without lead wire for Pump	If the same error code appears again, Main PCB or Fan motor should be replaced If other error codes appear, Pump should be replaced	-	
		Reactor	Check the resistance by tester (0.1Ω at 20°C)	If the reactor is faulty, it should be replaced.	-	
		Main PCB	Check the voltage of Fan motor by tester Check the voltage of Pump by tester	If the voltage is abnormal, PCB (Main) should be replaced	Figure 11-4, 11-6	
		Power supply	Check the power supply	Confirm the power supply	-	
A1	Discharge temperature error	Sensor, Temp. Discharge	Check the resistance by tester	If the sensor is faulty, it should be replaced	Table 11-2	Auto
		Gas leakage	Check the service valve and refrigerant circuit (pipe)	Collect refrigerant once, then recharge with prescribed mass	-	
A2	Protective action against excess current DC current detection	Unreasonable operation under/ overload	Check the place of installation (blockage of air inlet & outlet) Check the excess gas	Ensure the installation position to avoid blockage of air inlet & outlet If excess gas is observed, collect all refrigerant once, then recharge with prescribed mass	-	Manual
		Drop of power voltage	Check the power voltage (230V)	Confirm the power supply voltage (230V)		
		Main PCB	Operate without the junction connector of Compressor lead wire	If the same error code appears again, Main PCB should be replaced		
		Momentary stop of power (In case of lightning)	-	Restart operation		
		Compressor	Other than described above	Compressor should be replaced		
A3	CT disconnection	Main PCB	-	Main PCB should be replaced	-	
A4	Protective action against excess current AC current detection	Unreasonable operation under/ overload	Check the place of installation (blockage of air inlet & outlet) Check the excess gas	Ensure the installation position to avoid blockage of air inlet & outlet If excess gas is observed, collect all refrigerant once, then recharge with prescribed mass	-	Manual
		Drop of power voltage	Check the power voltage (230V)	Confirm the power supply voltage (230V)		
		Momentary stop of power (In case of lightning)	-	Restart operation		

Error code	Error	Method of check	Troubleshooting	Figure/table	Error reset	
A5	Abnormal revolution of compressor	Unreasonable operation under/ overload	Check the place of installation (blockage of air inlet & outlet ) Check the excess gas	Ensure the installation position to avoid blockage of air inlet & outlet If excess gas is observed, collect all refrigerant once, then recharge with prescribed mass	-	Manual
		Drop of power voltage	Check the power voltage (230V)	Confirm the power supply voltage (230V)		
		Fuse CF6 HPID6R32: 250V 15A HPID10R32 : 250V 25A	Check the electric continuity Fuse CF6 by tester	If CF6 is blown, Main PCB should be replaced	Figure 11-5	
		Clogged the water Pump and/or water circuit	Check the Pump and water circuit	Remove the blockage, then restart operation		
		Drop of power voltage	Check the power voltage (230V) during operation	Confirm the power supply voltage (230V)		
		Momentary stop of power (In case of lightning)	-	Restart operation		
		Compressor or Main PCB	Other than described above	Compressor should be replaced		
A6	Suction temperature sensor error	Sensor, Temp. Suction	Check the resistance by tester	If the sensor is faulty, it should be replaced	Table 11-3	Auto
A7	Defrost tem sensor error	Sensor, Temp. Defrost	Check the resistance by tester	If the sensor is faulty, it should be replaced	Table 11-3	
A8	Discharge temp. sensor error	Sensor, Temp. Discharge	Check the resistance by tester (*1)	If the sensor is faulty, it should be replaced	Figure 11-13	
C1	Upper fan motor error (HPID17R32)	Fuse CF7 (250V T3.15A)	Check the electric continuity Fuse CF7 by tester	If CF7 is blown, Fan motor and CF7 should be replaced If CF7 is not blown, check the voltage of Fan motor If the voltage is normal, Fan motor should be replaced If the voltage is abnormal, Main PCB should be replaced	Figure 11-4	Auto
		Fan motor (*2)				
		Main PCB				
C2	Outdoor temp. sensor error	Sensor, Temp. Outdoor	Check the resistance by tester	If the sensor is faulty, it should be replaced	Table 11-1	Auto
C3	Lower Fan motor error (HPID17R32)	Fuse CF6 (HPID17R32: 250V T3.15A)	Check the electric continuity of Fuse CF6 by tester	If CF6 is blown, it should be replaced	Figure 11-4	Manual
		Fuse CF7 (HPID10R32: 250V T3.15A)	Check the electric continuity of Fuse CF7 by tester	If CF7 is blown, it should be replaced		
	Fan motor	Check the voltage of Fan motor by tester	If the voltage is normal, Fan motor should be replaced If the voltage is normal, Main PCB should be replaced			
	Main PCB					
C4	Rise of temperature (above 110°C) of Main PCB	Mis-installation	Check the place of installation (blockage of air inlet & outlet)	Ensure the installation position to avoid blockage of air inlet & outlet	-	
		Sensor, Temp. Main PCB	-	Main PCB should be replaced		
C5	Main PCB sensor error	Sensor, Temp. Main PCB	-	Main PCB should be replaced	-	Auto
C6	Main PCB error	Main PCB	-	Main PCB should be replaced	-	Power OFF
C7	Controller PCB serial error	Mis wiring or rare contact [Main PCB - Controller PCB connecting cable]	Check the wiring connection and rare contact	After correcting mis wiring, restart operation	-	Auto
		Controller PCB	Other than described above	Controller PCB should be replaced		
		Main PCB	Other than described above	Main PCB should be replaced		
		Earth wire	-	Check if earth wire is properly installed		

(\*1) In case of detecting open circuit of the discharge temperature sensor, error display appears 10 minutes after start operating.

In case of detecting short circuit of the discharge temperature sensor, error display appears immediately.

(\*2) When checking fan motor and/or pump, turn OFF the power supply completely and check at their terminal or connector.

Error code	Error		Method of check	Troubleshooting	Figure/table	Error reset
C8	Main PCB error	Main PCB	Turn off the power supply, wait for about 3 minutes, then power up again	If the same error code appears, Main PCB should be replaced	-	Power OFF
			Check loose cable connections and contacts of reactor			
E4	Outgoing water temp. sensor error	Sensor, Temp. Outgoing water	Check the resistance by tester	If the sensor is faulty, it should be replaced	Table 11-4	Auto
E5	Return water temp. sensor error	Sensor, Temp. Return water	Check the resistance by tester	If the sensor is faulty, it should be replaced		
FU	High pressure switch is operating	Outside air recirculation	Check temperature difference of Outgoing/Return water (see Monitor display function)	Make sure the position doesn't block the air inlet and outlet	-	
		Clogged water circuit	Large difference means flow rate is too low	Remove the blockage, then restart operation		
P1	Pump error	Pump (*2)	Check the voltage of Pump	If the voltage is normal, Pump should be replaced	Figure 11-6	Manual
		Main PCB		If the voltage is abnormal, Main PCB should be replaced		
		Clogged the water Pump and/or water circuit	Check the pump and water circuit	Remove the blockage, then restart operation	-	
P3	High pressure switch error (HPID17R32)	High pressure switch	Check loose cable connections and contacts	If the same error code appears, high pressure switch should be replaced	-	Power OFF
U1	Compressor overheat protection relay operation (HPID17R32)	Compressor overheat protection relay	Check the resistance by tester	If the compressor overheat protection relay is blown, it should be replaced	Figure 11-10	Manual
		Gas leakage	Check the service valve and refrigerant circuit (pipe)	Correct refrigerant once, then recharge with prescribed mass	-	
Water not getting warm		Fuse CF2 0639U : 250V T3.15A 1039U : 250V T3.15A 1639U : 250V T5A	Check the electric continuity of Fuse CF1 by tester	If CF2 is blown, it should be replaced and check the resistance of 4way valve and the resistance of Defrost heater by tester	Figure 11-9	
		4way valve	Check the resistance of 4way valve by tester	If 4way valve is blown, it should be replaced	Figure 11-7	
		Defrost heater	Check the resistance of Defrost heater by tester	If Defrost heater is blown, it should be replaced	Figure 11-8	
		Short cycle (insufficient air circulation)	Check the blockage of air inlet & outlet	Ensure the installation position to avoid blockage of air inlet & outlet	-	
		Sensor, Temp. Outgoing water and Return water	Check the resistance by tester	If any of these sensors is faulty, it should be replaced	Table 11-4	
		Gas leakage	Check the service valve and refrigerant circuit (pipe)	After fixing the leakage point, collect the refrigerant once, then recharge with prescribed mass	-	
		Clogged water circuit	Check temperature difference of Outgoing/Return water (see Monitor display function) Large difference means flow rate is too low	Remove the blockage, then restart operation	-	

## 11.5 TABLE OF CONTROLLER PCB AND TERMINAL PCB ALARMS

Error code	Error		Method of check	Troubleshooting	Figure/ table	Error reset
L0	EEPROM error	PCB(Controller) and PCB(EEPROM)	-	PCB(Controller) and PCB(EEPROM) should be replaced	-	Power OFF
L1	DHW temperature sensor error	Sensor, temperature DHW tank	Check the resistance by tester	If the sensor is faulty, it should be replaced	Table 11-3	Auto
L2	Outdoor temperature sensor error	Sensor, temperature outdoor	Check the resistance by tester	If the sensor is faulty, it should be replaced	Table 11-5	
L3	Thermal store temperature sensor error	Sensor, temperature thermal store	Check the resistance by tester	If the sensor is faulty, it should be replaced	Table 11-3	
L4	Mix water temperature sensor error	Sensor, temperature Mix water	Check the resistance by tester	If the sensor is faulty, it should be replaced	Table 11-3	
L5	Humidity sensor error	Sensor, Humidity	Check the resistance by tester	If the sensor is faulty, it should be replaced	Figure 11-11	
740	Remote controller communication error	Incorrect remote controller wiring or DIP SW setting	Check loose cable connections and contacts Check DIP SW setting	After having corrected the wiring and DIP SW setting, restart operation	-	
		Loose interface connection cable or contacts	Rear side of remote controller			
		Remote controller	Other than described above	Remote controller should be replaced		
		Controller PCB	Other than described above	Controller PCB should be replaced		
E8	Remote controller communication error	Incorrect remote controller wiring Loose interface connection cable or contacts	Check loose cable connections and contacts	After having corrected the wiring, restart operation	-	
		Controller PCB	Other than described above	Controller PCB should be replaced		
F5	Main PCB communication error	Incorrect main PCB wiring Loose interface connection cable or contacts	Check loose cable connections and contacts	After having corrected the wiring, restart operation	-	
		Main PCB	Other than described above	Main PCB should be replaced		
		Controller PCB	Other than described above	Controller PCB should be replaced		
Terminal PCB cannot be operated		Lead wire of Terminal PCB	Check lead wires are connected to the connectors properly	Connect the connectors to both Terminal PCB and Controller PCB steadily	-	-
Terminal PCB does not display anything			Ensure that there is no disconnection for the lead wires	Lead wires should be replaced		
		Terminal PCB	Other than described above	Terminal PCB should be replaced		
		Controller PCB	Other than described above	Controller PCB should be replaced		



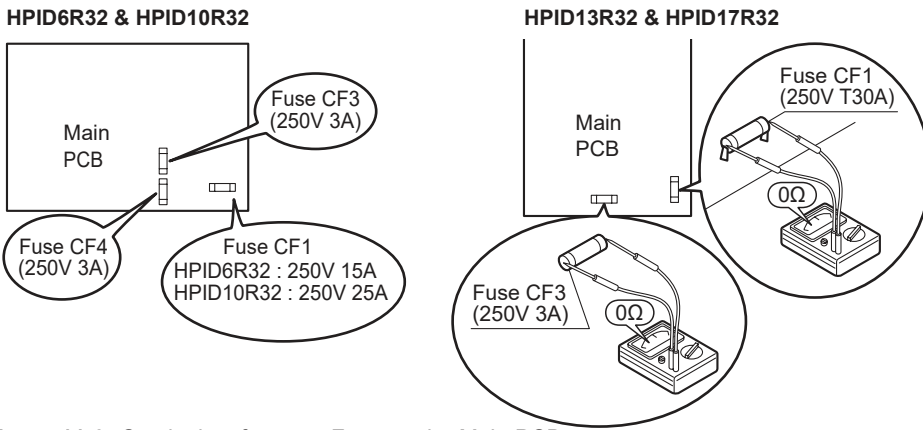


Figure 11-3: Continuity of current Fuse on the Main PCB

Fan motor (HPID6R32 & HPID10R32)

Measure voltage between the connector pins of connector 18.  
 Connector 18 shall be checked during heating operation.  
 Measure voltage as follows without taking off the connector 18.

LOWER Fan motor (HPID13R32 & HPID17R32)


Measure voltage between the connector pins of connector 11.  
 Connector 11 shall be checked during heating operation.  
 Measure voltage as follows without taking off the connector 11.

UPPER Fan motor (HPID13R32 & HPID17R32)

Measure voltage between the connector pins of connector 14.  
 Connector 14 shall be checked during heating operation.  
 Measure voltage as follows without taking off the connector 14.

Between red (+) and black (-), approx. DC200~370V  
 Between yellow (+) and black (-), approx. DC3~7V  
 Between white (+) and black (-), approx. DC15V  
 Main PCB is normal

HPID6R32 & HPID10R32

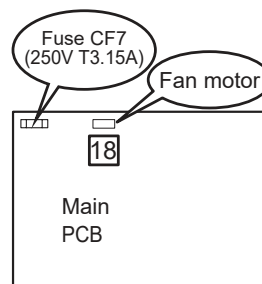

HPID13R32 & HPID17R32

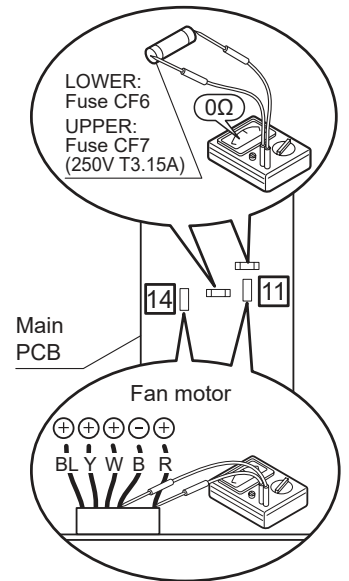


Figure 11-4: Voltage of Fan motor on the Main PCB

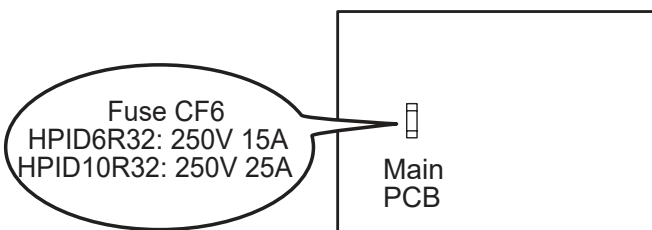


Figure 11-5: Continuity of current Fuse on the Main PCB

Pump (HPID6R32 & HPID10R32)  
 Measure voltage between the connector pins of connector 17.  
 Connector 17 shall be checked during heating operation.  
 Measure voltage as follows without taking off the connector 17.

Pump (HPID13R32 & HPID17R32)  
 Measure voltage between the connector pins of connector 13.  
 Connector 13 shall be checked during heating operation.  
 Measure voltage as follows without taking off the connector 13.

Between white ⊕ and black ⊖, approx. AC200~370V  
 Between brown ⊕ and black ⊖, approx. DC3~7V  
 Between red ⊕ and black ⊖, approx. DC15V

Main PCB is normal

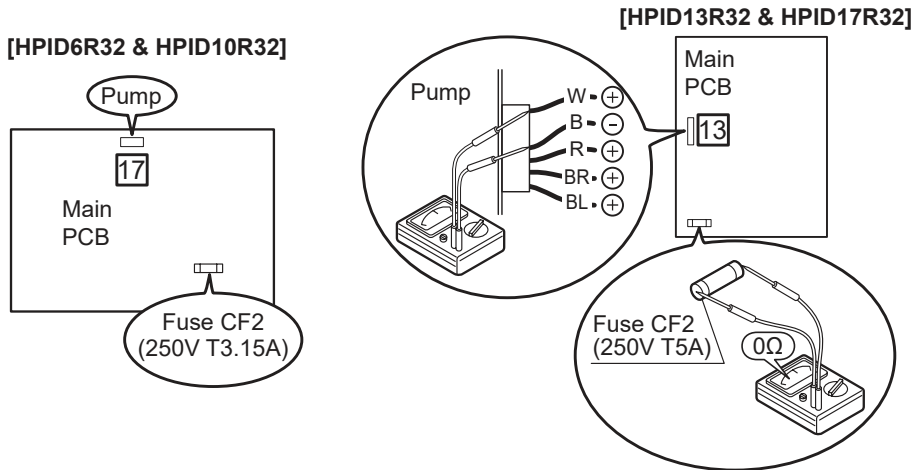


Figure 11-6: Voltage of pump on the Main PCB

Take off the connector and check the resistance 4way valve coil.

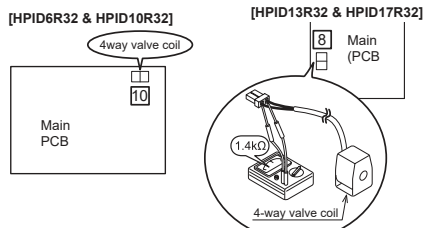


Figure 11-7: Resistance of the 4way valve coil

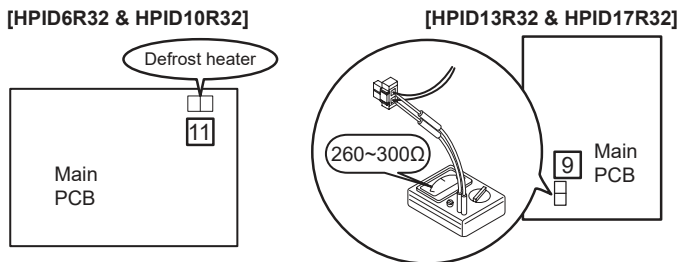


Figure 11-8: Resistance of the defrost heater

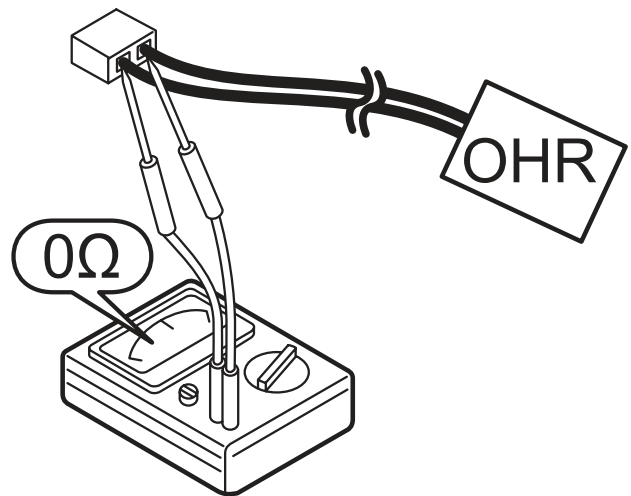


Figure 11-10: Resistance of the compressor overheat protection relay

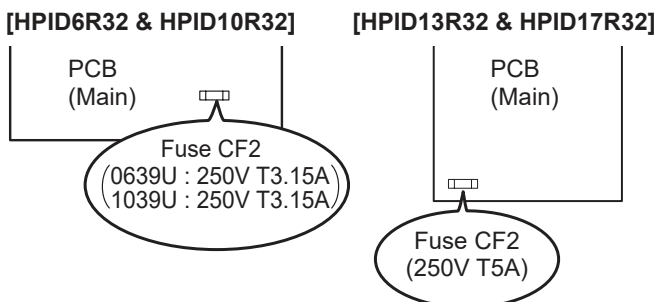


Figure 11-9: Continuity of current fuse on the Main PCB

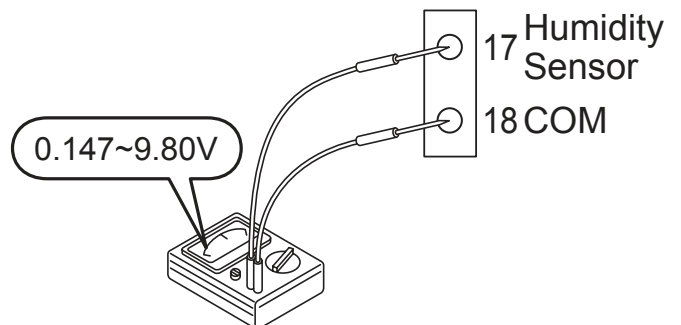


Figure 11-11: Voltage of humidity sensor

**Table 11-1:** Sensor, temperature outdoor (heat pump)

Temperature (°C)	Resistance (kΩ)
0	31
5	24
10	19
15	15
20	12
25	10
30	8.2
35	6.7
40	5.5
45	4.6
50	3.8
55	3.2

**Table 11-2:** Sensor, temperature discharge (heat pump)

Temperature (°C)	Resistance (kΩ)
10	100
20	64
35	33
40	27
50	18
80	6.4

**Table 11-3:** Sensor, temperature defrost/suction (heat pump)  
Sensor temperature DHW tank/thermal store/mix water (Terminal PCB)

Temperature (°C)	Resistance (kΩ)
0	29
5	23
10	19
15	15
20	12
25	10
30	8.3
35	6.9
40	5.7
45	4.8
50	4.1
55	3.4

**Table 11-4:** Sensor, temperature flow and return circulating water (heat pump)


Temperature (°C)	Resistance (kΩ)
0	25
10	16
20	10
30	7.0
40	4.9
50	3.5
60	2.5

**Table 11-5:** Sensor, temperature outdoor (Terminal PCB)

Temperature (°C)	Resistance (kΩ)
-20	107
-15	79
-10	59
-5	44
0	34
5	26
10	20
15	16
20	13
25	10
30	8.0
35	6.5
40	5.3
45	4.3
50	3.6

# 12 Spare Parts


## 12.1 EXPLODED DIAGRAM - HPID6R32

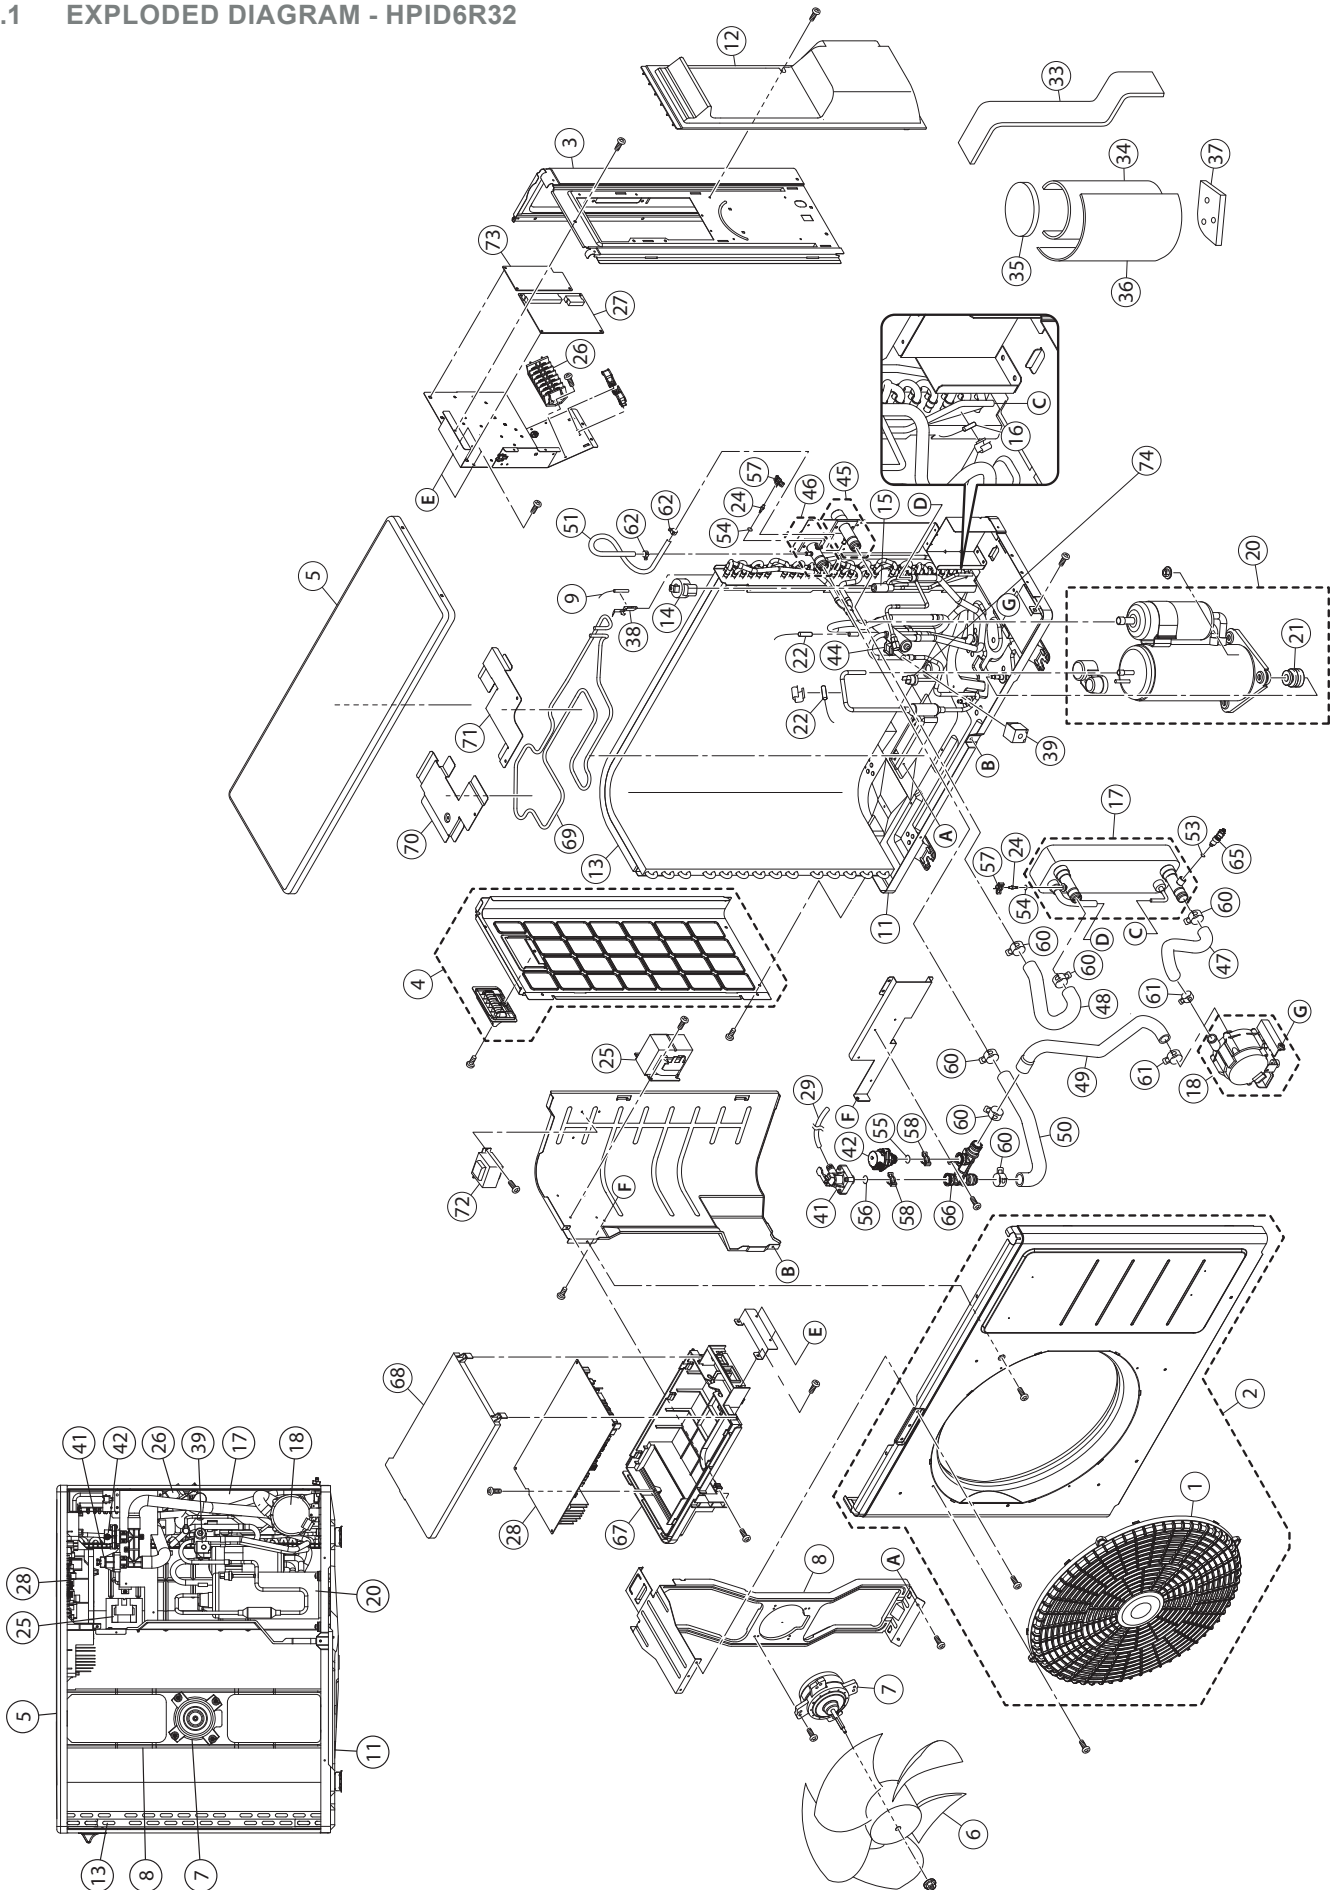

## 12.2 SPARE PARTS LIST - HPID6R32

Item	Description	Product code
1	Outlet grille	HPID887480
2	Front panel assembly	HPID887520
3	Right side panel	HPID885286
4	Left side panel assembly	HPID883741
5	Top panel	HPID884558
6	Propeller fan	HPID922330
7	Motor	HPID944204
8	Bracket (motor)	HPID937023
9	Sensor (temperature outdoor)	HPID883780
11	Bottom panel assembly (without heater)	HPID887482
12	Wiring lid assembly	HPID937262
13	Condenser assembly	HPID883743
14	Coil (expansion valve)	HPID937196
15	Expansion valve	HPID922928
16	Sensor (temperature defrost)	HPID937014
17	Heat exchanger assembly	HPID887485
18	Pump assembly	HPID885394
20	Compressor	HPID887483
21	Vibration proof rubber	HPID887484
22	Sensor (temperature discharge/suction)	HPID937013
24	Sensor (temperature water)	HPID937193
25	Reactor	HPID927200
26	Terminal block	HPID885263
27	Terminal PCB	HPID887187
28	Main PCB	HPID887479
29	Rubber hose (for relief valve)	HPID883784
33	Sound proof material 1	HPID883791
34	Sound proof material 2	HPID887486
35	Sound proof material 3	HPID883793
36	Sound proof material 4	HPID883794
37	Sound proof material 5	HPID887487
38	Outdoor themistor holder	HPID937016
39	Coil - 4-way valve	HPID883796
41	Relief valve	HPID883798
42	Air purge valve	HPID885266
44	4-way valve	HPID927359
45	Circulating water flow port assembly	HPID884560
46	Circulating water return port assembly	HPID883778
47	Rubber hose 1	HPID883786
48	Rubber hose 8	HPID884561
49	Rubber hose 3	HPID885396
50	Rubber hose 4	HPID885397
51	Rubber hose 6	HPID883790
53	O-ring (P3)	HPID807209
54	O-ring (P4)	HPID807207
55	O-ring (P12.5)	HPID808972
56	O-ring (P14)	HPID910164


Item	Description	Product code
57	Quick fastener (for sensor temperature water)	HPID883848
58	Quick fastener (12.7)	HPID790706
60	Hose band A	HPID937221
61	Hose band B	HPID927535
62	Hose band C	HPID934914
65	Drain plug	HPID885519
66	Circulating water connection coupling	HPID885395
67	Case of PCB	HPID883847
68	Case of PCB (cover)	HPID885393
69	Defrost heater	HPID884211
70	Defrost heater holder 1	HPID884212
71	Defrost heater holder 2	HPID884213
72	Power transformer	HPID885264
73	Controller PCB	HPID885765
74	High pressure switch	HPID884120
	Back grille	HPID885782
	Lead wire for pump	HPID886681

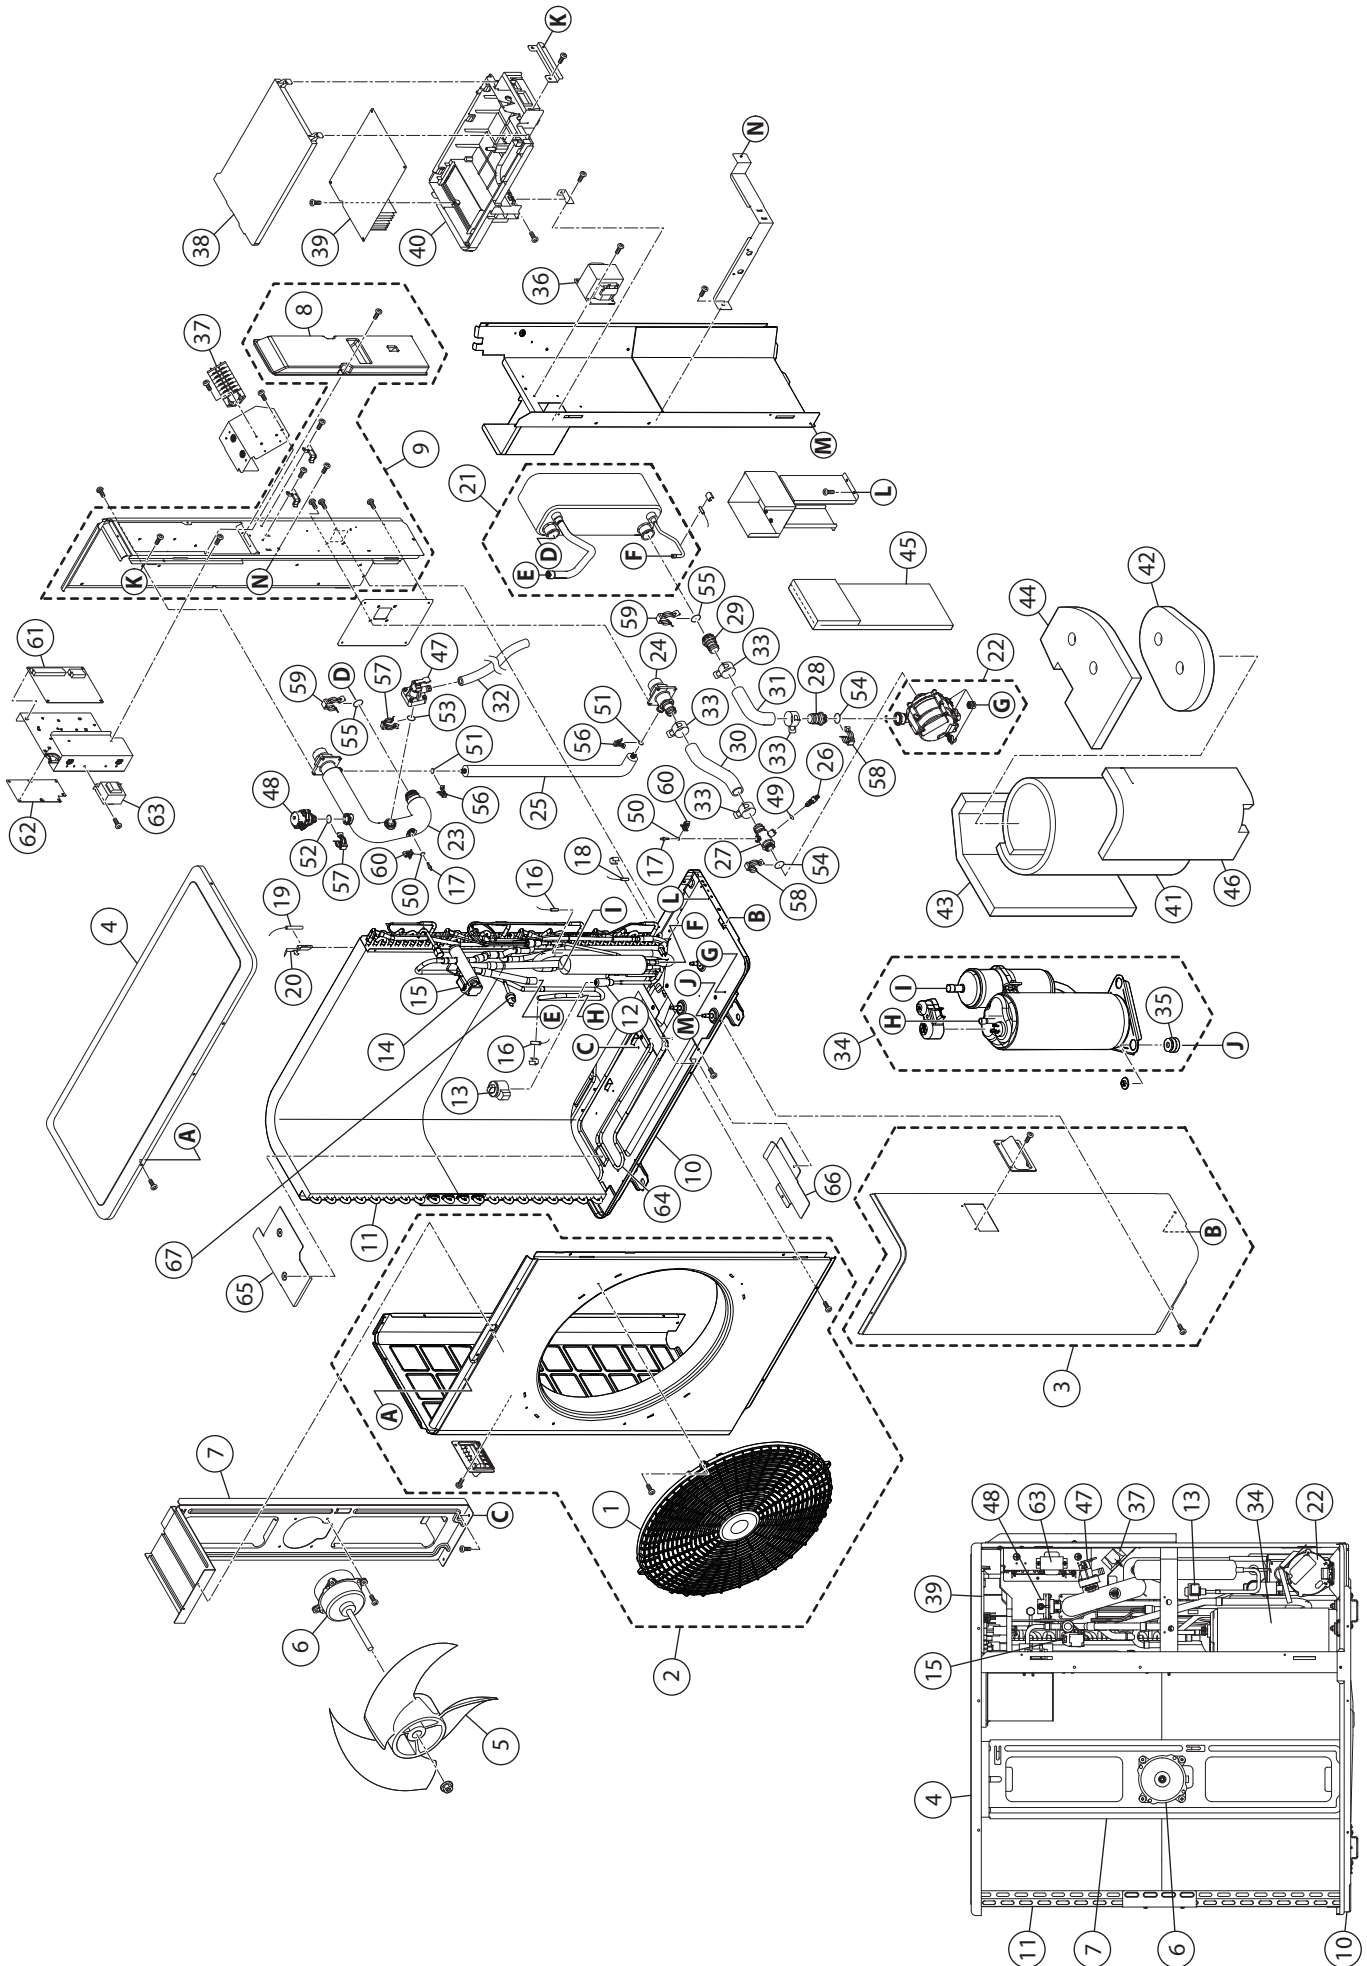

## 12.4 SPARE PARTS LIST - HPID10R32

Item	Description	Product code
1	Outlet grille	HPID938106
2	Front panel assembly (left)	HPID885767
3	Front panel assembly (right)	HPID887521
4	Top panel assembly	HPID885504
5	Propeller fan	HPID934945
6	Motor	HPID885510
7	Bracket (motor)	HPID934947
8	Wiring lid	HPID885507
9	Back panel assembly	HPID885769
10	Bottom panel assembly (without heater)	HPID887492
11	Condenser assembly	HPID883634
12	Expansion valve	HPID922928
13	Coil (expansion valve)	HPID937196
14	4-way valve	HPID938113
15	Coil (4-way valve)	HPID883796
16	Sensor (temperature discharge and suction)	HPID937013
17	Sensor (temperature circulating water)	HPID885265
18	Sensor (temperature defrost)	HPID937014
19	Sensor (temperature outdoor)	HPID883780
20	Outdoor thermistor holder	HPID937016
21	Heat exchanger assembly	HPID887494
22	Pump assembly	HPID885512
23	Circulating water pipe assembly	HPID885513
24	Circulating water return port	HPID885514
25	Bypass pipe assembly	HPID885515
26	Drain plug	HPID885519
27	Hose coupling 1 assembly (pump inlet)	HPID885516
28	Hose coupling 2 assembly (pump outlet)	HPID885271
29	Hose coupling 3 (heat exchanger)	HPID885272
30	Rubber hose (pump inlet water)	HPID885273
31	Rubber hose (pump outlet water)	HPID885517
32	Rubber hose (for relief valve)	HPID885520
33	Hose band	HPID937221
34	Compressor	HPID887493
35	Vibration proof rubber	HPID885798
36	Reactor	HPID885259
37	Terminal block	HPID885263
38	Case of PCB (cover)	HPID885393
39	Main PCB	HPID887489
40	Case of PCB	HPID883847
41	Sound proof material 1	HPID887495
42	Sound proof material 2	HPID883883
43	Sound proof material 3	HPID883884
44	Sound proof material 4	HPID883885
45	Sound proof material 5	HPID884582
46	Sound proof material 6	HPID885518
47	Relief valve	HPID883798

Item	Description	Product code
48	Air purge valve	HPID885266
49	O-ring (P3)	HPID807209
50	O-ring (P4)	HPID807207
51	O-ring (P6)	HPID807205
52	O-ring (P12.5)	HPID808972
53	O-ring (P14)	HPID910164
54	O-ring (P16)	HPID807213
55	O-ring (P22)	HPID886473
56	Quick fastener	HPID761569
57	Quick fastener (12.7)	HPID790706
58	Quick fastener (16A)	HPID963516
59	Quick fastener (16B)	HPID884148
60	Quick fastener (sensor temperature water)	HPID883848
61	Terminal PCB	HPID887187
62	Controller PCB	HPID885765
63	Power transformer	HPID885264
64	Defrost heater	HPID885508
65	Defrost heater holder 1	HPID884163
66	Defrost heater holder 2	HPID884132
67	High pressure switch	HPID884120
	Back grille	HPID885781
	Lead wire for pump	HPID886680

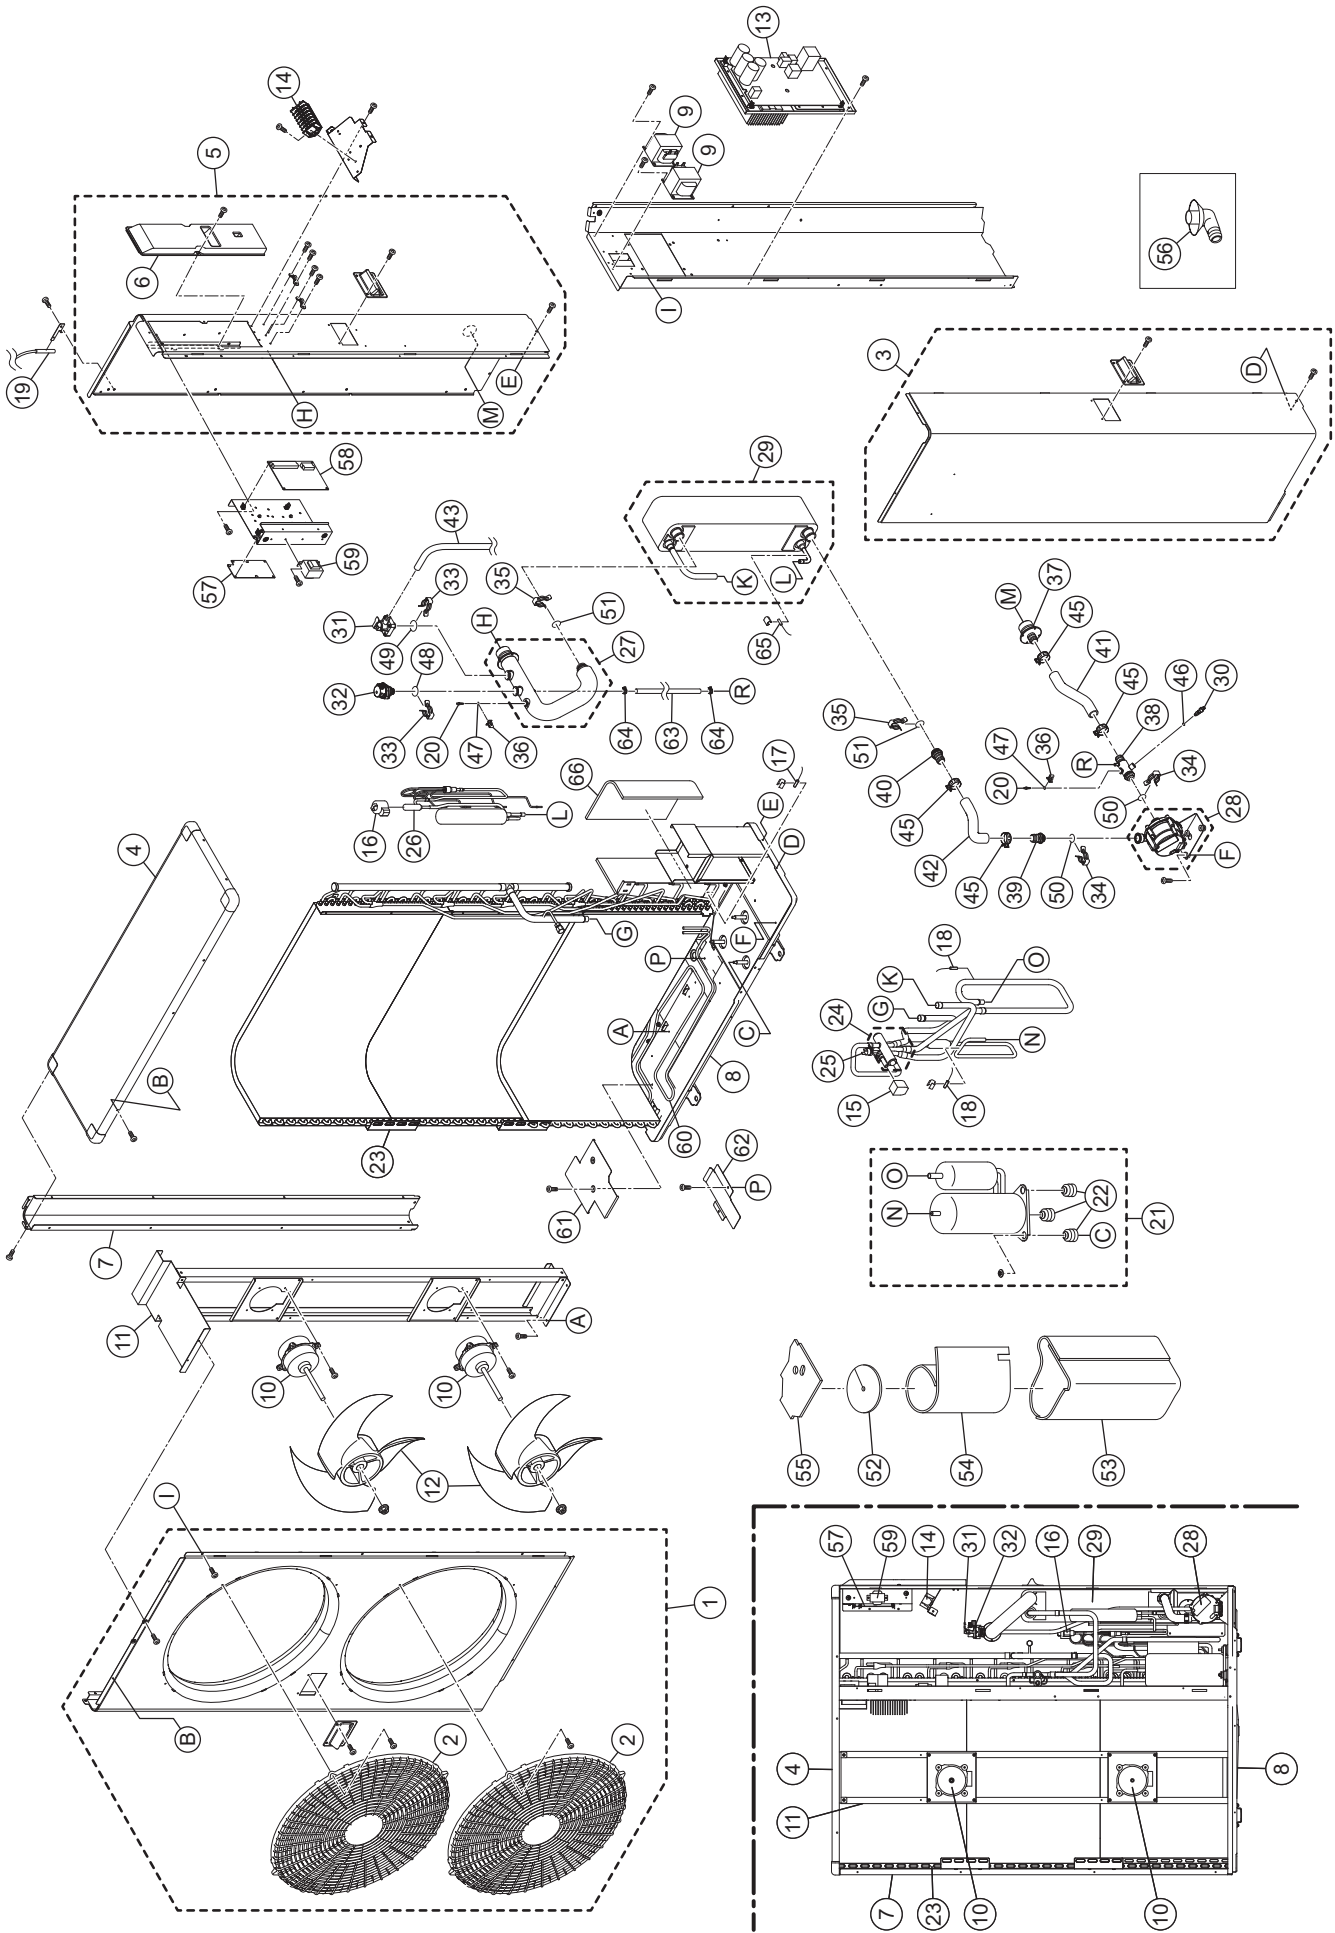




## 12.6 SPARE PARTS LIST - HPID13R32

Item	Description	Product code
1	Front panel assembly (left)	HPID887237
2	Outlet grille	HPID938106
3	Front panel assembly (right)	HPID938106
4	Top panel assembly	HPID884552
5	Back panel assembly (right)	HPID887226
6	Wiring lid	HPID884129
7	Back panel (left)	HPID884126
8	Bottom panel assembly (without heater)	HPID887227
9	Reactor	HPID885259
10	Motor	HPID885260
11	Bracket (motor)	HPID885261
12	Propeller fan	HPID938112
13	Main PCB assembly	HPID887228
14	Terminal block	HPID885263
15	Coil (4-way valve)	HPID883796
16	Coil (expansion valve)	HPID884119
17	Sensor (temperature defrost)	HPID887229
18	Sensor (temperature discharge and suction)	HPID884139
19	Sensor (temperature outdoor)	HPID884140
20	Sensor (temperature water)	HPID885265
21	Compressor	HPID887230
22	Vibration proof rubber	HPID887231
23	Condenser assembly	HPID887232
24	4-way valve	HPID938113
25	High pressure switch	HPID884120
26	Expansion valve	HPID885511
27	Circulating water pipe assembly	HPID885267
28	Pump assembly	HPID885268
29	Heat exchanger assembly	HPID887291
30	Drain plug	HPID885519
31	Relief valve	HPID883798
32	Air purge valve	HPID885266
33	Quick fastener (12.7)	HPID790706
34	Quick fastener (16A)	HPID963516
35	Quick fastener (16B)	HPID884148
36	Quick fastener (sensor temperature water)	HPID883848
38	Circulating water return port	HPID885269
38	Hose coupling 1 assembly (pump input)	HPID885270
39	Hose coupling 2 (pump outlet)	HPID885271
40	Hose coupling 3 (heat exchanger)	HPID885272
41	Rubber hose (pump input)	HPID885273
42	Rubber hose (pump outlet)	HPID885274
43	Rubber hose (relief valve)	HPID934970
45	Hose band	HPID937221
46	O-ring (P3)	HPID807209
47	O-ring (P4)	HPID807207
48	O-ring (P12.5)	HPID808972

Item	Description	Product code
49	O-ring (P14)	HPID910164
50	O-ring (P16)	HPID807213
51	O-ring (P22)	HPID866473
52	Sound proof material 1	HPID887233
53	Sound proof material 2	HPID887234
54	Sound proof material 3	HPID887235
55	Sound proof material 4	HPID887236
56	Drain elbow	HPID881618
57	Controller PCB	HPID885765
58	Terminal PCB	HPID887187
59	Power transformer	HPID885264
60	Defrost heater	HPID884130
61	Defrost heater holder 1	HPID884131
62	Defrost heater holder 2	HPID884132
63	Rubber hose	HPID885275
64	Hose band	HPID934914
66	Sound proof material 5	HPID887296

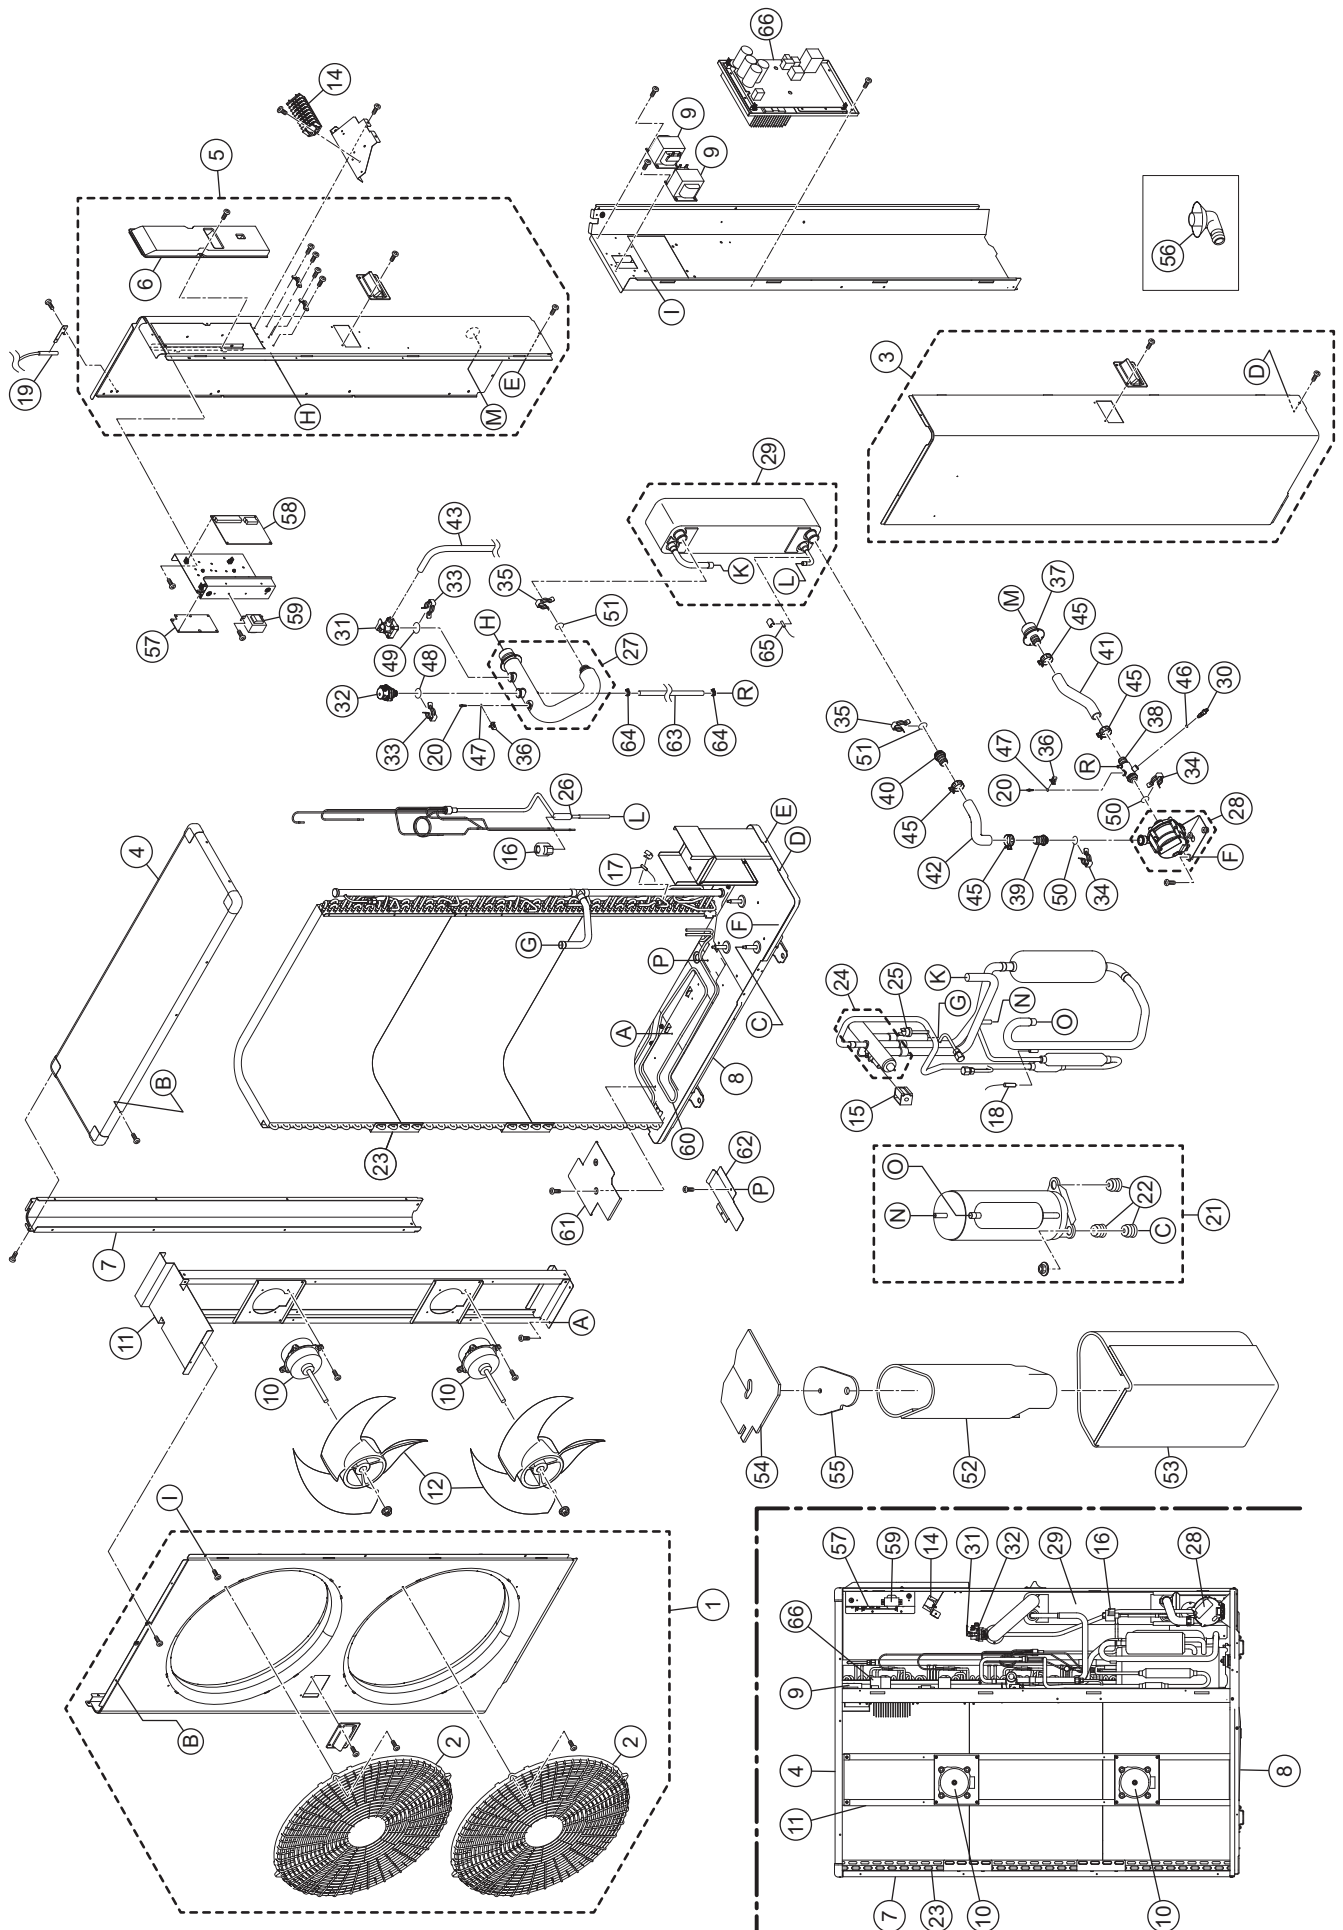

## 12.8 SPARE PARTS LIST - HPID17R32

Item	Description	Product code
1	Front panel assembly (left)	HPID887237
2	Outlet grille	HPID938106
3	Front panel assembly (right)	HPID887522
4	Top panel assembly	HPID884552
5	Back panel assembly (right)	HPID887226
6	Wiring lid	HPID884129
7	Back panel (left)	HPID884126
8	Bottom panel assembly (without heater)	HPID887192
9	Reactor	HPID885259
10	Motor	HPID885260
11	Bracket (motor)	HPID885261
12	Propeller fan	HPID938112
13	Main PCB assembly	HPID887496
14	Terminal block	HPID885263
15	Coil (4-way valve)	HPID883796
16	Coil (expansion valve)	HPID884119
17	Sensor (temperature defrost)	HPID937014
18	Sensor (temperature discharge and suction)	HPID884139
19	Sensor (temperature outdoor)	HPID884140
20	Sensor (temperature water)	HPID885265
21	Compressor	HPID887498
22	Vibration proof rubber	HPID884135
23	Condenser assembly	HPID887195
24	4-way valve	HPID884117
25	High pressure switch	HPID884120
26	Expansion valve	HPID884118
27	Circulating water pipe assembly	HPID885267
28	Pump assembly	HPID885268
29	Heat exchanger assembly	HPID885262
30	Drain plug	HPID885519
31	Relief valve	HPID883798
32	Air purge valve	HPID885266
33	Quick fastener (12.7)	HPID790706
34	Quick fastener (16A)	HPID963516
35	Quick fastener (16B)	HPID884148
36	Quick fastener (sensor temperature water)	HPID883848
38	Circulating water return port	HPID885269
38	Hose coupling 1 assembly (pump input)	HPID885270
39	Hose coupling 2 (pump outlet)	HPID885271
40	Hose coupling 3 (heat exchanger)	HPID885272
41	Rubber hose (pump input)	HPID885273
42	Rubber hose (pump outlet)	HPID885274
43	Rubber hose (relief valve)	HPID934970
44	Hose band (relief valve)	HPID934918
45	Hose band	HPID937221
46	O-ring (P3)	HPID807209
47	O-ring (P4)	HPID807207

Item	Description	Product code
48	O-ring (P12.5)	HPID808972
49	O-ring (P14)	HPID910164
50	O-ring (P16)	HPID807213
51	O-ring (P22)	HPID866473
52	Sound proof material 1	HPID887196
53	Sound proof material 2	HPID887197
54	Sound proof material 3	HPID887198
55	Sound proof material 4	HPID887199
56	Drain elbow	HPID881618
57	Controller PCB	HPID885765
58	Terminal PCB	HPID887187
59	Power transformer	HPID885264
60	Defrost heater	HPID884130
61	Defrost heater holder 1	HPID884131
62	Defrost heater holder 2	HPID884132
63	Rubber hose	HPID885275
64	Hose band	HPID934914
	Corner cover set (top panel)	HPID885783
	Side grille	HPID885600
	Back grille	HPID885599
	Lead wire for pump	HPID886679

# 13 EC Declarations of Conformity

## 13.1 EC DECLARATION OF CONFORMITY - HPID6R32

This declaration is made under the sole responsibility of the following Manufacturer.

The Manufacturer declares that the following Products conform to the requirements of EU Directives, Regulations and Harmonized Standards as below stated.

The Technical Construction Files are retained at the following Manufacturer's location.

<b>Product:</b>	Air to Water Heat Pump
<b>Model:</b>	Grant Aerona <sup>3</sup> HPID6R32
<b>Low Voltage Directive:</b>	2014/35/EU
<b>Machinery Directive:</b>	2006/42/EC
EN 60335-2-40:	2003, +A11: 2004, +A12: 2005, +A1: 2006, +A2: 2009, +A13: 2012
EN 60335-1:	2012, +A11: 2014
EN 62233:	2008
<b>EMC Directive:</b>	2014/30/EU
EN 61000-6-1:	2007
EN 61000-6-3:	2007, +A1: 2011
EN 61000-3-2:	2014
EN 61000-3-3:	2013
<b>Ecodesign Directive:</b>	2009/125/EC [Space heaters and combination heaters: 811/2013; 813/2013]
EN 14511-3:	2018
EN 14825:	2016
EN 12102:	2017
EN 16147:	2017
<b>RoHS Directive:</b>	2015/863/EU
EN 50581:	2012
<b>Pressure Equipment Directive:</b>	2014/68/EU

**Place of issue:** United Kingdom

**Date of issue:** 28th March 2019

**Authorised Signatory:**



Neil Sawers - Technical Manager

### 13.2 EC DECLARATION OF CONFORMITY - HPID10R32

This declaration is made under the sole responsibility of the following Manufacturer.

The Manufacturer declares that the following Products conform to the requirements of EU Directives, Regulations and Harmonized Standards as below stated.

The Technical Construction Files are retained at the following Manufacturer's location.

<b>Product:</b>	Air to Water Heat Pump
<b>Model:</b>	Grant Aerona <sup>3</sup> HPID10R32
<b>Low Voltage Directive:</b>	2014/35/EU
<b>Machinery Directive:</b>	2006/42/EC
EN 60335-2-40:	2003, +A11: 2004, +A12: 2005, +A1: 2006, +A2: 2009, +A13: 2012
EN 60335-1:	2012, +A11: 2014
EN 62233:	2008
<b>EMC Directive:</b>	2014/30/EU
EN 61000-6-1:	2007
EN 61000-6-3:	2007, +A1: 2011
EN 61000-3-11:	2001
EN 61000-3-12:	2011
EN 61000-3-3:	2013 NOTE: Meets the current technical requirements only of EN 61000-3-3 : 2013
<b>Ecodesign Directive:</b>	2009/125/EC [Space heaters and combination heaters: 811/2013; 813/2013]
EN 14511-3:	2018
EN 14825:	2016
EN 12102:	2017
EN 16147:	2017
<b>RoHS Directive:</b>	2015/863/EU
EN 50581:	2012
<b>Pressure Equipment Directive:</b>	2014/68/EU

**Place of issue:** United Kingdom

**Date of issue:** 28th March 2019

**Authorised Signatory:**



Neil Sawers - Technical Manager

### 13.3 EC DECLARATION OF CONFORMITY - HPID13R32

This declaration is made under the sole responsibility of the following Manufacturer.

The Manufacturer declares that the following Products conform to the requirements of EU Directives, Regulations and Harmonized Standards as below stated.

The Technical Construction Files are retained at the following Manufacturer's location.

<b>Product:</b>	Air to Water Heat Pump
<b>Model:</b>	Grant AERONA <sup>3</sup> HPID13R32
<b>Low Voltage Directive:</b>	2014/35/EU
<b>Machinery Directive:</b>	2006/42/EC
EN 60335-2-40:	2003, +A11: 2004, +A12: 2005, +A1: 2006, +A2: 2009, +A13: 2012
EN 60335-1:	2012, +A11: 2014
EN 62233:	2008
<b>EMC Directive:</b>	2014/30/EU
EN 61000-6-1:	2007
EN 61000-6-3:	2007, +A1: 2011
EN 61000-3-11:	2001
EN 61000-3-12:	2011
EN 61000-3-3:	2013 NOTE: Meets the current technical requirements only of EN 61000-3-3
<b>Ecodesign Directive:</b>	2009/125/EC [Space heaters and combination heaters: 811/2013; 813/2013]
EN 14511-3:	2018
EN 14825:	2016
EN 12102:	2017
EN 16147:	2017
<b>RoHS Directive:</b>	2015/863/EU
EN 50581:	2012
<b>Pressure Equipment Directive:</b>	2014/68/EU

**Place of issue:** United Kingdom

**Date of issue:** 28th March 2019

**Authorised Signatory:**



Neil Sawers - Technical Manager

### 13.4 EC DECLARATION OF CONFORMITY - HPID17R32

This declaration is made under the sole responsibility of the following Manufacturer.

The Manufacturer declares that the following Products conform to the requirements of EU Directives, Regulations and Harmonized Standards as below stated.

The Technical Construction Files are retained at the following Manufacturer's location.

**Product:** Air to Water Heat Pump  
**Model:** Grant Aerona<sup>3</sup> HPID17R32

**Low Voltage Directive:** 2014/35/EU

**Machinery Directive:** 2006/42/EC

EN 60335-2-40: 2003, +A11: 2004, +A12: 2005, +A1: 2006, +A2: 2009, +A13: 2012

EN 60335-1: 2012, +A11: 2014

EN 62233: 2008

**EMC Directive:** 2014/30/EU

EN 61000-6-1: 2007

EN 61000-6-3: 2007, +A1: 2011

EN 61000-3-11: 2001

EN 61000-3-12: 2011

EN 61000-3-3: 2013 NOTE: Meets the current technical requirements only of EN 61000-3-3

**Ecodesign Directive:** 2009/125/EC [Space heaters and combination heaters: 811/2013; 813/2013]

EN 14511-3: 2018

EN 14825: 2016

EN 12102: 2017

EN 16147: 2017

**RoHS Directive:** 2015/863/EU

EN 50581: 2012

**Pressure Equipment Directive:** 2014/68/EU

**Place of issue:** United Kingdom

**Date of issue:** 28th March 2019

**Authorised Signatory:**



Neil Sawers - Technical Manager

Page intentionally left blank.



# 14 Health and Safety Information

## 14.1 GENERAL

Under the Consumer Protection Act 1987 and Section 6 of the Health and Safety at Work Act 1974, we are required to provide information on substances hazardous to health (COSHH Regulations 1988).

Adhesives, sealants and paints used in the manufacture of the product are cured and present no known hazards when used in the manner for which they are intended.

## ! WARNING !

**Isolate the heat pump from the electricity supply before removing any covers.**

## 14.2 REFRIGERANT (R32)

The refrigerant is hermetically sealed within the heat pump.

Work involving the refrigerant must only be performed by a qualified F-Gas Engineer or an authorised dealer with a refrigerant handling certificate.

Under no circumstances should the refrigerant be vented or otherwise released to the atmosphere.

## 14.2.1 FIRST AID MEASURES

### Inhalation

In low concentrations may cause narcotic effects. Symptoms may include dizziness, headache, nausea and loss of co-ordination.

In high concentrations may cause asphyxiation. Symptoms may include loss of mobility/consciousness. Victim may not be aware of asphyxiation.

Remove victim to uncontaminated area wearing self contained breathing apparatus. Keep victim warm and rested. Seek urgent medical advice.

Apply artificial respiration if breathing stopped.

### Skin/eye contact

In case of frostbite spray with water for at least 15 minutes. Apply a sterile dressing.

Immediately flush eyes thoroughly with water for at least 15 minutes.

Remove contaminated clothing. Drench affected area with water for at least 15 minutes.

Obtain medical assistance

### Ingestion

Ingestion is not considered a potential route of exposure.

# 15 Disposal and Recycling

## General

Grant UK air source heat pumps incorporate components manufactured from a variety of different materials. However, most of these materials cannot be recycled as they are contaminated by the refrigerant and oil used in the heat pump.

## Disassembly

This product may only be disassembled by a suitably qualified (F-gas) refrigeration engineer.

Under no circumstances should the refrigerant be released into the atmosphere.

## Recycling

In order for the heat pump to be recycled or disposed of it must be taken to a suitably licensed waste facility. You will need to contact a qualified refrigeration engineer to do this for you.

## Disposal

The refrigerant will be removed and returned to the refrigerant manufacturer for recycling or disposal.

The complete heat pump unit, including the compressor and the oil contained within it, must be disposed of at a licensed waste facility, as it still remains contaminated by the refrigerant.

# 16 Product Fiche

## 16.1 PRODUCT FICHE - HPID6R32

Product fiche concerning the Commission Delegated Regulations  
(EU)No 811/2013 of 18 February 2013  
(EU)No 813/2013 of 2 August 2013

Models:	Outdoor Unit:	Aerona <sup>3</sup> HPID6R32
	Indoor Unit:	None
Air-to-water heat pump		Yes
Brine-to-water heat pump		No
Low temperature heat pump		No
Equipped with a supplementary heater		No
Heat Pump Combination Heater		Yes
Parameters shall be declared for		Low-temperature applications
Parameters shall be declared for		Average Climate Conditions

Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Rated Heat Output (*)	Prated	4.5	kW	Seasonal Space Heating Efficiency	$\eta_s$	184	%
<b>Declared capacity for heating for part load at Indoor Temperature 20°C and Outdoor Temperature Tj</b>				<b>Declared co-efficient of performance or primary energy ratio for part load at Indoor temperature 20°C and Outdoor Temperature Tj</b>			
Tj = -7°C	Pdh	4.68	kW	Tj = -7°C	COPd	3.13	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = +2°C	Pdh	3.24	kW	Tj = +2°C	COPd	6.02	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = +7°C	Pdh	2.10	kW	Tj = +7°C	COPd	7.40	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = +12°C	Pdh	2.00	kW	Tj = +12°C	COPd	9.20	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = bivalent temperature	Pdh	3.87	kW	Tj = bivalent temperature	COPd	2.67	
Tj = Operation Limit Temperature	Pdh	3.87	kW	Tj = Operation Limit Temperature	COPd	2.67	
Tj = -15°C (if TOL < -20°C)	Pdh	-	kW	Tj = -15°C (if TOL < -20°C)	COPd	-	
Bivalent Temperature	Tbiv	-10	°C	Operation Limit Temperature	TOL	-10	°C
				Heating water Operating Limit Temperature	WTOL	60	°C

Power consumption in modes other than active mode				Supplementary Heater			
Off Mode	P <sub>OFF</sub>	0.10	kW	Rate heat output	P <sub>sup</sub>	0.00	kW
Thermostat-off mode	P <sub>TO</sub>	0.04	kW				
Standby mode	P <sub>SB</sub>	0.10	kW	Type of energy input			
Crankcase heater mode	P <sub>CK</sub>	0.00	kW				

Other items							
Capacity Control	Variable			Rated airflow, outdoors	-	2082	m <sup>3</sup> /h
Sound Power Level (indoors/outdoors)	L <sub>WA</sub>	44/65	dB(A)				
Annual energy consumption	Q <sub>HE</sub>	1981	kWh				
<b>For heat pump combination heater</b>				Water heating energy efficiency	$\eta_{wh}$		%
Declared load profile		N/A					
Daily electricity consumption	Q <sub>elec</sub>		kWh				
Annual electricity consumption	AEC		kWh				

\* For heat pumps, space heaters and heat pump combination heaters, the rated heat output Prated is equal to the design load for heating Pdesignh, and the rated heat output of a supplementary heater Psup is equal to the supplementary capacity for heating sup (Tj).

\*\* If Cdh is not determined by measurement then the default degradation coefficient is Cdh = 0.9.

Models:	Outdoor Unit:	Aerona <sup>3</sup> HPID6R32
	Indoor Unit:	None
Air-to-water heat pump		Yes
Brine-to-water heat pump		No
Low temperature heat pump		No
Equipped with a supplementary heater		No
Heat Pump Combination Heater		Yes
Parameters shall be declared for		Medium-temperature applications
Parameters shall be declared for		Average Climate Conditions

Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Rated Heat Output (*)	Prated	4.5	kW	Seasonal Space Heating Efficiency	$\eta_s$	132	%
<b>Declared capacity for heating for part load at Indoor Temperature 20°C and Outdoor Temperature Tj</b>				<b>Declared co-efficient of performance or primary energy ratio for part load at Indoor temperature 20°C and Outdoor Temperature Tj</b>			
Tj = -7°C	Pdh	5.03	kW	Tj = -7°C	COPd	2.11	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = +2°C	Pdh	3.21	kW	Tj = +2°C	COPd	4.03	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = +7°C	Pdh	2.20	kW	Tj = +7°C	COPd	5.10	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = +12°C	Pdh	1.78	kW	Tj = +12°C	COPd	6.15	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = bivalent temperature	Pdh	3.51	kW	Tj = bivalent temperature	COPd	1.85	
Tj = Operation Limit Temperature	Pdh	3.51	kW	Tj = Operation Limit Temperature	COPd	1.85	
Tj = -15°C (if TOL < -20°C)	Pdh	-	kW	Tj = -15°C (if TOL < -20°C)	COPd	-	
Bivalent Temperature	Tbiv	-10	°C	Operation Limit Temperature	TOL	-10	°C
				Heating water Operating Limit Temperature	WTOL	60	°C

Power consumption in modes other than active mode				Supplementary Heater			
Off Mode	P <sub>OFF</sub>	0.10	kW	Rate heat output	P <sub>sup</sub>	0.00	kW
Thermostat-off mode	P <sub>TO</sub>	0.04	kW				
Standby mode	P <sub>SB</sub>	0.10	kW	Type of energy input			
Crankcase heater mode	P <sub>CK</sub>	0.00	kW				

Other items							
Capacity Control	Variable			Rated airflow, outdoors	-	2082	m <sup>3</sup> /h
Sound Power Level (indoors/outdoors)	L <sub>WA</sub>	44/65	dB(A)				
Annual energy consumption	Q <sub>HE</sub>	2755	kWh				
<b>For heat pump combination heater</b>				Water heating energy efficiency	$\eta_{wh}$	114	%
Declared load profile		L		Reference Hot Water	$\Theta'_{WH}$	49.04	°C
Daily electricity consumption	Q <sub>SEC</sub>	4.23	kWh				
Annual electricity consumption	AEC	897.77	kWh/a				

\* For heat pumps, space heaters and heat pump combination heaters, the rated heat output Prated is equal to the design load for heating Pdesignh, and the rated heat output of a supplementary heater Psup is equal to the supplementary capacity for heating sup (Tj).

\*\* If Cdh is not determined by measurement then the default degradation coefficient is Cdh = 0.9.

## 16.2 PRODUCT FICHE - HPID10R32

Product fiche concerning the Commission Delegated Regulations

(EU)No 811/2013 of 18 February 2013

(EU)No 813/2013 of 2 August 2013

Models:	Outdoor Unit:	Aerona <sup>3</sup> HPID10R32
	Indoor Unit:	None
Air-to-water heat pump		Yes
Brine-to-water heat pump		No
Low temperature heat pump		No
Equipped with a supplementary heater		No
Heat Pump Combination Heater		Yes
Parameters shall be declared for		Low-temperature applications
Parameters shall be declared for		Average Climate Conditions

Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Rated Heat Output (*)	Prated	9.2	kW	Seasonal Space Heating Efficiency	$\eta_s$	206	%
<b>Declared capacity for heating for part load at Indoor Temperature 20°C and Outdoor Temperature Tj</b>				<b>Declared co-efficient of performance or primary energy ratio for part load at Indoor temperature 20°C and Outdoor Temperature Tj</b>			
Tj = -7°C	Pdh	9.03	kW	Tj = -7°C	COPd	3.30	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = +2°C	Pdh	5.29	kW	Tj = +2°C	COPd	5.96	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = +7°C	Pdh	3.40	kW	Tj = +7°C	COPd	7.80	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = +12°C	Pdh	3.70	kW	Tj = +12°C	COPd	9.20	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = bivalent temperature	Pdh	7.99	kW	Tj = bivalent temperature	COPd	3.11	
Tj = Operation Limit Temperature	Pdh	5.90	kW	Tj = Operation Limit Temperature	COPd	2.74	
Tj = -15°C (if TOL < -20°C)	Pdh	-	kW	Tj = -15°C (if TOL < -20°C)	COPd	-	
Bivalent Temperature	Tbiv	-8	°C	Operation Limit Temperature	TOL	-10	°C
				Heating water Operating Limit Temperature	WTOL	60	°C

Power consumption in modes other than active mode				Supplementary Heater			
Off Mode	P <sub>OFF</sub>	0.10	kW	Rate heat output	P <sub>sup</sub>	0.00	kW
Thermostat-off mode	P <sub>TO</sub>	0.04	kW				
Standby mode	P <sub>SB</sub>	0.10	kW	Type of energy input			
Crankcase heater mode	P <sub>CK</sub>	0.00	kW				

Other items							
Capacity Control	Variable			Rated airflow, outdoors	-	2664	m <sup>3</sup> /h
Sound Power Level (indoors/outdoors)	L <sub>WA</sub>	43/64	dB(A)				
Annual energy consumption	Q <sub>HE</sub>	3592	kWh				
<b>For heat pump combination heater</b>				Water heating energy efficiency	$\eta_{wh}$		%
Declared load profile		N/A					
Daily electricity consumption	Q <sub>elec</sub>		kWh				
Annual electricity consumption	AEC		kWh				

\* For heat pumps, space heaters and heat pump combination heaters, the rated heat output Prated is equal to the design load for heating Pdesignh, and the rated heat output of a supplementary heater Psup is equal to the supplementary capacity for heating sup (Tj).

\*\* If Cdh is not determined by measurement then the default degradation coefficient is Cdh = 0.9.

Models:	Outdoor Unit:	Aerona <sup>3</sup> HPID10R32
	Indoor Unit:	None
Air-to-water heat pump		Yes
Brine-to-water heat pump		No
Low temperature heat pump		No
Equipped with a supplementary heater		No
Heat Pump Combination Heater		Yes
Parameters shall be declared for		Medium-temperature applications
Parameters shall be declared for		Average Climate Conditions

Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Rated Heat Output (*)	Prated	8.7	kW	Seasonal Space Heating Efficiency	$\eta_s$	138	%
<b>Declared capacity for heating for part load at Indoor Temperature 20°C and Outdoor Temperature Tj</b>				<b>Declared co-efficient of performance or primary energy ratio for part load at Indoor temperature 20°C and Outdoor Temperature Tj</b>			
Tj = -7°C	Pdh	8.16	kW	Tj = -7°C	COPd	2.29	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = +2°C	Pdh	5.07	kW	Tj = +2°C	COPd	3.53	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = +7°C	Pdh	3.40	kW	Tj = +7°C	COPd	5.41	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = +12°C	Pdh	3.95	kW	Tj = +12°C	COPd	8.45	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = bivalent temperature	Pdh	7.36	kW	Tj = bivalent temperature	COPd	2.14	
Tj = Operation Limit Temperature	Pdh	5.77	kW	Tj = Operation Limit Temperature	COPd	1.85	
Tj = -15°C (if TOL < -20°C)	Pdh	-	kW	Tj = -15°C (if TOL < -20°C)	COPd	-	
Bivalent Temperature	Tbiv	-8	°C	Operation Limit Temperature	TOL	-10	°C
				Heating water Operating Limit Temperature	WTOL	60	°C

Power consumption in modes other than active mode				Supplementary Heater			
Off Mode	P <sub>OFF</sub>	0.10	kW	Rate heat output	P <sub>sup</sub>	0.00	kW
Thermostat-off mode	P <sub>TO</sub>	0.04	kW				
Standby mode	P <sub>SB</sub>	0.10	kW	Type of energy input			
Crankcase heater mode	P <sub>CK</sub>	0.00	kW				

Other items							
Capacity Control	Variable			Rated airflow, outdoors	-	2664	m <sup>3</sup> /h
Sound Power Level (indoors/outdoors)	L <sub>WA</sub>	43/64	dBA				
Annual energy consumption	Q <sub>HE</sub>	5064	kWh				
<b>For heat pump combination heater</b>				Water heating energy efficiency	$\eta_{wh}$	99.6	%
Declared load profile		L		Reference Hot Water	$\Theta'_{WH}$	51.6	°C
Daily electricity consumption	Q <sub>elec</sub>	4.85	kWh				
Annual electricity consumption	AEC	1027.94	kWh/a				

\* For heat pumps, space heaters and heat pump combination heaters, the rated heat output Prated is equal to the design load for heating Pdesignh, and the rated heat output of a supplementary heater Psup is equal to the supplementary capacity for heating sup (Tj).

\*\* If Cdh is not determined by measurement then the default degradation coefficient is Cdh = 0.9.

### 16.3 PRODUCT FICHE - HPID13R32

Product fiche concerning the Commission Delegated Regulations  
(EU)No 811/2013 of 18 February 2013  
(EU)No 813/2013 of 2 August 2013

Models:	Outdoor Unit:	Aerona <sup>3</sup> HPID13R32
	Indoor Unit:	None
Air-to-water heat pump		Yes
Brine-to-water heat pump		No
Low temperature heat pump		No
Equipped with a supplementary heater		No
Heat Pump Combination Heater		No
Parameters shall be declared for		Low-temperature applications
Parameters shall be declared for		Average Climate Conditions

Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Rated Heat Output (*)	Prated	10.0	kW	Seasonal Space Heating Efficiency	$\eta_s$	215	%
<b>Declared capacity for heating for part load at Indoor Temperature 20°C and Outdoor Temperature Tj</b>				<b>Declared co-efficient of performance or primary energy ratio for part load at Indoor temperature 20°C and Outdoor Temperature Tj</b>			
Tj = -10°C	Pdh	10.0	kW	Tj = -10°C	COPd	2.90	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = -7°C	Pdh	9.6	kW	Tj = -7°C	COPd	3.03	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = +2°C	Pdh	6.10	kW	Tj = +2°C	COPd	6.20	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = +7°C	Pdh	4.30	kW	Tj = +7°C	COPd	8.50	
Degradation co-efficient (**)	Cdh	0.98	-				
Tj = +12°C	Pdh	4.10	kW	Tj = +12°C	COPd	10.30	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = bivalent temperature	Pdh	8.96	kW	Tj = bivalent temperature	COPd	3.01	
Tj = Operation Limit Temperature	Pdh	7.70	kW	Tj = Operation Limit Temperature	COPd	2.98	
Tj = -15°C (if TOL < -20°C)	Pdh	-	kW	Tj = -15°C (if TOL < -20°C)	COPd	-	
Bivalent Temperature	Tbiv	-8	°C	Operation Limit Temperature	TOL	-10	°C
				Heating water Operating Limit Temperature	WTOL		°C

Power consumption in modes other than active mode				Supplementary Heater			
Off Mode	P <sub>OFF</sub>	0.10	kW	Rate heat output	P <sub>sup</sub>	0.00	kW
Thermostat-off mode	P <sub>TO</sub>	0.04	kW				
Standby mode	P <sub>SB</sub>	0.10	kW	Type of energy input			
Crankcase heater mode	P <sub>CK</sub>	0.00	kW				

Other items							
Capacity Control	Variable			Rated airflow, outdoors	-	4464	m <sup>3</sup> /h
Sound Power Level (indoors/outdoors)	L <sub>WA</sub>	39/61	dBA				
Annual energy consumption	Q <sub>HE</sub>	3794	kWh				
<b>For heat pump combination heater</b>				Water heating energy efficiency	$\eta_{wh}$	-	%
Declared load profile	-	-	-				
Daily electricity consumption	Q <sub>elec</sub>	-	kWh				
Annual electricity consumption	AEC	-	kWh				

\* For heat pumps, space heaters and heat pump combination heaters, the rated heat output Prated is equal to the design load for heating Pdesignh, and the rated heat output of a supplementary heater Psup is equal to the supplementary capacity for heating sup (Tj).

\*\* If Cdh is not determined by measurement then the default degradation coefficient is Cdh = 0.9.

Models:	Outdoor Unit:	Aerona <sup>3</sup> HPID13R32
	Indoor Unit:	None
Air-to-water heat pump		Yes
Brine-to-water heat pump		No
Low temperature heat pump		No
Equipped with a supplementary heater		No
Heat Pump Combination Heater		No
Parameters shall be declared for		Medium-temperature applications
Parameters shall be declared for		Average Climate Conditions

Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Rated Heat Output (*)	Prated	10.0	kW	Seasonal Space Heating Efficiency	$\eta_s$	148	%
<b>Declared capacity for heating for part load at Indoor Temperature 20°C and Outdoor Temperature Tj</b>				<b>Declared co-efficient of performance or primary energy ratio for part load at Indoor temperature 20°C and Outdoor Temperature Tj</b>			
Tj = -10°C	Pdh	10.0	kW	Tj = -10°C	COPd	2.05	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = -7°C	Pdh	9.70	kW	Tj = -7°C	COPd	2.16	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = +2°C	Pdh	6.10	kW	Tj = +2°C	COPd	3.92	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = +7°C	Pdh	4.10	kW	Tj = +7°C	COPd	5.83	
Degradation co-efficient (**)	Cdh	0.98	-				
Tj = +12°C	Pdh	4.10	kW	Tj = +12°C	COPd	8.62	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = bivalent temperature	Pdh	8.91	kW	Tj = bivalent temperature	COPd	2.12	
Tj = Operation Limit Temperature	Pdh	7.40	kW	Tj = Operation Limit Temperature	COPd	2.04	
Tj = -15°C (if TOL < -20°C)	Pdh	-	kW	Tj = -15°C (if TOL < -20°C)	COPd	-	
Bivalent Temperature	Tbiv	-8	°C	Operation Limit Temperature	TOL	-10	°C
				Heating water Operating Limit Temperature	WTOL	60	°C

Power consumption in modes other than active mode				Supplementary Heater			
Off Mode	P <sub>OFF</sub>	0.10	kW	Rate heat output	P <sub>sup</sub>		kW
Thermostat-off mode	P <sub>TO</sub>	0.04	kW				
Standby mode	P <sub>SB</sub>	0.10	kW	Type of energy input			
Crankcase heater mode	P <sub>CK</sub>	0.00	kW				

Other items							
Capacity Control	Variable			Rated airflow, outdoors	-	4464	m <sup>3</sup> /h
Sound Power Level (indoors/outdoors)	L <sub>WA</sub>	39/61	dBA				
Annual energy consumption	Q <sub>HE</sub>	5464	kWh				
<b>For heat pump combination heater</b>				Water heating energy efficiency	$\eta_{wh}$	113.4	%
Declared load profile	-	L	-	Reference Hot Water	$\Theta'_{WH}$	49.99	°C
Daily electricity consumption	Q <sub>elec</sub>	4.26	kW/h				
Annual electricity consumption	AEC	903.13	kW/h				

\* For heat pumps, space heaters and heat pump combination heaters, the rated heat output Prated is equal to the design load for heating Pdesignh, and the rated heat output of a supplementary heater Psup is equal to the supplementary capacity for heating sup (Tj).

\*\* If Cdh is not determined by measurement then the default degradation coefficient is Cdh = 0.9.

## 16.4 PRODUCT FICHE - HPID17R32

Product fiche concerning the Commission Delegated Regulations

(EU)No 811/2013 of 18 February 2013

(EU)No 813/2013 of 2 August 2013

Models:	Outdoor Unit:	Aerona <sup>3</sup> HPID17R32
	Indoor Unit:	None
Air-to-water heat pump		Yes
Brine-to-water heat pump		No
Low temperature heat pump		No
Equipped with a supplementary heater		No
Heat Pump Combination Heater		Yes
Parameters shall be declared for		Low-temperature applications
Parameters shall be declared for		Average Climate Conditions

Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Rated Heat Output (*)	Prated	12.8	kW	Seasonal Space Heating Efficiency	$\eta_s$	182	%
<b>Declared capacity for heating for part load at Indoor Temperature 20°C and Outdoor Temperature Tj</b>				<b>Declared co-efficient of performance or primary energy ratio for part load at Indoor temperature 20°C and Outdoor Temperature Tj</b>			
Tj = -7°C	Pdh	12.0	kW	Tj = -7°C	COPd	3.06	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = +2°C	Pdh	7.70	kW	Tj = +2°C	COPd	4.61	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = +7°C	Pdh	9.20	kW	Tj = +7°C	COPd	6.75	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = +12°C	Pdh	6.20	kW	Tj = +12°C	COPd	9.64	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = bivalent temperature	Pdh	12.5	kW	Tj = bivalent temperature	COPd	2.81	
Tj = Operation Limit Temperature	Pdh	11.8	kW	Tj = Operation Limit Temperature	COPd	3.12	
Tj = -15°C (if TOL < -20°C)	Pdh	-	kW	Tj = -15°C (if TOL < -20°C)	COPd	-	
Bivalent Temperature	Tbiv	-8	°C	Operation Limit Temperature	TOL	-10	°C
				Heating water Operating Limit Temperature	WTOL	60	°C

Power consumption in modes other than active mode				Supplementary Heater			
Off Mode	P <sub>OFF</sub>	0.10	kW	Rate heat output	P <sub>sup</sub>	0.00	kW
Thermostat-off mode	P <sub>TO</sub>	0.04	kW				
Standby mode	P <sub>SB</sub>	0.10	kW	Type of energy input			
Crankcase heater mode	P <sub>CK</sub>	0.00	kW				

Other items							
Capacity Control	Variable			Rated airflow, outdoors	-	4464	m <sup>3</sup> /h
Sound Power Level (indoors/outdoors)	L <sub>WA</sub>	41/61	dB(A)				
Annual energy consumption	Q <sub>HE</sub>	5730	kWh				
<b>For heat pump combination heater</b>				Water heating energy efficiency	$\eta_{wh}$		%
Declared load profile	-	-	-				
Daily electricity consumption	Q <sub>elec</sub>	-	kWh				
Annual electricity consumption	AEC	-	kWh				

\* For heat pumps, space heaters and heat pump combination heaters, the rated heat output Prated is equal to the design load for heating Pdesignh, and the rated heat output of a supplementary heater Psup is equal to the supplementary capacity for heating sup (Tj).

\*\* If Cdh is not determined by measurement then the default degradation coefficient is Cdh = 0.9.



Models:	Outdoor Unit:	Aerona <sup>3</sup> HPID17R32
	Indoor Unit:	None
Air-to-water heat pump		Yes
Brine-to-water heat pump		No
Low temperature heat pump		No
Equipped with a supplementary heater		No
Heat Pump Combination Heater		Yes
Parameters shall be declared for		Medium-temperature applications
Parameters shall be declared for		Average Climate Conditions

Item	Symbol	Value	Unit	Item	Symbol	Value	Unit
Rated Heat Output (*)	Prated	12.2	kW	Seasonal Space Heating Efficiency	$\eta_s$	142	%
<b>Declared capacity for heating for part load at Indoor Temperature 20°C and Outdoor Temperature Tj</b>				<b>Declared co-efficient of performance or primary energy ratio for part load at Indoor temperature 20°C and Outdoor Temperature Tj</b>			
Tj = -7°C	Pdh	12.8	kW	Tj = -7°C	COPd	2.34	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = +2°C	Pdh	7.40	kW	Tj = +2°C	COPd	3.61	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = +7°C	Pdh	9.10	kW	Tj = +7°C	COPd	5.21	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = +12°C	Pdh	6.11	kW	Tj = +12°C	COPd	8.12	
Degradation co-efficient (**)	Cdh	0.99	-				
Tj = bivalent temperature	Pdh	10.65	kW	Tj = bivalent temperature	COPd	2.21	
Tj = Operation Limit Temperature	Pdh	9.60	kW	Tj = Operation Limit Temperature	COPd	2.15	
Tj = -15°C (if TOL < -20°C)	Pdh	-	kW	Tj = -15°C (if TOL < -20°C)	COPd	-	
Bivalent Temperature	Tbiv	-9	°C	Operation Limit Temperature	TOL	-10	°C
				Heating water Operating Limit Temperature	WTOL	60	°C

Power consumption in modes other than active mode				Supplementary Heater			
Off Mode	P <sub>OFF</sub>	0.10	kW	Rate heat output	P <sub>sup</sub>	0.00	kW
Thermostat-off mode	P <sub>TO</sub>	0.04	kW				
Standby mode	P <sub>SB</sub>	0.10	kW	Type of energy input			
Crankcase heater mode	P <sub>CK</sub>	0.00	kW				

Other items							
Capacity Control	Variable			Rated airflow, outdoors	-	4464	m <sup>3</sup> /h
Sound Power Level (indoors/outdoors)	L <sub>WA</sub>	41/61	dB(A)				
Annual energy consumption	Q <sub>HE</sub>	6938	kWh				
<b>For heat pump combination heater</b>				Water heating energy efficiency	$\eta_{wh}$	99	%
Declared load profile	-	L	-	Reference Hot Water	$\Theta'_{WH}$	49.42	°C
Daily electricity consumption	Q <sub>elec</sub>	4.86	kWh				
Annual electricity consumption	AEC	1033.86	kWh				

\* For heat pumps, space heaters and heat pump combination heaters, the rated heat output Prated is equal to the design load for heating Pdesignh, and the rated heat output of a supplementary heater Psup is equal to the supplementary capacity for heating sup (Tj).

\*\* If Cdh is not determined by measurement then the default degradation coefficient is Cdh = 0.9.

# 17 Guarantee

You are now the proud owner of an Air Source Heat Pump from Grant Engineering (UK) Limited which has been designed to give years of reliable, trouble free, operation.

Grant Engineering (UK) Limited guarantees the manufacture of the heat pump including all electrical and mechanical components for a period of **twelve months from the date of installation<sup>4</sup>**, provided that the air source heat pump has been installed in full accordance with the installation and servicing instructions issued.

This will be extended to a total period of **two years** if the air source heat pump is registered with Grant Engineering (UK) Limited **within thirty days of installation<sup>4</sup>** and it is serviced at twelve monthly intervals<sup>3</sup>. See main Terms and Conditions below.

If the heat pump is installed as part of a VortexAir (hybrid) installation, the guarantee for the heat pump will start from its original date of installation and NOT from the date of installation of the oil boiler (if installed on different dates). If the installation date of the heat pump is more than three months from the date of installation of the oil boiler, the guarantee period will commence three months from the date of installation of the oil boiler.

## Registering the product with Grant Engineering (UK) Limited

Please register your air source heat pump with Grant Engineering UK Limited **within thirty days of installation**. To do so visit [www.grantuk.com](http://www.grantuk.com) and follow the links to the 'Homeowners Zone', where you can register your heat pump for a further **twelve months** guarantee (giving **two years** from the date of installation). This does not affect your statutory rights<sup>1</sup>.

## If a fault or defect occurs within the manufacturer's guarantee period

If your air source heat pump should fail within the guarantee period, you must contact Grant Engineering (UK) Limited, who will arrange for the repair under the terms of the guarantee, providing that the heat pump has been correctly installed, commissioned and serviced (if the appliance has been installed for more than twelve months) by a competent person and the fault is not due to tampering, system water contamination, misuse, trapped air or the failure of any external components not supplied by Grant Engineering (UK) Limited, e.g. pipework, etc.

**This two year guarantee only applies if the air source heat pump is registered with Grant Engineering (UK) Limited within thirty days of installation<sup>4</sup> and is serviced after twelve months<sup>3</sup>.**

## In the first instance

Contact your installer or commissioning engineer to ensure that the fault does not lie with the system components or any incorrect setting of the system controls that falls outside of the manufacturer's guarantee otherwise a service charge could result. Grant Engineering (UK) Limited will not be liable for any charges arising from this process.

## If a fault covered by the manufacturer's guarantee is found

Ask your installer to contact Grant Engineering (UK) Limited Service Department on +44 (0)1380 736920 who will arrange for a competent service engineer to attend to the fault.

## Remember - before you contact Grant Engineering (UK) Limited

- Ensure the air source heat pump has been installed, commissioned and serviced by a competent person in accordance with the installation and servicing instructions.
- Ensure the problem is not being caused by the heating system or its controls.

## Free of charge repairs

During the **two year** guarantee period no charge for parts or labour will be made, provided that the air source heat pump has been installed and commissioned correctly in accordance with the manufacturer's installation and servicing instructions, it was registered with Grant Engineering (UK) Limited within thirty days of installation<sup>4</sup> and, for air source heat pumps over twelve months old, details of annual service is available<sup>3</sup>.

The following documents must be made available to Grant Engineering (UK) Limited on request:

- Proof of purchase
- Commissioning Report Form
- Service documents
- System Design Criteria

## Chargeable repairs

A charge may be made (if necessary following testing of parts) if the cause of the breakdown is due to any fault(s) caused by the plumbing or heating system, e.g. contamination of parts due to system contamination, sludge, scale, debris or trapped air. See 'Extent of manufacturer's guarantee' below.

## Extent of manufacturer's guarantee:

The manufacturer's guarantee does NOT cover the following:

- If the air source heat pump has been installed for over two years.
- If the air source heat pump has not been installed, commissioned, or serviced by a competent person in accordance with the installation and servicing instructions.
- The serial number has been removed or made illegible.
- Fault(s) due to accidental damage, tampering, unauthorised adjustment, neglect, misuse or operating the air source heat pump contrary to the manufacturer's installation and servicing instructions.
- Damage due to external causes such as bad weather conditions (flood, storms, lightning), fire, explosion, accident or theft.
- Fault(s) due to incorrectly sized expansion vessel(s), incorrect vessel charge pressure or inadequate expansion on the system.
- Fault(s) caused by external electrics and external components not supplied by Grant Engineering (UK) Limited.
- Air source heat pump servicing, de-scaling or flushing.
- Checking and replenishing system pressure.
- Electrical cables and plugs, external controls not supplied by Grant Engineering (UK) Limited.
- Heating system components, such as radiators, pipes, fittings, pumps and valves not supplied by Grant Engineering (UK) Limited.

- Instances where the heat pump has been un-installed and re-installed in another location.
- Use of spare parts not authorised by Grant Engineering (UK) Limited.
- Consumable items including, but not limited to, antifreeze and biocide inhibitor.
- The cost and provision of any specialist access equipment, or any associated costs, required to inspect, repair, service or replace any units not installed in accordance with these installation instructions, irrespective of whether the heat pump is deemed to be at fault or not.
- If a replacement heat pump is supplied under the guarantee (due to a manufacturing fault) the product guarantee continues from the installation date of the original heat pump, and not from the installation date of the replacement<sup>4</sup>.
- The replacement of a heat pump under this guarantee does not include any consequential costs.

#### Foot notes

1. Your statutory rights entitle you to a one year guarantee period only.
2. The UK mainland consists of England, Scotland and Wales only. Please note that for the purposes of this definition, Northern Ireland, Isle of Man and Scilly Isles are not considered part of the UK mainland.
3. We recommend that your air source heat pump is serviced every twelve months (even when the guarantee has expired) to prolong the lifespan and ensure it is operating safely and efficiently.
4. The guarantee period will commence from the date of installation, unless the installation date is more than six months from the date of purchase, in which case the guarantee period will commence six months from the date of purchase.
5. As measured by gauss. The Mag-One magnetic filter has a Gauss measurement of 12000.

Version 1.2 - May 2021

#### Terms of manufacturer's guarantee

- The Company shall mean Grant Engineering (UK) Limited.
- The heat pump must be installed by a competent installer and in full accordance with the relevant Codes of Practice, Regulations and Legislation in force at the time of installation.
- The heat pump is guaranteed for two years from the date of installation<sup>4</sup>, providing that after twelve months the annual service has been completed<sup>3</sup> and the heat pump registered with the Company within thirty days of the installation date<sup>4</sup>. Any work undertaken must be authorised by the Company and carried out by a competent service engineer.
- The internal heat exchanger of the heat pump is also covered by a **two year parts and labour** guarantee from the date of installation<sup>4</sup>. This is subject to the following:
  - o The heat pump is operated correctly, in accordance with the installation and servicing instructions.
  - o Proof is provided that the system has been flushed or chemically cleaned where appropriate (refer to BS 7593) and that the required quantity of a suitable corrosion inhibitor added.
  - o Proof of annual servicing (including the checking of any expansion vessels and pressure relief valves) must be provided if and when requested by the Company.

**IMPORTANT** Grant Engineering (UK) Limited **strongly recommends** that a Grant Mag-One in-line magnetic filter/s (or equivalent<sup>5</sup>) is fitted in the heating system pipework. This should be installed and regularly serviced in accordance with the filter manufacturer's instructions.
- This guarantee does not cover breakdowns caused by incorrect installation, neglect, misuse, accident or failure to operate the heat pump in accordance with the manufacturer's installation and servicing instructions.
- The heat pump is registered with the Company within thirty days of installation. Failure to do so does not affect your statutory rights<sup>1</sup>.
- The balance of the guarantee is transferable providing the installation is serviced prior to the dwelling's new owners taking up residence. Grant Engineering (UK) Limited must be informed of the new owner's details.
- The Company will endeavour to provide prompt service in the unlikely event of a problem occurring, but cannot be held responsible for any consequences of delay however caused.
- This guarantee applies to Grant Engineering (UK) Limited air source heat pumps purchased and installed on the UK mainland, Isle of Wight, Channel Islands and Scottish Isles only<sup>2</sup>. Provision of in-guarantee cover elsewhere in the UK is subject to agreement with the Company.
- All claims under this guarantee must be made to the Company prior to any work being undertaken. Invoices for call out/repair work by any third party will not be accepted unless previously authorised by the Company.
- Proof of purchase and date of installation, commissioning and service documents must be provided on request.

# Appendix A

# Installation Pack A Control System Schematics

## A.1 SYSTEM SCHEMATIC

Item	Description
1	Aerona® ASHP
2	Flexible hose
3	Isolation valve
4	Flow setter (supplied with Aerona® ASHP) refer to Aerona® heat pump installation instructions to calculate required flow rate
5	Grant Mag One magnetic filter*
6	Automatic system bypass
7	Motorized 2-Port valve (master)
8	Grant combined volumiser / low loss header**
9	Auxiliary backup heater (3kW immersion)**
10	Manual air vent*
11	Drain point*
12	Removable filling loop*
13	Double check valve*
14	Pressure gauge*
15	Expansion vessel**
16	Pressure relief valve*
17	Tundish*
18	Additional circulating pump
19	Motorized 2-Port valve (UHF circuit)
20	Thermostatic mixing valve
21	UHF pump
22	UHF manifold
23	Grant UH8 wiring centre
24	Room thermostat (Grant NeoStat or Edge)
25	Thermostatic radiator valve
26	Motorized 2-Port valve (radiator circuit)
27	Automatic air vent
28	Immersion heater programmer*
29	Cylinder immersion heater
30	Cylinder dual thermostat
31	DHW cylinder
32	Grant DHW timer (HPIDTM4)*
33	Grant EP001/EP001X wiring centre* (supplied with Aerona® ASHP)
34	ASHP remote controller (supplied with HPIDR32PAC6A)
35	* Supplied with HPIDR32PAC6A

The size of room thermostats is critical to ensure satisfactory performance of the heating system. Refer to the Aerona® heat pump installation instructions for more information.

The length and number of DHW 'on' periods are critical to ensure satisfactory performance of the heating system. Refer to the Aerona® heat pump installation instructions for more information.

Close couple tees to be situated as close as possible to the radiators and no more than 4 pipe diameters.


For more information on the Grant Combined Header, please refer to the Aerona® heat pump installation instructions.

**! NOTE !**

Please refer to Section 7 of these installation instructions for details of the flow and return connections at the heat pump.


**! NOTE !**  
This system schematic should be read in conjunction with the contents of these installation instructions and the adjacent wiring diagram.

Grant Sealed System Kit

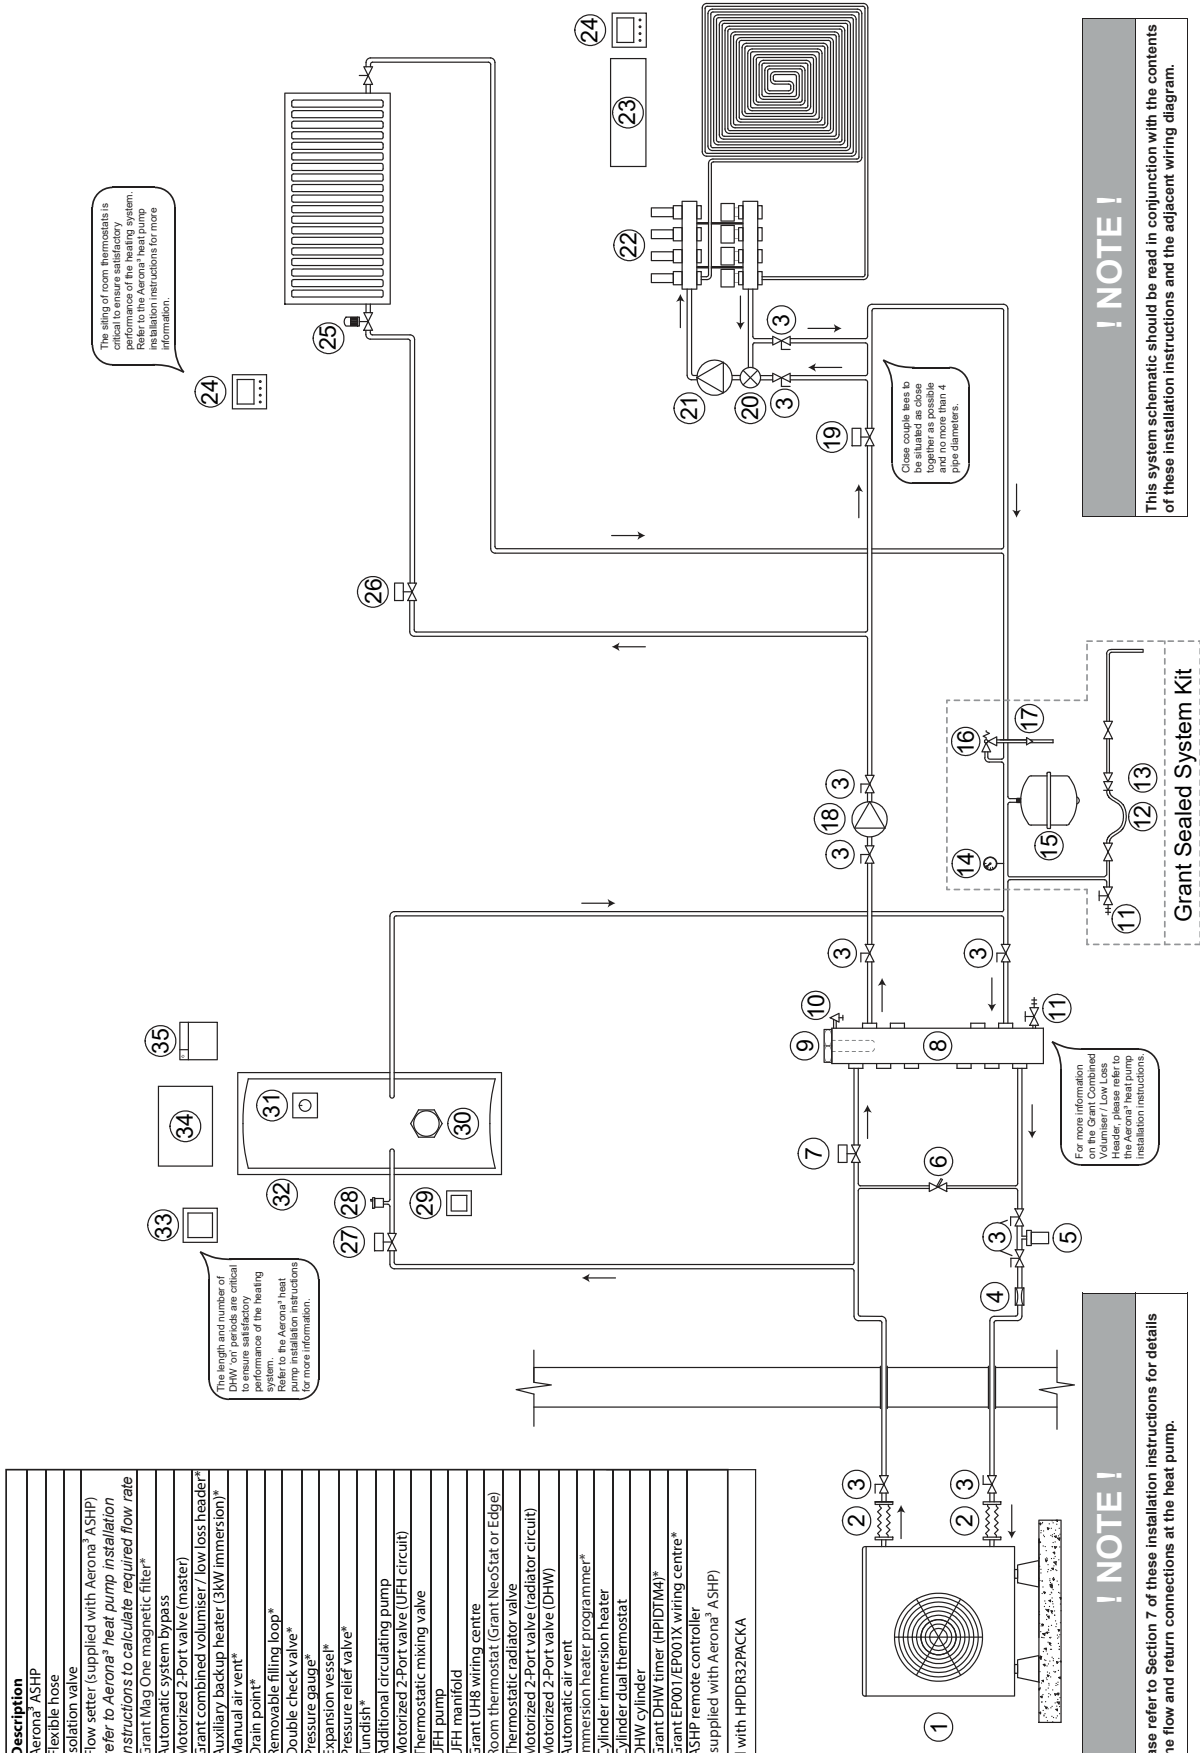

## A.2 WIRING DIAGRAM

Notes: Some Neutral and Earth connections have been excluded for clarity. For Immersion heater programmer connection details, refer to the instructions supplied with the programmer OR the instructions supplied with the Aerona<sup>3</sup> heat pump.

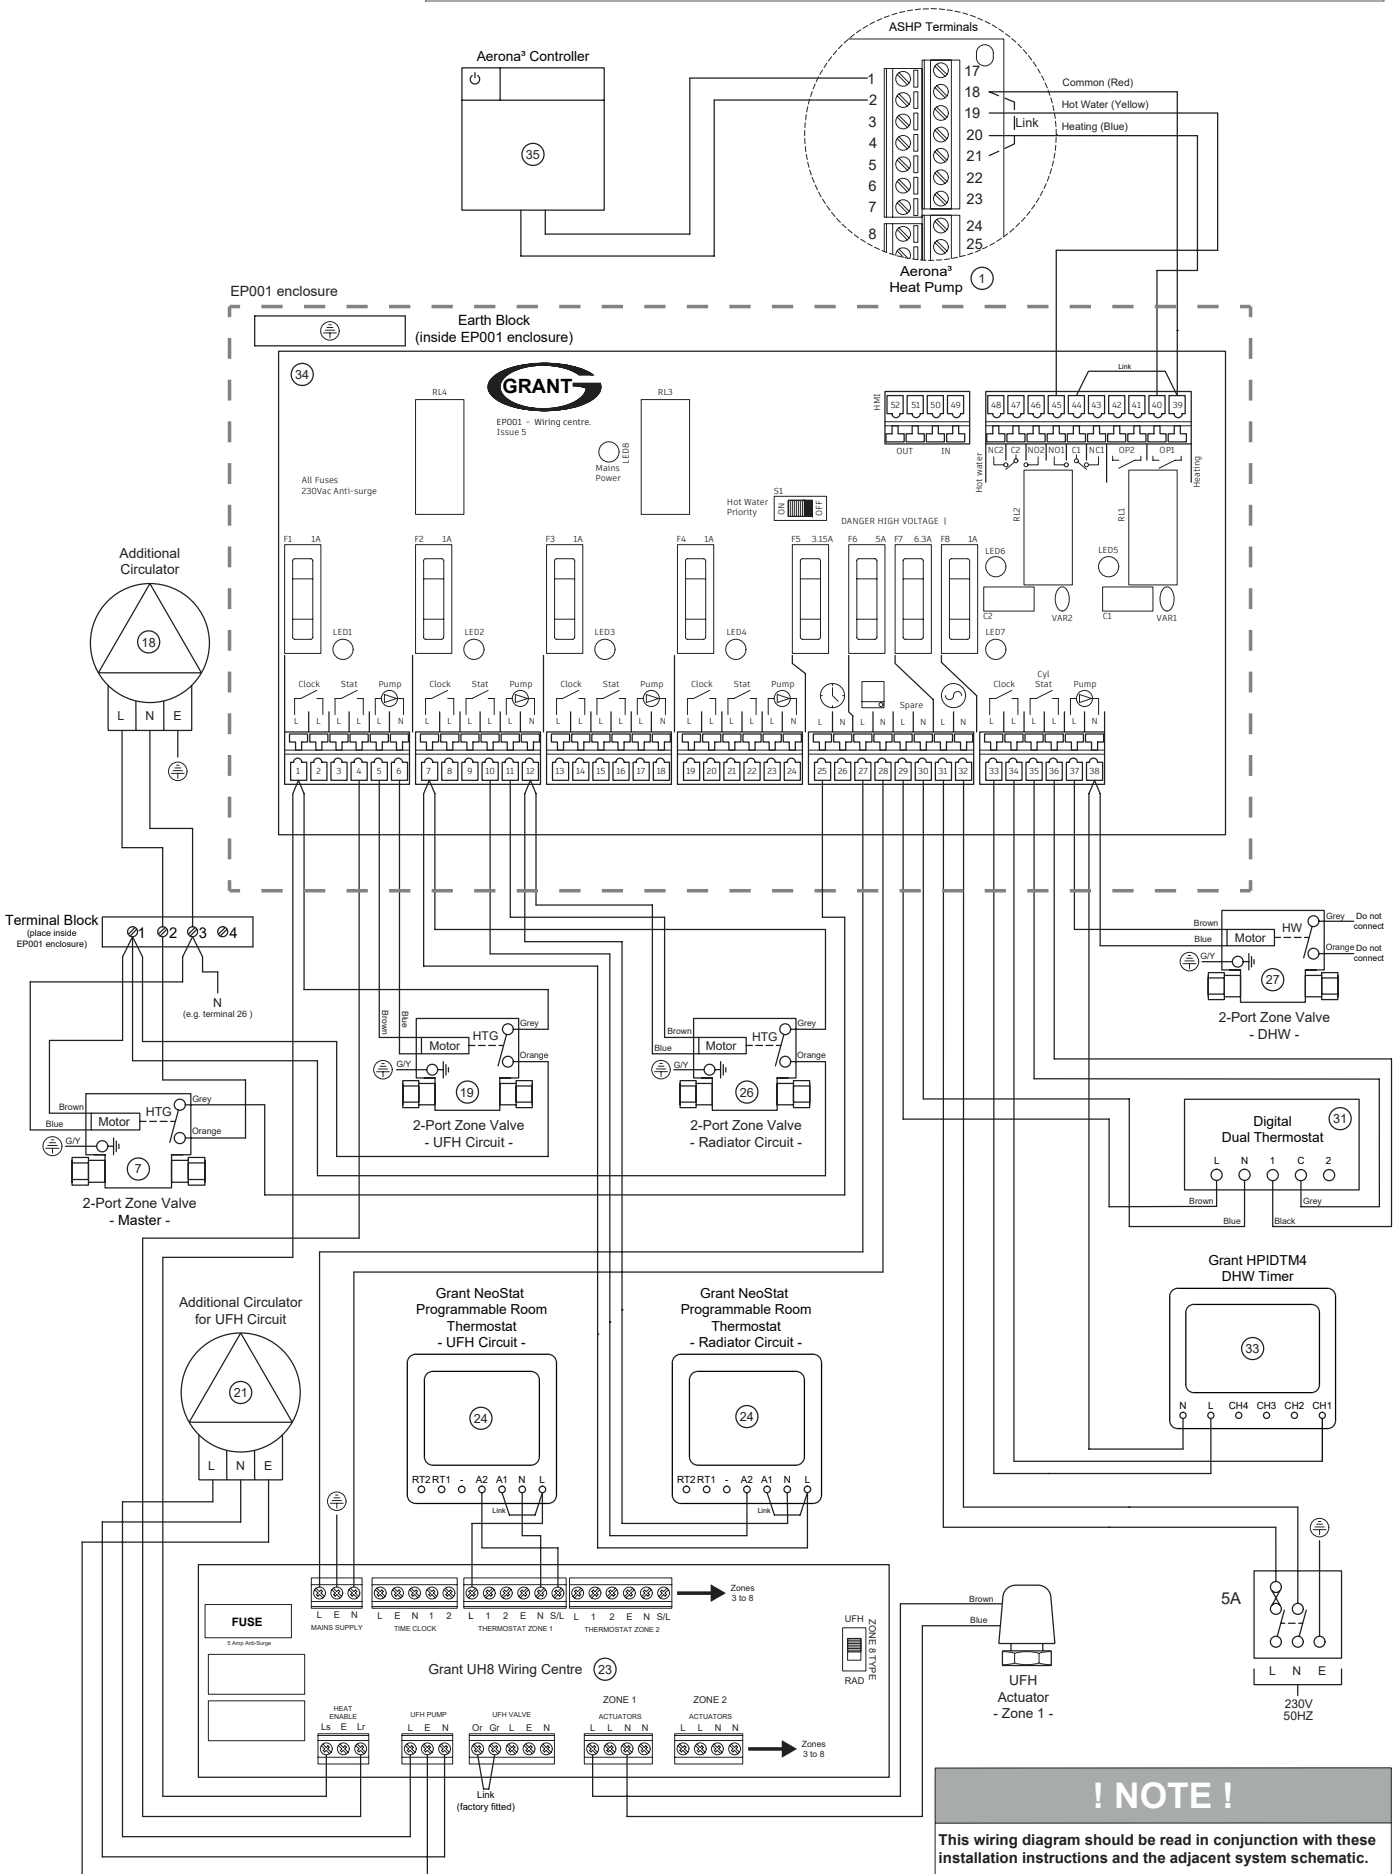


# Appendix B

# Installation Pack B Control System Schematics

## B.1 SYSTEM SCHEMATIC

Item	Description
1	Aerona <sup>3</sup> ASHP
2	Flexible hose
3	Isolation valve
4	Flow setter (supplied with Aerona <sup>3</sup> ASHP) refer to Aerona <sup>3</sup> heat pump installation instructions to calculate required flow rate
5	Grant Mag One magnetic filter*
6	Expansion vessel
7	Pressure relief valve**
8	Tundish*
9	Grant combined volumiser / low loss header**
10	Auxiliary backup heater (3kW immersion)*
11	Manual air vent* & **
12	Drain point*
13	Additional circulating pump
14	Motorized 2-Port valve (UHF circuit)**
15	Thermostatic mixing valve
16	UFH pump
17	UFH manifold
18	Grant UHF wiring centre
19	Room thermostat (Grant NeoStat or Edge)
20	Motorized 2-Port valve (radiator circuit)**
21	Thermostatic radiator valve
22	Automatic system bypass**
23	Pressure gauge**
24	Removable filling loop**
25	Double check valve**
26	Motorized 2-Port valve (DHW)**
27	Cylinder immersion heater**
28	Immersion heater programmer**
29	Cylinder dual thermostat**
30	Grant EP001/EP001X wiring centre**
31	Pre-Plumbed DHW cylinder
32	Grant DHW timer (HPIDTM4)*
33	ASHP remote controller (supplied with Aerona <sup>3</sup> ASHP)

\* Supplied with HPIDR32PAC1B  
 \*\* Supplied factory fitted to Pre-Plumbed cylinder

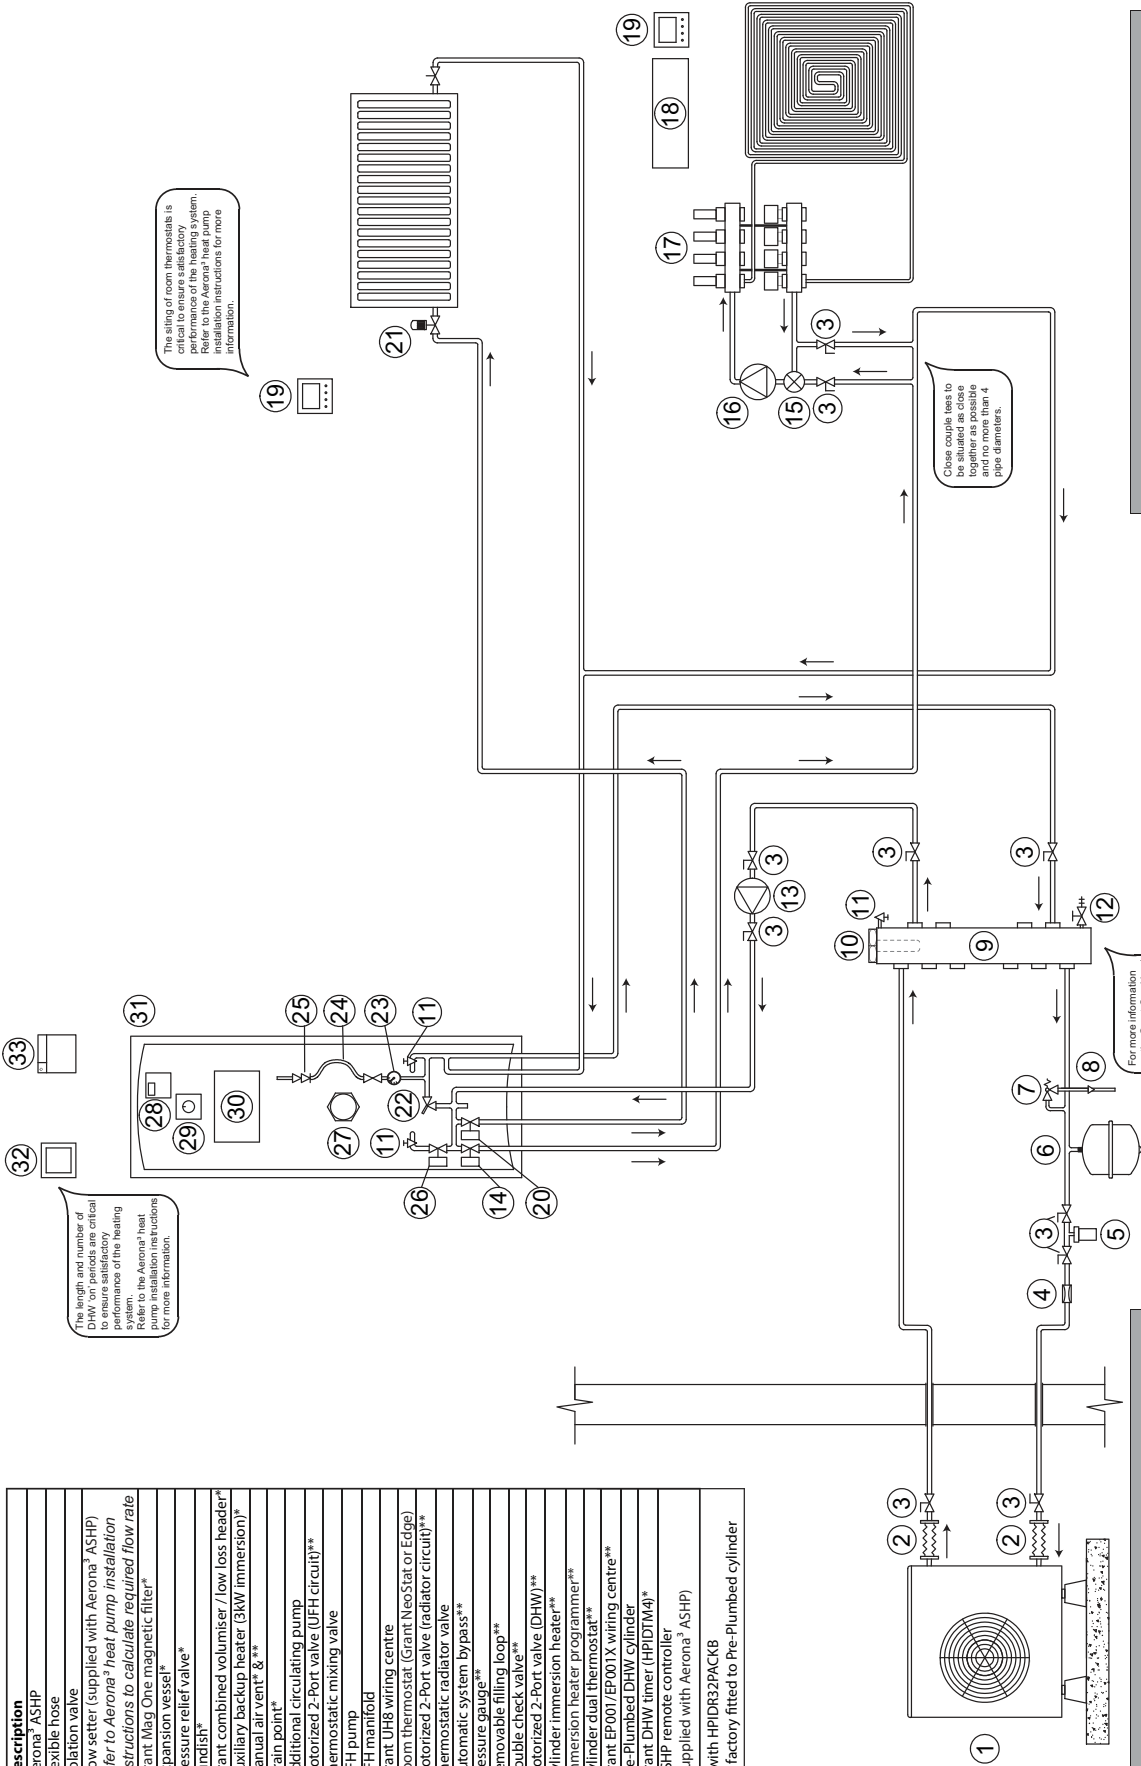

The length and number of DHW on periods are critical to ensure satisfactory performance of the heating system. Refer to the Aerona<sup>3</sup> heat pump installation instructions for more information.

The siting of room thermostats is critical to the performance of the heating system. Refer to the Aerona<sup>3</sup> heat pump installation instructions for more information.

Close couple tees to be installed as close as possible to the pump and no more than 4 pipe diameters.


For more information on the Grant Combined Volumiser / Low Loss Header, please refer to the manufacturer's installation instructions.

**! NOTE !**  
 This system schematic should be read in conjunction with the contents of these installation instructions and the adjacent wiring diagram.

**! NOTE !**  
 Please refer to Section 7 of these installation instructions for details of the flow and return connections at the heat pump.

## B.2 WIRING DIAGRAM

Notes: Some Neutral and Earth connections have been excluded for clarity. For Immersion heater programmer connection details, refer to the instructions supplied with the programmer OR the instructions supplied with the cylinder.

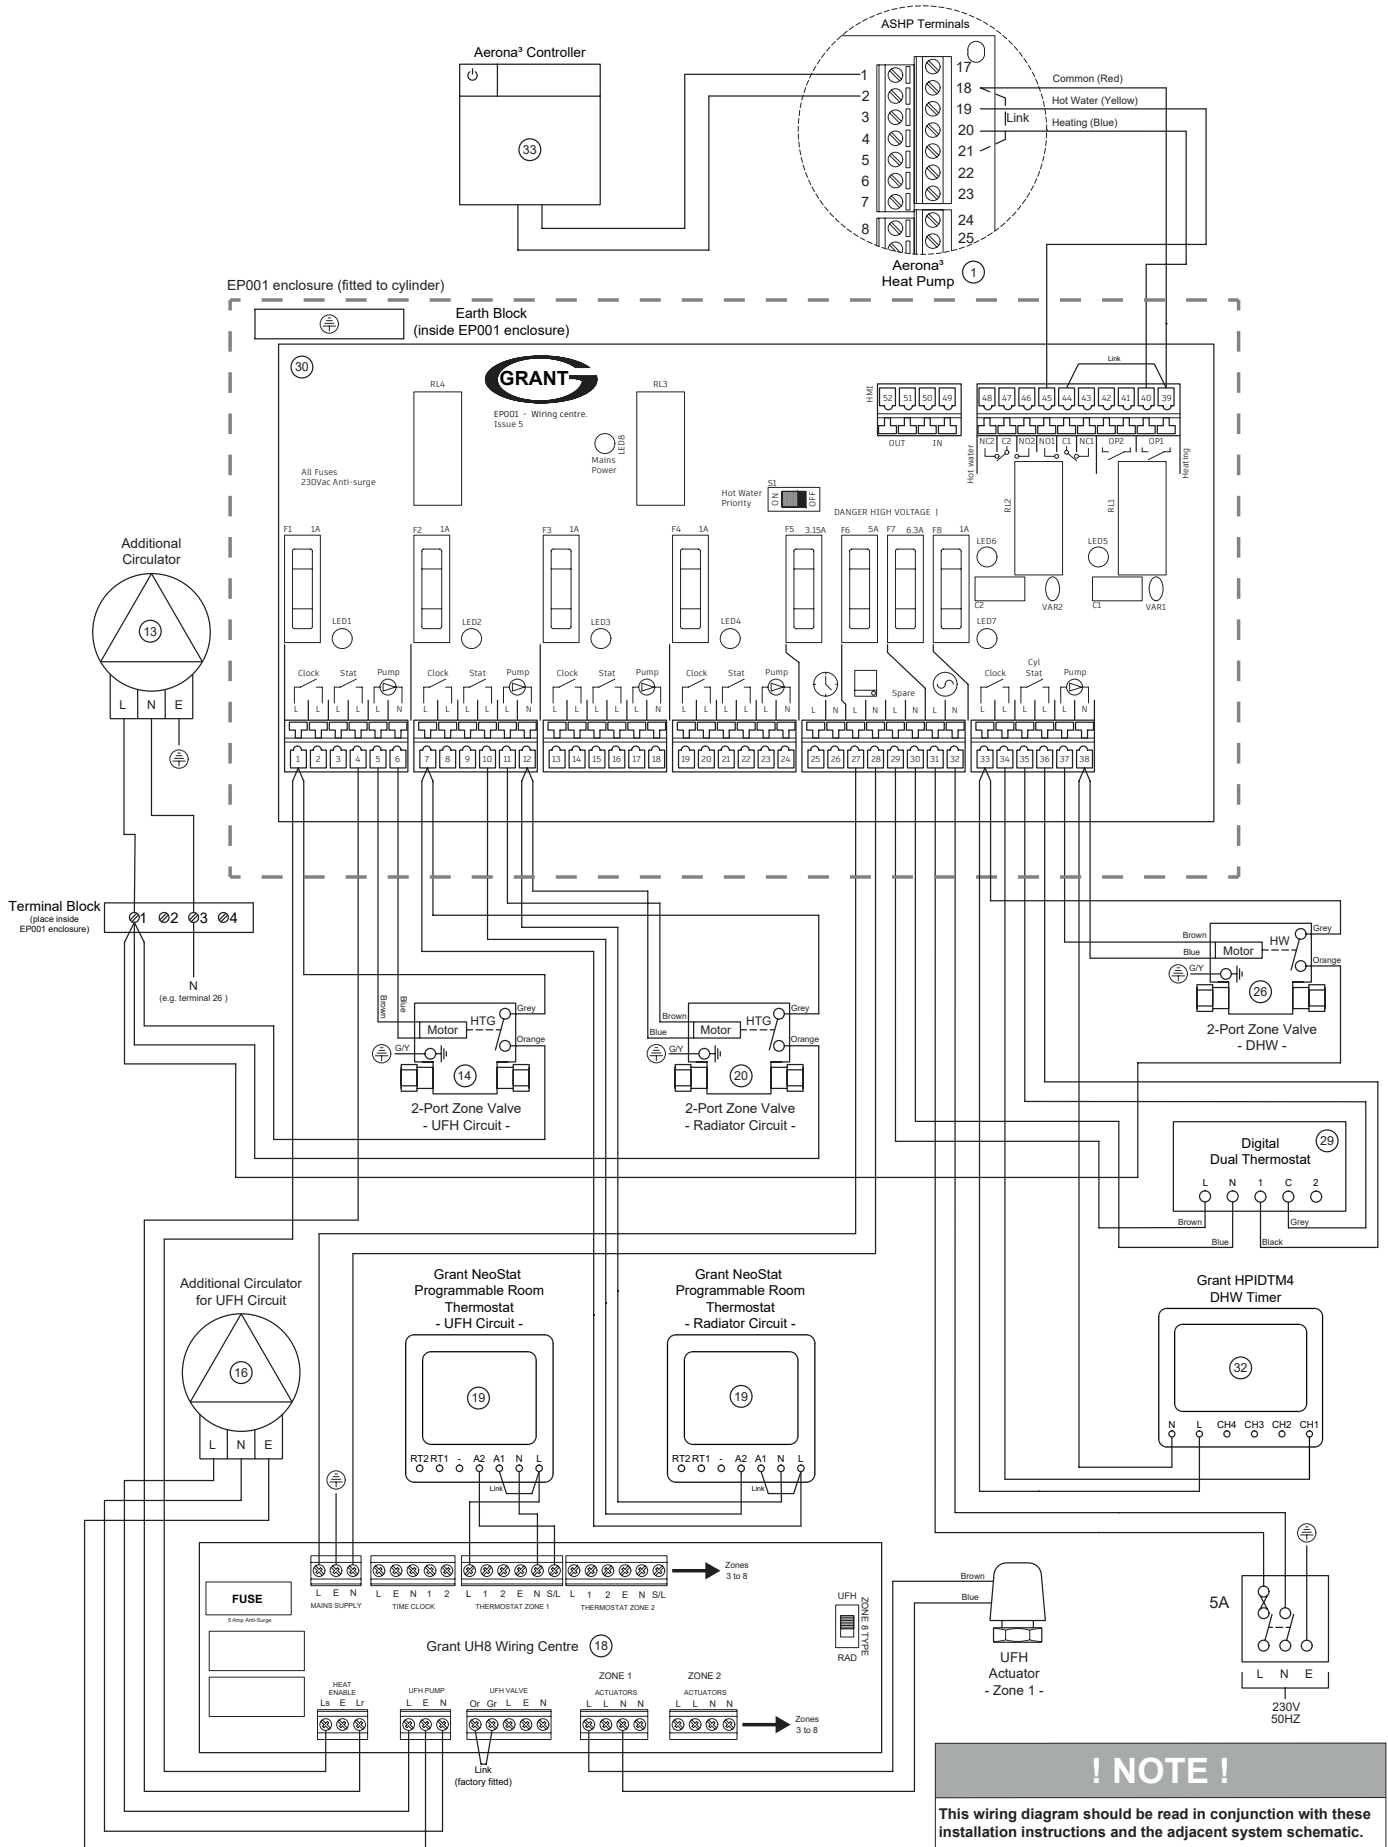


# Appendix C

# Installation Pack C Control System Schematics

## C.1 SYSTEM SCHEMATIC

Item	Description
1	Aerona <sup>3</sup> ASHP
2	Flexible hose
3	Isolation valve
4	Flow setter (supplied with Aerona <sup>3</sup> ASHP) refer to Aerona <sup>3</sup> heat pump installation instructions to calculate required flow rate
5	Grant Mag One magnetic filter*
6	3-Port diverter valve*
7	Grant combined volumiser / low loss header*
8	Auxiliary backup heater (3KW immersion)*
9	Manual air vent*
10	Removable filling loop*
11	Pressure gauge*
12	Double check valve*
13	Pressure gauge*
14	Expansion vessel*
15	Pressure relief valve*
16	Tundish*
17	Additional circulating pump
18	Automatic system bypass
19	Motorized 2-Port valve (UFH circuit)
20	Thermostatic mixing valve
21	UFH pump
22	UFH manifold
23	Grant UHB wiring centre
24	Room thermostat (Grant NeoStat or Edge)
25	Thermostatic radiator valve
26	Motorized 2-Port valve (radiator circuit)
27	Automatic air vent
28	Immersion heater programmer*
29	Cylinder immersion heater
30	DHW sensor*
31	DHW cylinder
32	Grant DHW timer (HPIDTM4)*
33	Wiring centre
34	Grant Hot Water Priority Relay*
35	Grant EP002 ASHP interface
36	ASHP remote controller (supplied with Aerona <sup>3</sup> ASHP)

\* Supplied with HPIDR32PACK

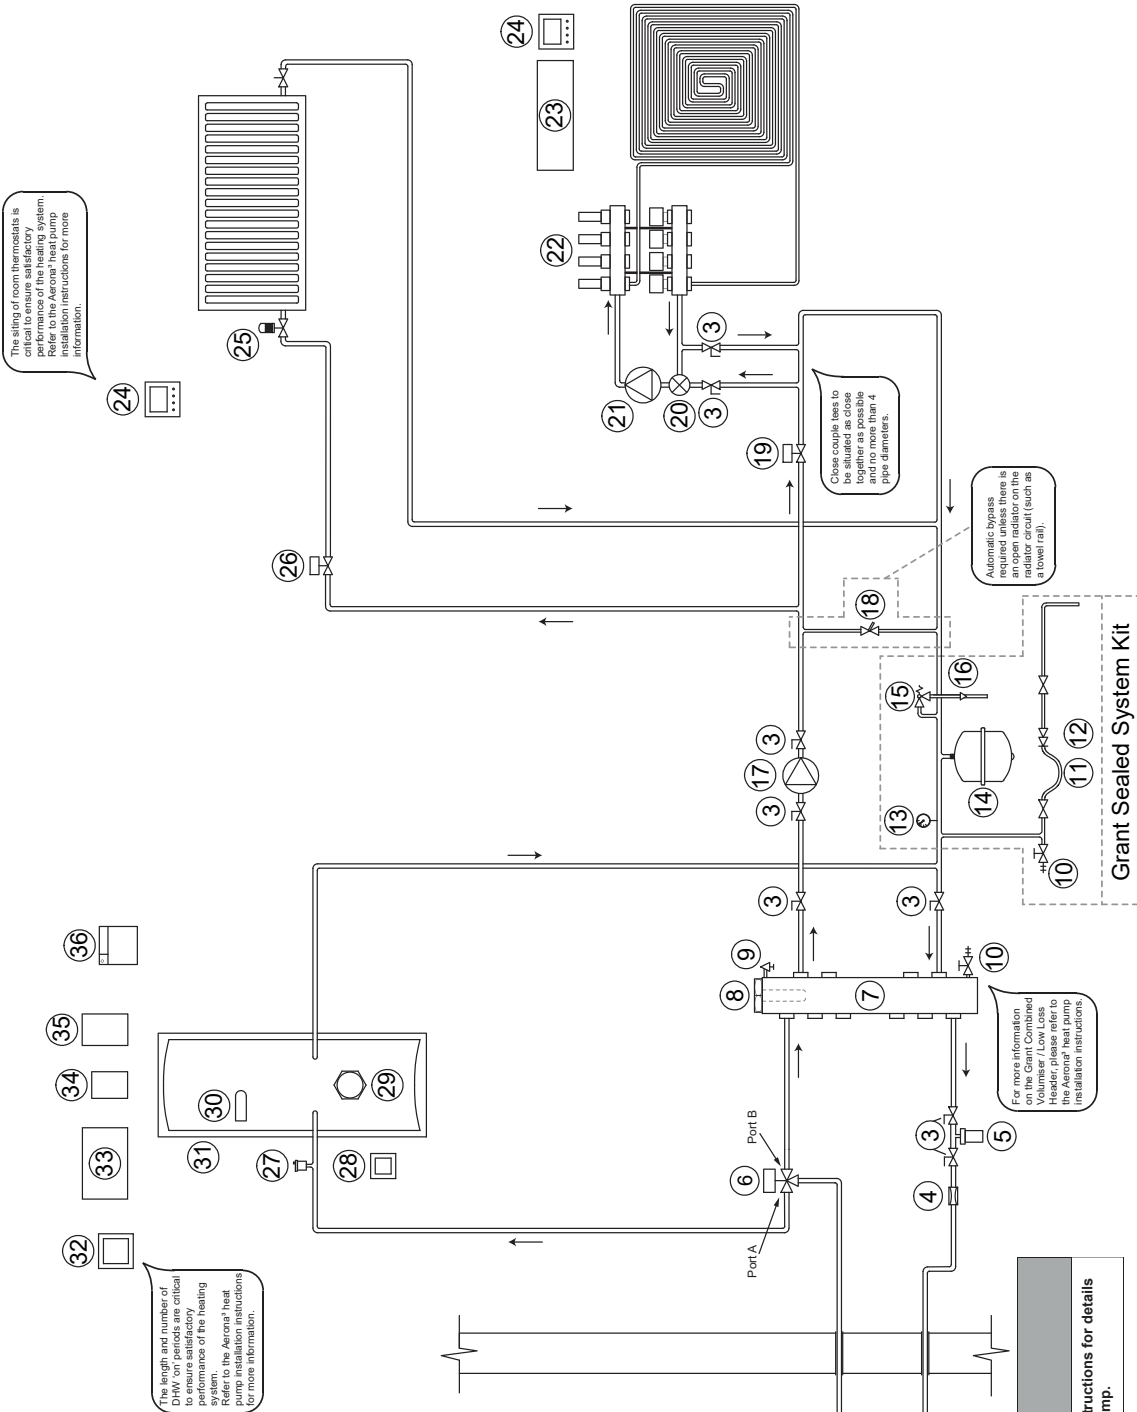

**! NOTE !**  
Please refer to Section 7 of these installation instructions for details of the flow and return connections at the heat pump.

**! NOTE !**  
This system schematic should be read in conjunction with the contents of these installation instructions and the adjacent wiring diagram.





### C.3 INSTALLATION PACK C PARAMETER SETTINGS

The following Grant Aerona<sup>3</sup> ASHP installer parameters need to be changed to enable the unit to operate with a 3-Port diverter valve (Grant UK Product Code: HPID120) and DHW temperature sensor (Grant UK Product Code: HPID121). Both are included as part of Grant Aerona<sup>3</sup> ASHP Installation Pack C.

Level	Parameter		Function description	Display and input value				Remarks
	Group	Code		Default	Min.	Max.	Unit	
I	31	01	DHW production priority setting 0=DHW is unavailable 1=DHW is available, and priority DHW over Space Heating 2=DHW is available, and priority Space Heating over DHW	0	0	2	-	Set this parameter to 1.
I	31	11	DHW Comfort set temperature	50.0	40.0	60.0	0.5°C	Depends on end user's requirements
I	31	12	DHW Economy set temperature	40.0	30.0	50.0	0.5°C	This is the minimum temperature that the ASHP will allow the contents of the DHW cylinder to reach before bringing the unit on to maintain the temperature set by installer parameter 3111 (see above).
I	31	21	Max. time for DHW request	60	0	900	1min	Ensure this parameter is set to 60.
I	31	22	Min. time for Space Heating/Cooling	15	0	900	1min	Set this parameter to 0.
I	51	07	Terminal 7-8 : DHW tank temperature probe 0=disable 1=enable	0	0	1	-	Set this parameter to 1.
I	51	19	Terminal 19-18 : DHW remote contact 0=disable (Remote controller only) 1=enable	1	0	1	-	Set this parameter to 1.
	51	20	Terminal 20-21 : ON/OFF remote contact (CH) Alarm input 0=disable 1=ON/OFF remote contact	1	0	1	-	Set this parameter to 1.
I	51	50	Terminal 50-52 : DHW 3way valve 0=disable 1=enable	1	0	1	-	Terminal 52: Live Terminal 50: Neutral Earth to be connected to chassis ground (refer to Section C.2)

# Appendix D Parameters List

## Backlight display paramters

Level	Parameter		Function description	Display and input value				Remarks
	Group	Code		Default	Min.	Max.	Unit	
U	02	03	Back light display at door open 0=OFF 1=ON	1	0	1	-	
U	02	04	Time to turn off the back light display	60	10	300	10 sec	
U	02	05	Time to back to normal display screen	120	10	300	10 sec	

## Water temperature set points

Level	Parameter		Function description	Display and input value				Remarks
	Group	Code		Default	Min.	Max.	Unit	
I	21	00	Enable outgoing water set point 0=fixed set point 1=climatic curve	1	0	1	-	
I	21	01	Fixed outgoing water set point	45.0	23.0	60.0	0.5°C	
I	21	02	Maximum outgoing water temperature in Heating mode (Tm1)	45.0	23.0	60.0	0.5°C	
I	21	03	Minimum outgoing water temperature in Heating mode (Tm2)	30.0	23.0	60.0	0.5°C	
I	21	04	Minimum outdoor air temperature corresponding to maximum outgoing water temperature (Te1)	-4	-20.0	50.0	0.5°C	
I	21	05	Maximum outdoor air temperature corresponding to maximum outgoing water temperature (Te2)	20.0	0.0	40.0	0.5°C	
I	21	41	Hysteresis of water set point in heating	8.0	0.5	10.0	0.5°C	
I	21	51	Low tariff deferential water set point for Heating	5.0	0.0	60.0	0.5°C	

## DHW (Domestic Hot Water)

Level	Parameter		Function description	Display and input value				Remarks
	Group	Code		Default	Min.	Max.	Unit	
I	31	01	DHW production priority setting 0=DHW is unavailable 1= DHW is available, and priority DHW over space heating 2= DHW is available, and priority space Heating over DHW	1	0	2	-	
I	31	11	DHW Comfort set temperature	50.0	40.0	60.0	0.5°C	
I	31	12	DHW Economy set temperature	40.0	30.0	50.0	0.5°C	
I	31	21	Maximum time for DHW request	60	0	900	1 min	
I	31	22	Minimum time for space heating	15	0	900	1 min	

## Heat pump unit

Level	Parameter		Function description	Display and input value				Remarks
	Group	Code		Default	Min.	Max.	Unit	
I	41	00	The heat pump turns ON/OFF based on 1=water set point	1	0	1	-	
I	41	11	Maximum frequency of Night mode	80	50	100	5%	
S	41	30	Maximum outgoing water set point in CH and DHW	55.0	23.0	60.0	0.5°C	

## Water pump

Level	Parameter		Function description	Display and input value				Remarks
	Group	Code		Default	Min.	Max.	Unit	
I	42	00	Type of configuration of main water pump <u>0=always ON</u> 1=ON/OFF based on buffer tank temperature 2=ON/OFF based on detect cycles	0	0	2	-	To be set to the following combinations parameter 5111=0 →Parameter 4200=0 or 2 parameter 5111=1 →Parameter 4200=0 or 1 or 2
I	42	01	Time ON main water pump for detect cycle	3	1	15	1min	
I	42	02	Time OFF main water pump	5	5	30	1min	
I	42	03	Delay time OFF main water pump from OFF compressor	3	1	15	1min	
I	42	11	OFF time for unblock pump function start	48	0	240	1hr	
I	42	12	Time ON main water pump for unblock pump function	5	0	10	1sec	
I	42	20	Type of operation of additional water pump <u>0=disable</u> 1=depending on main water pump setting 2=depending on main water pump setting but always OFF when the DHW mode is activated 3=always ON, apart from if any alarms are activated or if the heat pump is in OFF mode	0	0	3	-	

## Frost protection


Level	Parameter		Function description	Display and input value				Remarks
	Group	Code		Default	Min.	Max.	Unit	
S	43	00	Frost protection on room temperature <u>0=disable</u> <u>1=enable</u>	1	0	1	-	
I	43	01	Start temperature of frost protection on room air temperature	14.0	0.0	5.0	0.5°C	
I	43	02	Hysteresis of room air temperature of frost protection	1.0	0.5	5.0	0.5°C	
S	43	10	Frost protection by outside temperature <u>0=disable</u> <u>1=enable</u>	1	0	1	-	
I	43	11	Start temperature of frost protection on outdoor air temperature	4.0	0.0	10.0	0.5°C	
I	43	12	Hysteresis of outdoor air temperature	3.0	0.5	5.0	0.5°C	
I	43	14	Hysteresis of flow water temperature	3.0	0.5	5.0	0.5°C	
S	43	20	Frost protection based on outgoing water temperature <u>0=disable</u> <u>1=enable</u>	1	0	1	-	
I	43	21	Start temperature of frost protection on flow water temperature	4.0	0.0	10.0	0.5°C	
I	43	22	Hysteresis of flow water temperature	3.0	0.5	5.0	0.5°C	
S	43	30	DHW storage frost protection <u>0=disable</u> <u>1=enable</u>	1	0	1	-	

## Input/output


Level	Parameter		Function description	Display and input value				Remarks
	Group	Code		Default	Min.	Max.	Unit	
I	51	07	Terminal 7-8 : DHW tank temperature probe 0=disable 1=enable	0	0	1	-	
I	51	11	Terminal 11-12: thermal store temperature probe 0=disable 1=enable	0	0	1	-	To be set to the following combinations parameter 5111=0 →Parameter 4200=0 or 2 parameter 5111=1 →Parameter 4200=0 or 1 or 2
I	51	19	Terminal 19-18 : DHW remote contact 0=disable (Remote controller only) 1=enable	1	0	1	-	
I	51	20	Terminal 20-21 : ON/OFF remote contact (CH) Alarm input 0=disable 1=ON/OFF remote contact	1	0	1	-	ON/OFF by Remote controller 0=enable 1=ON/disable OFF/enable 2=enable
I	51	28	Terminal 28-29 : Night mode* 0=disable 1=enable Refer to Section 8.6.	0	0	1	-	Parameter 5128 and Parameter 5130 are synchronised in same value
I	51	30	Terminal 30-31 : Low tariff* 0=disable 1=enable Refer to Section 8.7.	0	0	1	-	
I	51	46	Terminal 46 : DHW Electric heater or Backup heater 0=DHW Electric heater 1=Backup heater	0	0	1	-	
I	51	48	Terminal 48 0=disable 1=additional water pump	0	0	1	-	
I	51	50	Terminal 50-52 : DHW 3way valve 0=disable 1=enable	1	0	1	-	Terminal 52: Live Terminal 50: Neutral Earth to be connected to chassis ground (refer to Section C.2)

\* External timer required


# Appendix E Wiring Diagrams

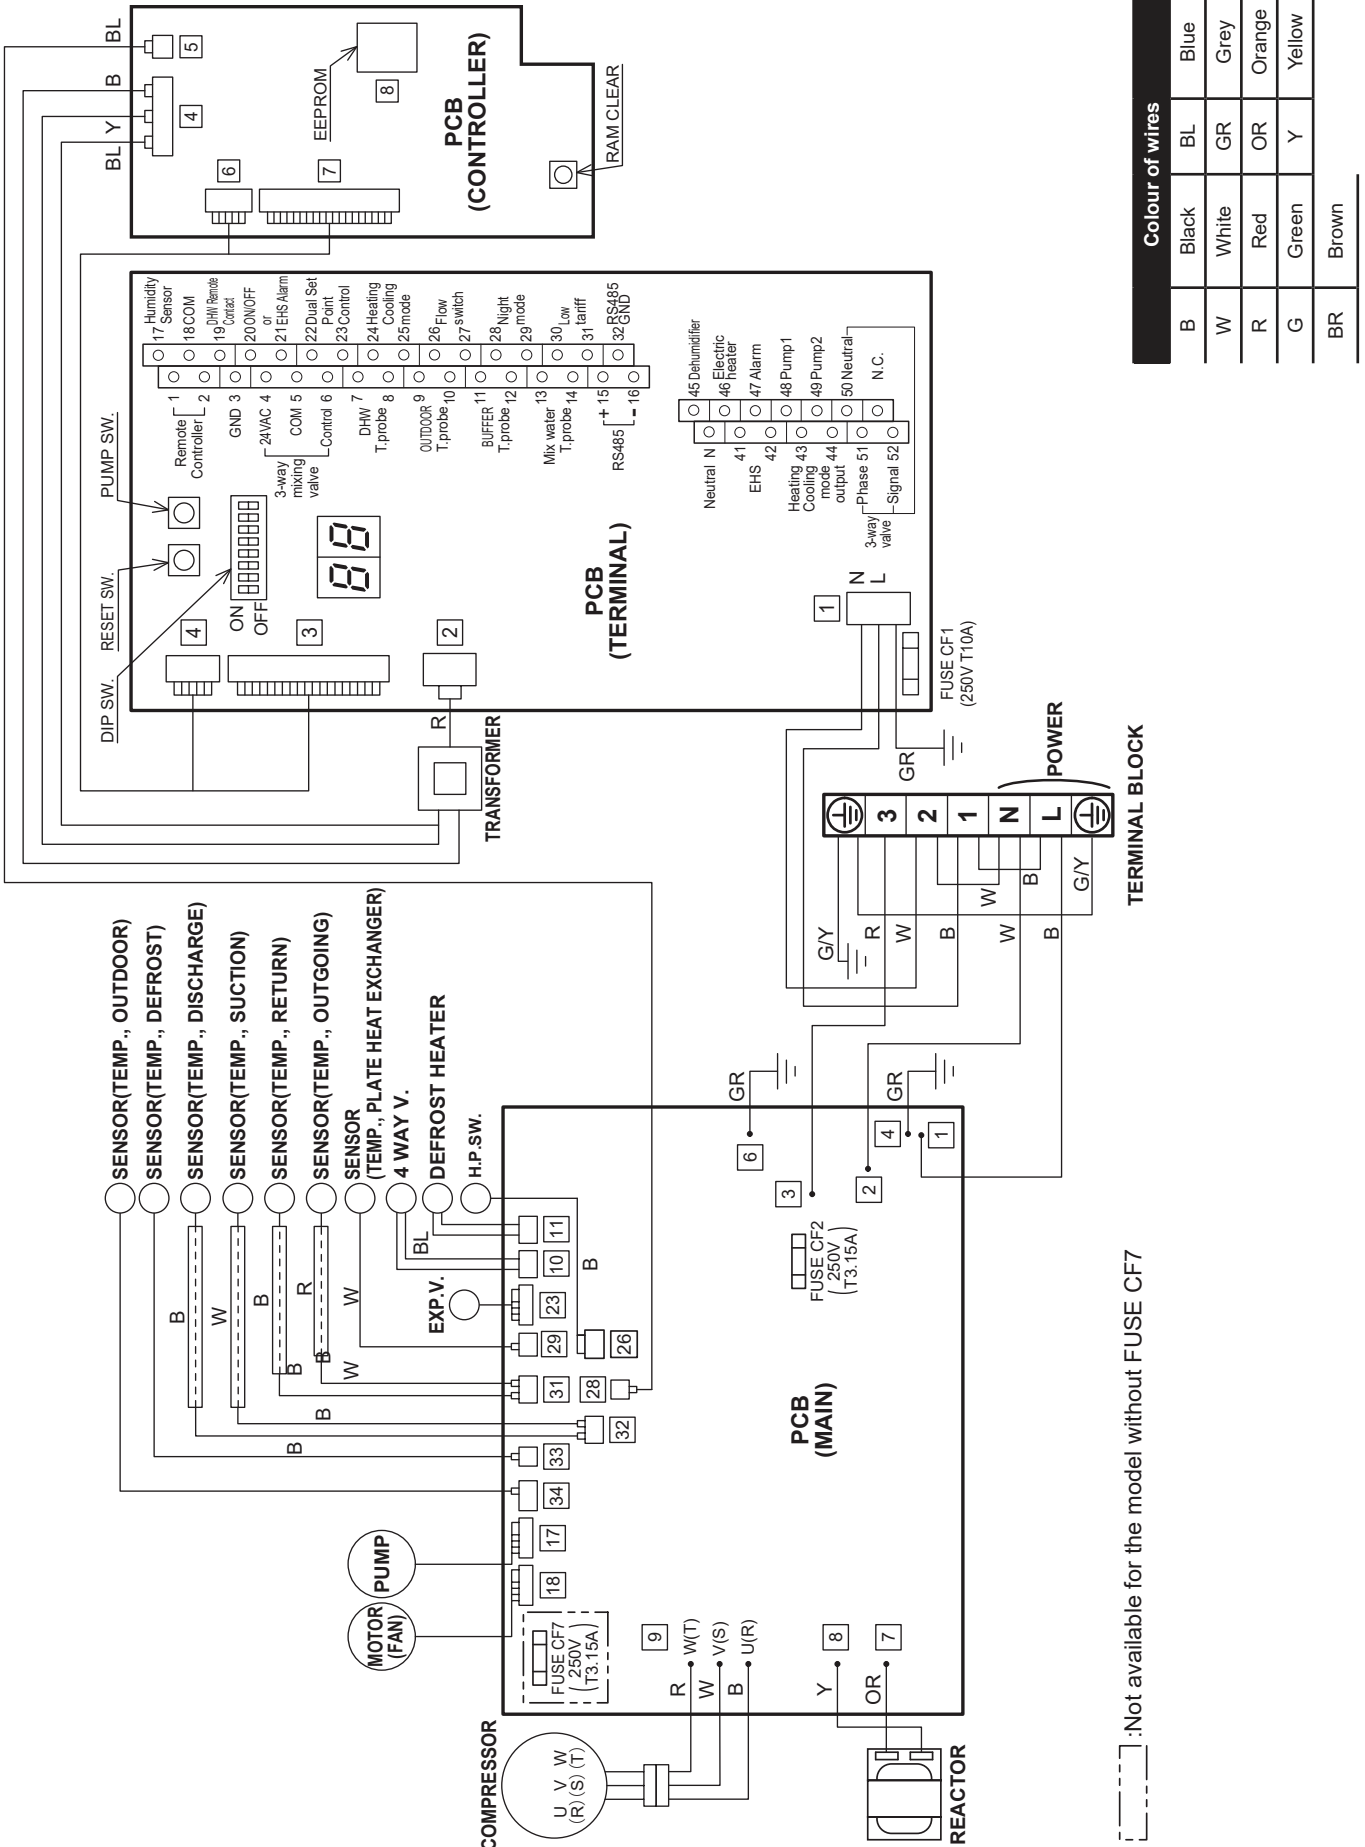

HPID6R32 and HPID10R32 circuit diagram

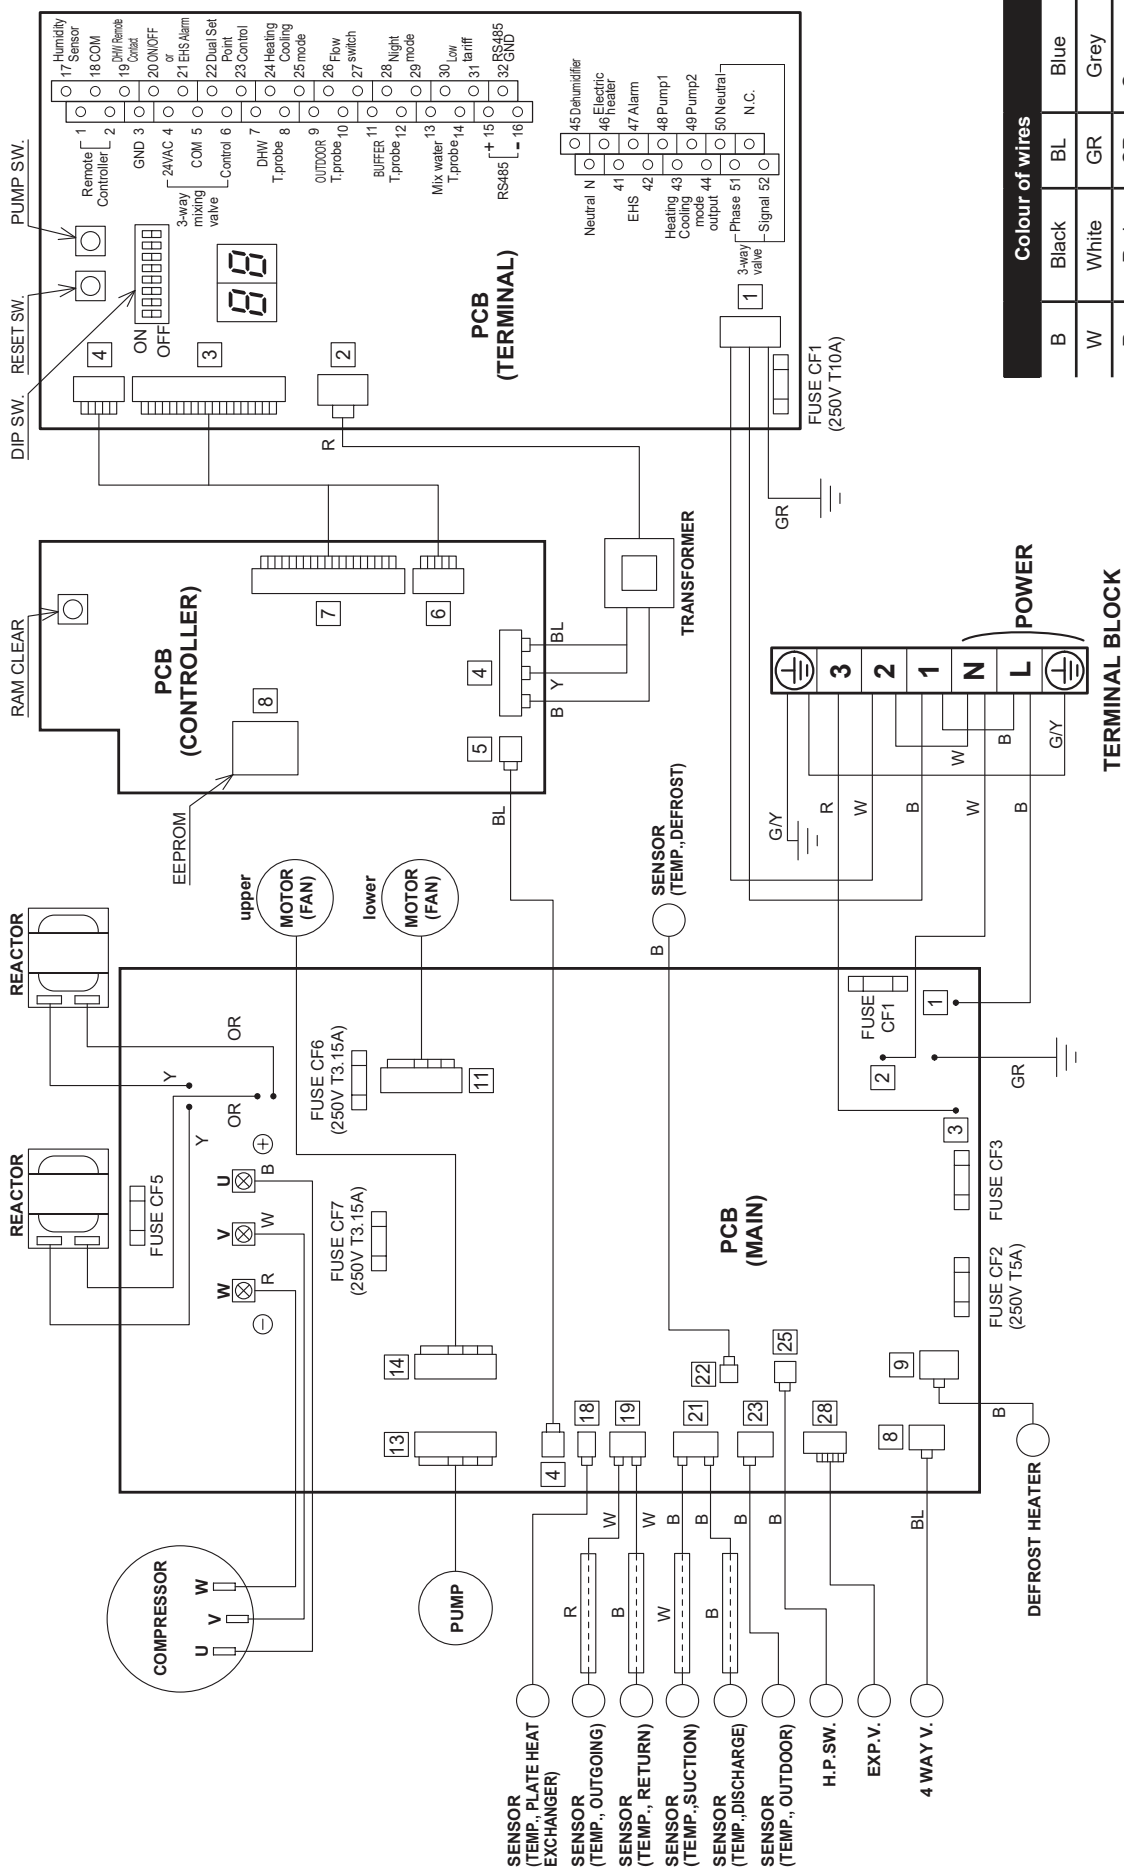

Colour of wires			
B	Black	BL	Blue
W	White	GR	Grey
R	Red	OR	Orange
G	Green	Y	Yellow
BR	Brown		

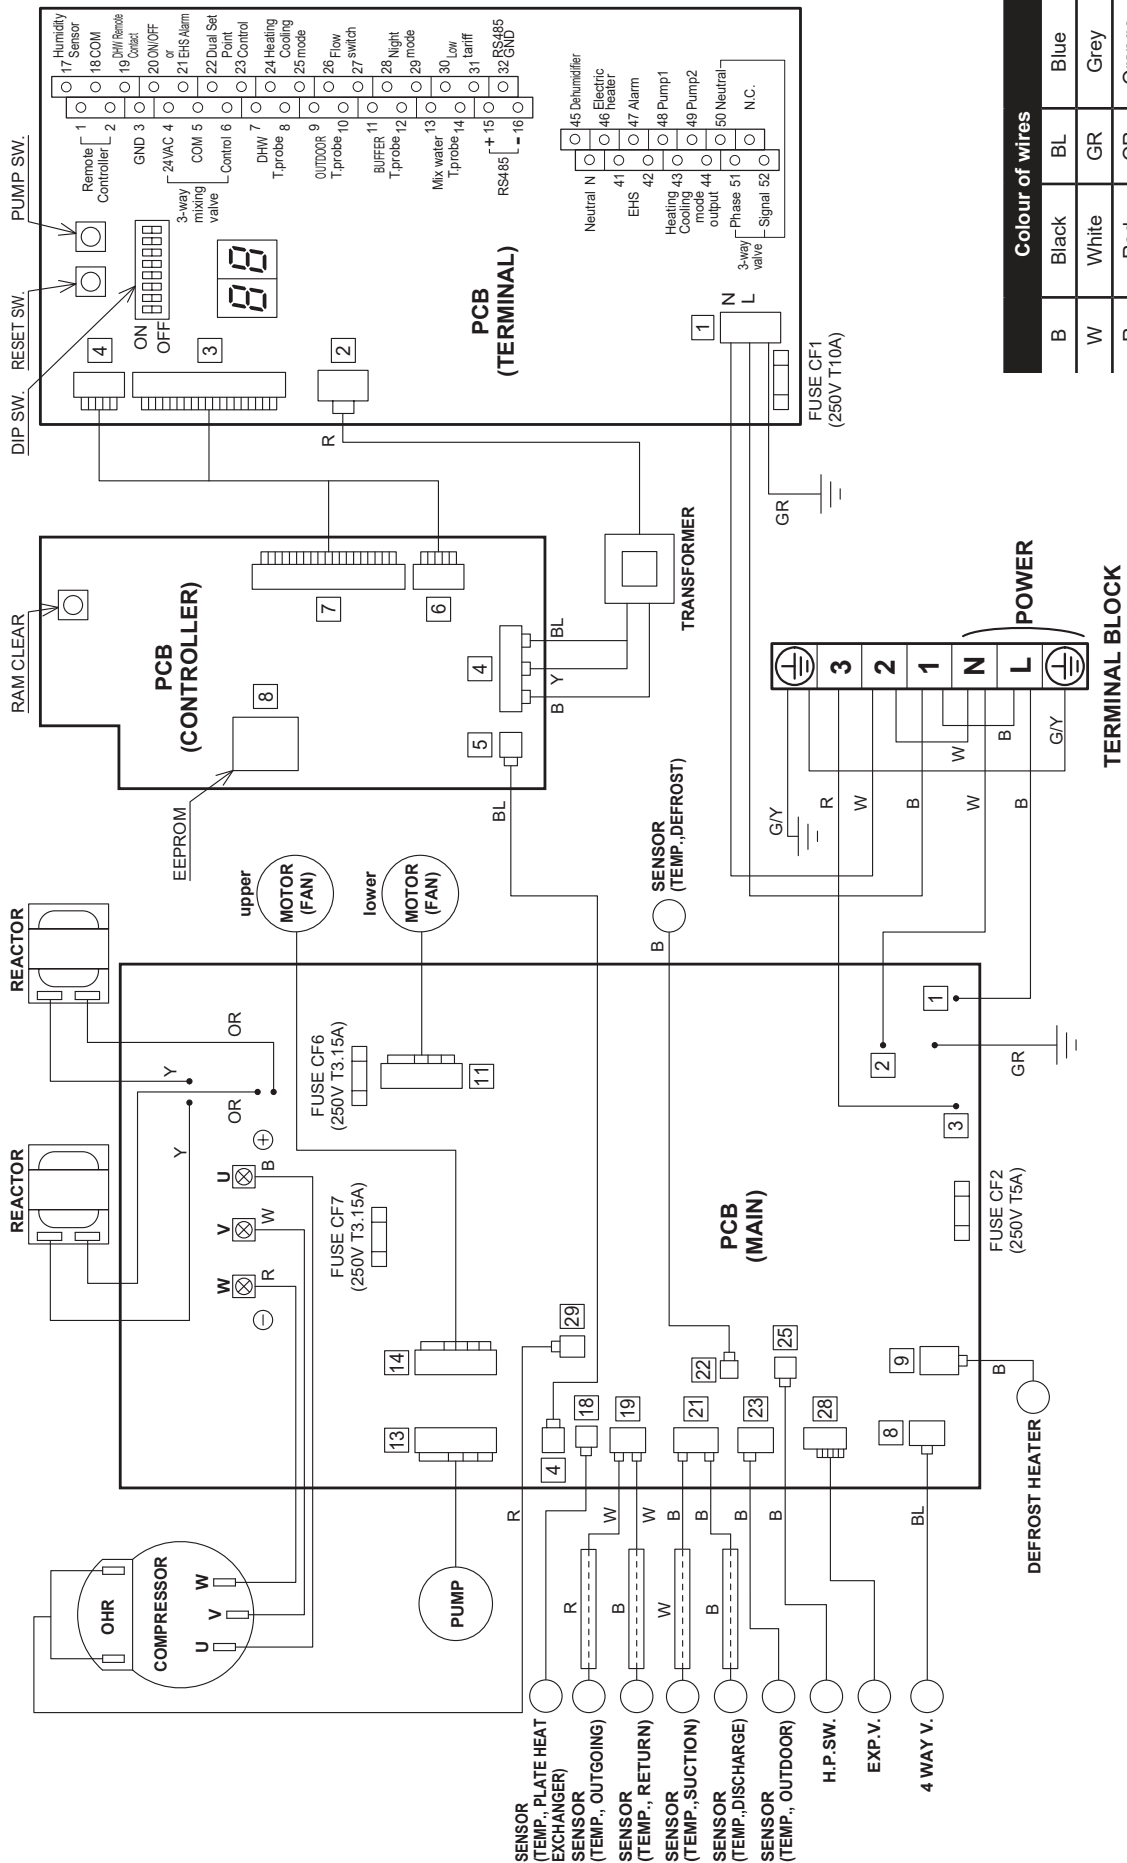

Colour of wires	
B	Black
W	White
R	Red
G	Green
BR	Brown
BL	Blue
GR	Grey
OR	Orange
Y	Yellow

HPID17R32 circuit diagram



# Appendix F Commissioning - Parameters Record

This section enables the installer/commissioning engineer to record details of any parameters that may have changed during commissioning.

Refer to Appendix D for full details of parameter settings.

Level	Parameter		Function description	Default	Value set on commissioning
	Group	Code			
I	21	00	Enable outgoing water set point 0=fixed set point 1=climatic curve	1	
I	21	01	Fixed outgoing water set point	45.00	
I	21	02	Maximum outgoing water temperature in Heating mode (Tm1)	45.00	
I	21	03	Minimum outgoing water temperature in Heating mode (Tm2)	30.00	
I	21	04	Minimum outdoor air temperature corresponding to maximum outgoing water temperature (Te1)	-4	
I	21	05	Maximum outdoor air temperature corresponding to maximum outgoing water temperature (Te2)	20.0	
I	31	01	DHW production priority setting 0=DHW is unavailable 1= DHW is available, and priority DHW over space heating 2= DHW is available, and priority space heating over DHW	1	
I	31	11	DHW Comfort set temperature	50.0	
I	31	12	DHW Economy set temperature	40.0	
I	31	21	Maximum time for DHW request	60	
I	31	22	Minimum time for space heating	15	
I	41	00	The heat pump turns ON/OFF based on 1=water set point	1	
I	41	11	Maximum frequency of night mode	80	
S	41	30	Maximum outgoing water set point in CH and DHW	55°C	
I	42	00	Type of configuration of main water pump 0=always ON 1=ON/OFF based on buffer tank temperature 2=ON/OFF based on detect cycles	0	
I	42	01	Time ON main water pump for detect cycle	3	
I	42	02	Time OFF main water pump	5	
I	42	03	Delay time OFF main water pump from OFF compressor	3	
I	42	11	OFF time for unblock pump function start	48	
I	42	12	Time ON main water pump for unblock pump function	5	
I	42	20	Type of operation of additional water pump 0=disable 1=depending on main water pump setting 2=depending on main water pump setting but always OFF when the DHW mode is activated 3=always ON, apart from if any alarms are activated or if the heat pump is in OFF mode	0	
S	43	00	Frost protection on room air temperature 0=disable 1=enable	1	
I	43	01	Start temperature of frost protection on room air temperature	14.0	
I	43	02	Hysteresis of room air temperature of frost protection	1.0	
S	43	10	Frost protection on outdoor air temperature 0=disable 1=enable	1	
I	43	11	Start temperature of frost protection on outdoor air temperature	4.0	
I	43	12	Hysteresis of outdoor air temperature	3.0	
I	43	14	Hysteresis of flow water temperature	3.0	
S	43	20	Frost protection on outgoing water temperature 0=disable 1=enable	1	

I	43	21	Start temperature of frost protection on flow water temperature	4.0	
I	43	22	Hysteresis of flow water temperature	3.0	
S	43	30	DHW storage frost protection 0=disable 1=enable	1	
I	51	07	Terminal 7-8 : DHW tank temperature probe 0=disable 1=enable	0	
I	51	11	Terminal 11-12: thermal store temperature probe 0=disable 1=enable	0	
I	51	19	Terminal 19-18 : DHW remote contact 0=disable (Remote controller only) 1=enable	1	
I	51	20	Terminal 20-21 : ON/OFF remote contact (CH) Alarm input 0=disable 1=ON/OFF remote contact	1	
I	51	28	Terminal 28-29 : Night mode 0=disable 1=enable	0	
I	51	30	Terminal 30-31 : Low tariff 0=disable 1=enable	0	
I	51	48	Terminal 48 0=disable 1=additional water pump	0	
I	51	50	Terminal 50-52 : DHW 3way valve 0=disable 1=enable	1	
Pump output setting		DIP SW5 - OFF DIP SW6 OFF Level 1 (maximum) DIP SW5 - ON DIP SW6 - OFF Level 2 (medium) DIP SW5 - OFF DIP SW6 - ON Level 3 (minimum)		Level 1	

# Notes



**GRANT ENGINEERING (UK) LIMITED**

Tel: +44 (0)1380 736920 Fax: +44 (0)1380 736991  
Email: [info@grantuk.com](mailto:info@grantuk.com) [www.grantuk.com](http://www.grantuk.com)